



Mounting instruction

Roof hoods





Roof hoods

H, HV, HU, HN, HF, VHL, HRR, HVR, LHR, HKOMR, TGR, TGKOMR

Assembly

H, HV and HF in Ø 400–1250; HRR and HVR in sizes 7–9 and HKOMR in sizes 2–14 are equipped with three or four wire eyelets to make lifting easier. The eyelets can be turned and even used as attachments to anchor the product.

An individual anchoring eyelet must not be subjected to forces in excess of 1,500 N.

Maintenance

The hoods normally don't require any maintenance but depending on the position, checks that leaves or other items are not blocking the flow of air may be necessary. Checks of the anchoring may also be recommended.

Connection scheme

To connect some of our roof hoods to the roof transition TGR, an adapter is needed.

The TGR is fixed to the roof with the profiles delivered with the TGR.

| | | | | |
|------------------------------|---------------------------------------|---|--|---|
| Roof hood | H HV HU HN HF | VHL | LHR | HRR HVR |
| | Hoods with circular connection | | Hoods with rectangular connection | |
| Hood to adapter | Screw or bolt | | Guiding profile | The hood is attached directly to the roof transition. – No adapter is needed. |
| Adapter | TGR-OA Ø80–315 Ø400–1250 | TGR-VHL Ø100–315 Ø400–500 | TGR-LHR | |
| Adapter to roof transition | Screw | | | |
| Roof transition | TGR | | | |
| Roof transition to connector | Guiding profile | | | |
| Connector | TGR-NA | The roof transition is attached directly to the duct. – No connector is needed. | | |
| Connector to duct | Screw, blind rivet or Lindab Click | | | |
| Duct | SR | LKR | | |