 
# TGR-LHR



### **Dimensions**




## **Description**


Roof adapter, upper connection.
Use for connecting roof hood LHR to roof transition TGR.

For more information see LHR.

#### **TGR**

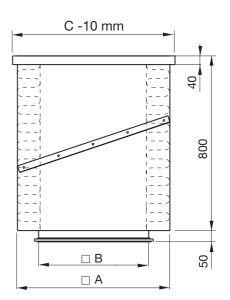

### **Ordering example**

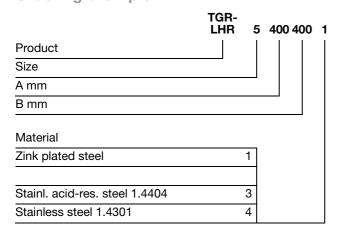



# TGR-LHR

#### **Connection scheme**

	H HV HU HN HF	VHL	LHR	HRR HVR
Roof hood				
	Hoods with circular connection		Hoods with rectangular	
			connection	
Hood to adapter	Screw or bolt		Guiding profile	The hood is
	TGR-OA	TGR-VHL	TGR-LHR	attached directly to the roof
Adapter	Ø80–315 Ø400–1250	Ø100–315 Ø400–500		transition. – No adapter is
				needed.
Adapter to roof transition	Screw			
	TGR			
Roof transition				
Roof transition to connector	Guiding profile			
Connector	TGR-NA	The roof transition is attached directly to the duct. –  No connector is needed.		
Connector to duct	Screw, blind rivet or Lindab Click			
Duct	SR LKR			

