



Lindab | for a better climate



Lindab **Fire System Pro**

Commissioning instructions



FireSystemPro

Content

1.0 Overview	3
1.1 Introduction	3
1.2 System features	3
1.3 System setup	4
1.4 PRO-M push buttons	5
1.5 PRO-M access codes	5
1.6 PRO-S light indications	6
1.7 ProLink™ application	6
1.8 Menu structure	7
2.0 Quick start guide	8
2.1 Choose language	8
2.2 Log in	8
2.3 Change password	8
2.4 Activate local fire dampers	9
2.5 Add PRO-S damper units to PRO-M	9
2.6 Add PRO-S damper units via ProLink™ app	10
2.7 Set section functionality in PRO-M	12
2.8 Section setup in PRO-M	13
2.9 Change damper setup via PRO-M	13
2.10 Activate SEF mode	14
2.11 Activate the Fire System Pro	15
3.0 Complete list of menu functions	16
3.1 Status Overview	16
3.2 System Setup	19
3.3 Settings	22
3.4 Manual/Auto	23
3.5 Access rights	24

Caution!

Read and understand the instruction before using the Lindab Fire System Pro and ensure that the installation complies with local safety regulations. Installation and maintenance of the system should only be carried out by qualified personnel. The manufacturer is not responsible for any eventual damage or injury caused by inadequate skills during installation, or through removal or deactivation of any security devices.

FireSystemPro

1.0 Overview

1.1 Introduction

Lindab Fire System Pro is a complete fire protection steering system that allows to feed, monitor and test up to 60 fire and/or smoke control dampers. Smoke detectors, temperature sensors, thermostat and fault panel can also be connected and monitored in the system.

The system is designed to only feed 24V actuators.

The commissioning instructions for the Fire System Pro should be used as a guide to the main features of the system and a basis for interface menu and configurations.

For more detailed information and help with customized system setups, please contact Lindab's technical support.

1.2 System features

The system consists of three main products

- PRO-M master unit
- PRO-S damper unit
- ProLink™ application



Figure 1: Lindab Fire System Pro

PRO-M

The PRO-M master unit accepts up to three fire dampers, two smoke detectors and one temperature sensor, which can be locally connected without any further component required.

The PRO-M can also manage a smoke evacuation system with smoke control dampers connected via damper units (PRO-S) and control a variable speed on the smoke

evacuation fan with a duct pressure differential transmitter (PRO-PDT).

The main function of the PRO-M is to continuously check all damper position switches and all other components, and to close fire dampers and open or close the smoke control dampers depending on the scenario.

Fire alarm signals for external systems can be read and possibly acknowledged by the PRO-M. An external alarm signal is sent to be read by external systems (e.g. to stop an AHU).

A supervisory BMS system can be connected to the PRO-M through Modbus and BACnet protocol.

PRO-S

 
The PRO-S is used as a damper unit in the Fire System Pro. It works together with the PRO-M master unit, where most of the setup for PRO-S is made.

The damper unit has two analogue inputs, two digital inputs, one analogue output and two digital outputs. The in- and outputs are used for e.g damper control, smoke detector, temperature sensors and VAV.

PRO-S communicates via Modbus. One terminal is used as +19 V DC supply voltage for a smoke detector.

ProLink™ application

The damper unit PRO-S is Bluetooth compatible. The ProLink™ application is available on Android and iOS and can be used to find and change name of the PRO-S damper units, change ModBus address and update the PRO-S software.




Press **HERE** to
read the wiring
instructions
for Fire
System Pro

FireSystemPro

1.3 System setup

Fire System Pro is a flexible steering system that gives full automatic fire and smoke protection, and can be customized and designed to handle various buildings and different scenarios.

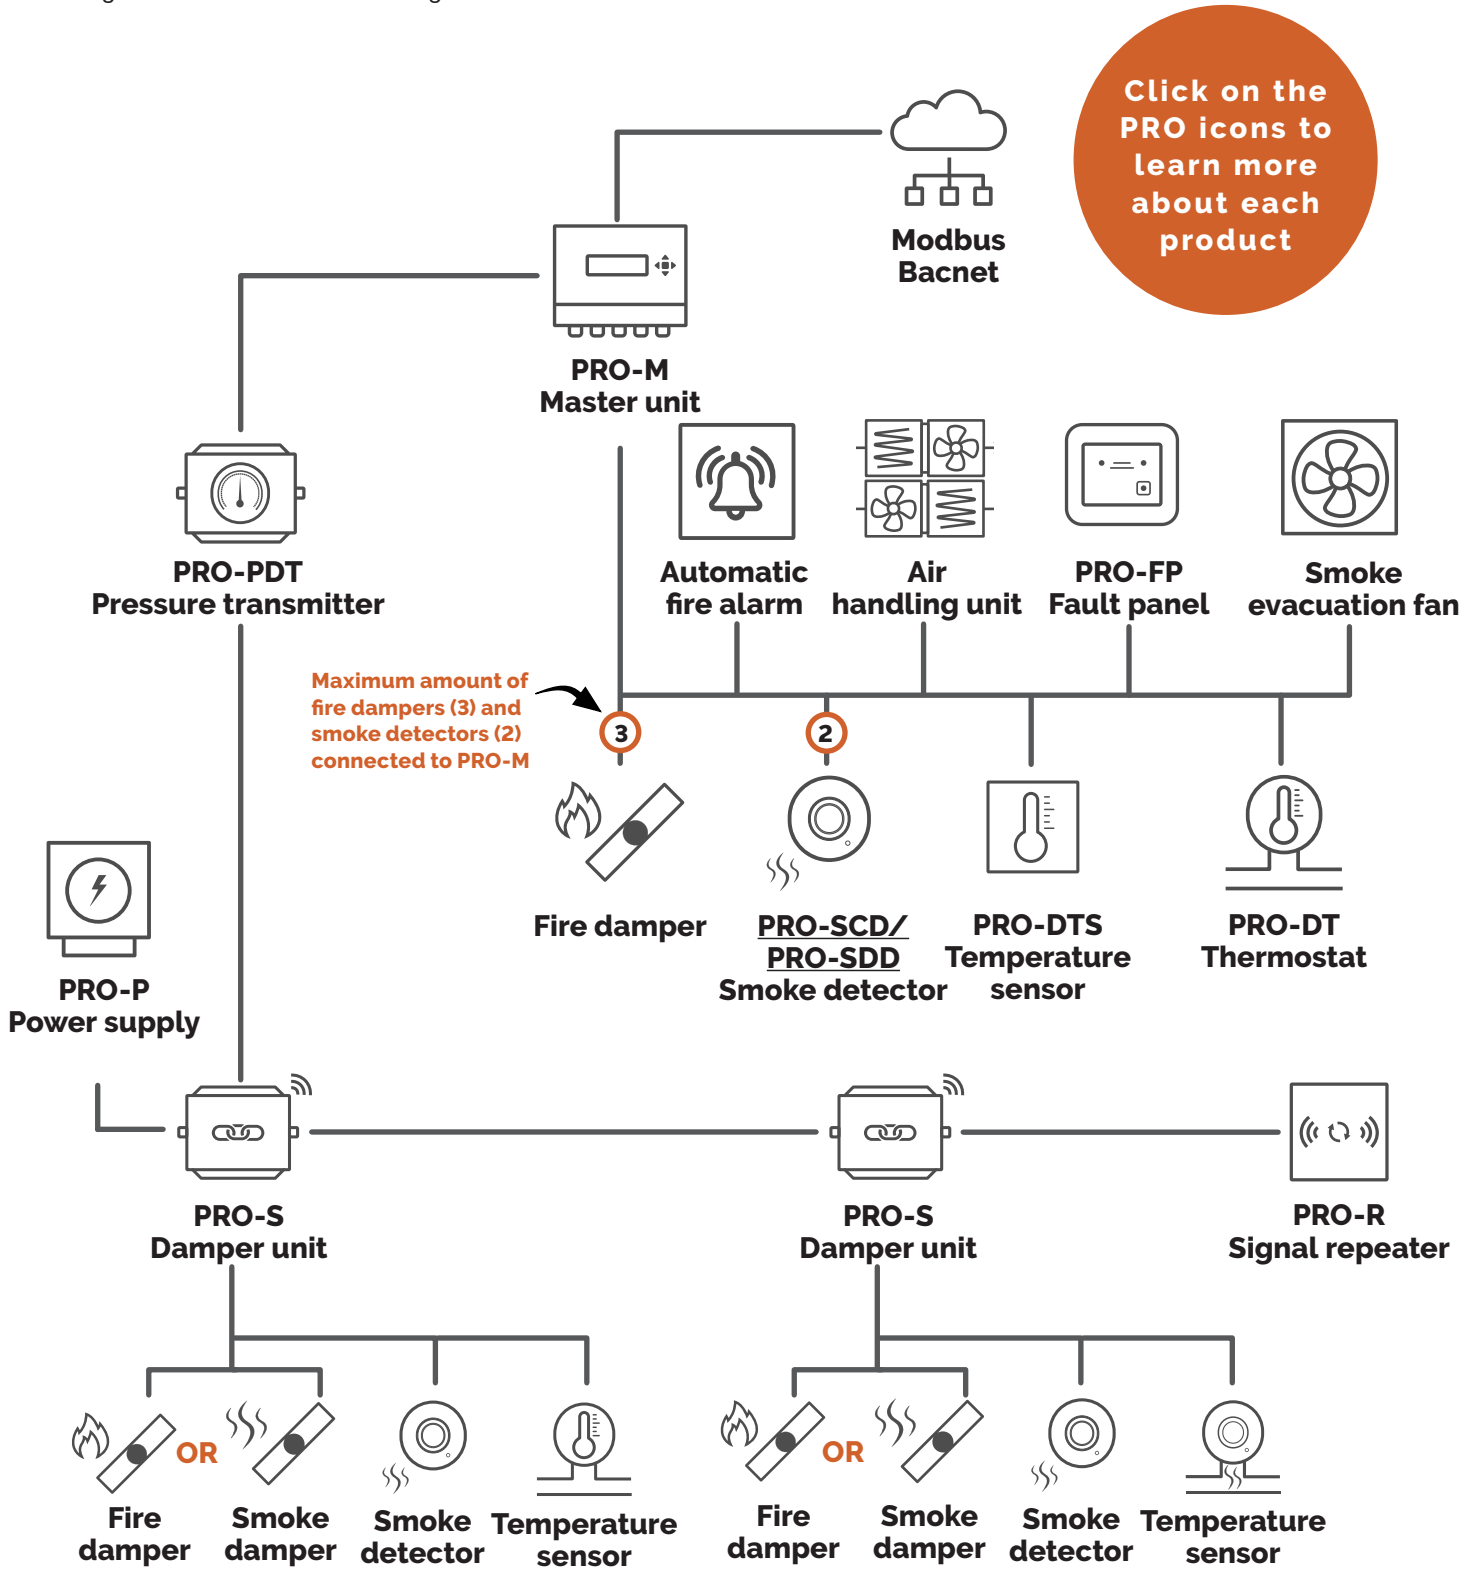

FireSystemPro

1.4 PRO-M push buttons

The Pro-M master unit has a pre-programmed controller with a backlit internal display. The different menus and settings are easily accessible and controlled by push buttons on the front of the unit.

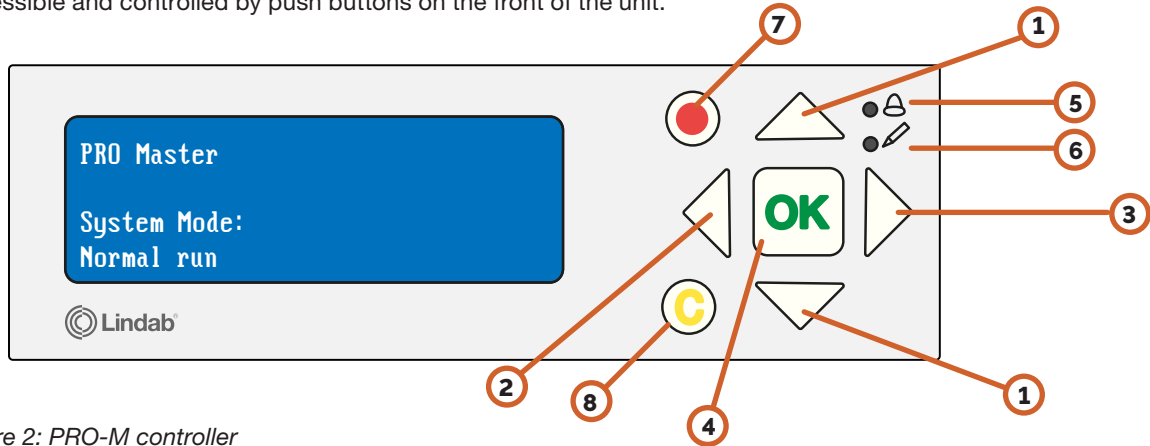


Figure 2: PRO-M controller

- ① “Up/Down” buttons: Used to navigate through menus and change values
- ② ”Back” button: Used to go back to the previous page
- ③ “Forward” button: Used to enter menu pages
- ④ “OK” button: Used to edit and confirm changed values
- ⑤ “Alarm”: LED light blinks in case of alarm
- ⑥ “Write”: LED light blinks when values can be changed on current page
- ⑦ Red button: Used to go directly to alarm acknowledgment page
- ⑧ C button: Used to exit value editing

1.5 PRO-M access codes

In order to access and enable particular operations and settings in the PRO-M master unit, a valid access code is required to be entered.

Admin - access code: 1111

- Status overview
- System Setup
- Settings
- Manual/Auto

Attention!

Change password after the first admin login

Service - access code 2222

- Service
- System Setup
- Manual/Auto

Operator - access code 3333

- Status overview
- Settings

FireSystemPro

1.6 PRO-S light indications

The PRO-S damper unit has two different LED lights to indicate status for communication and identification, see table 1.1. below

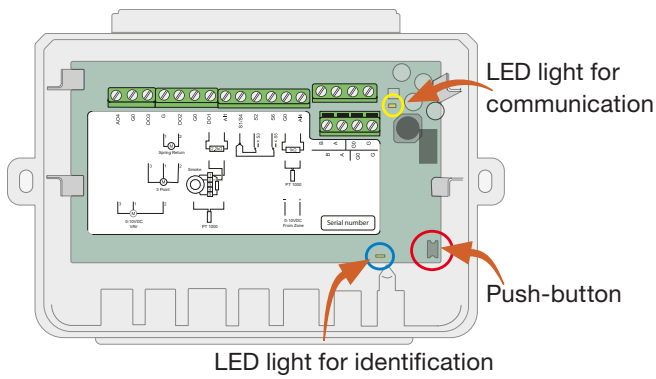


Figure 3: Inside PRO-S

Table 1.1: PRO-S led light indications

LED light	Colour	Pattern	Description
Identification	Blue	Steady	Bluetooth connection active
	Yellow	Steady	Service alarm
		Blinking	Unit identified
	Red	Steady	Alarm
		Blinking	Factory reset
	Green	Steady	Everything ok
	Magenta	Steady	Unit offline
White	Steady	Unit has address 1 and is ready to be addressed in the system	
		Blinking	The button has been pressed on the unit and it's waiting to be addressed
Communication	Yellow	Fast blinking	Communication in process

1.7 ProLink™ application

The ProLink™ application is available on Android and iOS and can be used to find a PRO-S unit, to change ModBus address and name of a unit, and update the PRO-S software. In order to access and enable particular operations and settings in the ProLink™ application, a valid password is required to be entered.

Administrator - password: Admin

- Update firmware
- Reset to default values
- Save and import local configuration
- Change password on all users
- Read values decided by application

Service - password: Service

- Reset to default values accepted by application
- Save and import local configuration
- Change password on this user level
- Read values decided by application

Operator - password: Operator

- Reset to default values accepted by application
- Save and import local configuration
- Change password on this user level
- Read values decided by application

Guest - password: N/A

- Read values decided by application

Attention!

Change password after the first admin login


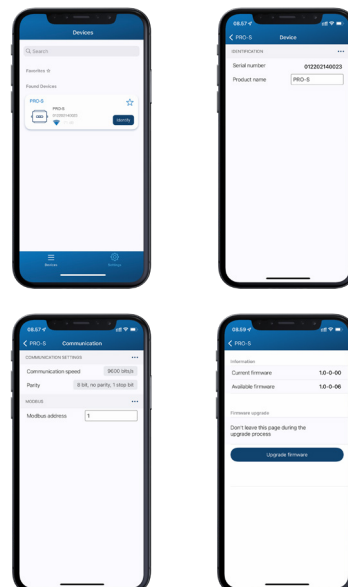


Figure 4: Screenshots from Lindab ProLink™ application

FireSystemPro

1.8 Menu structure

The programming functions and configurations of the Fire System Pro are made in the Pro-M controller. The interface menu is structured as followed:

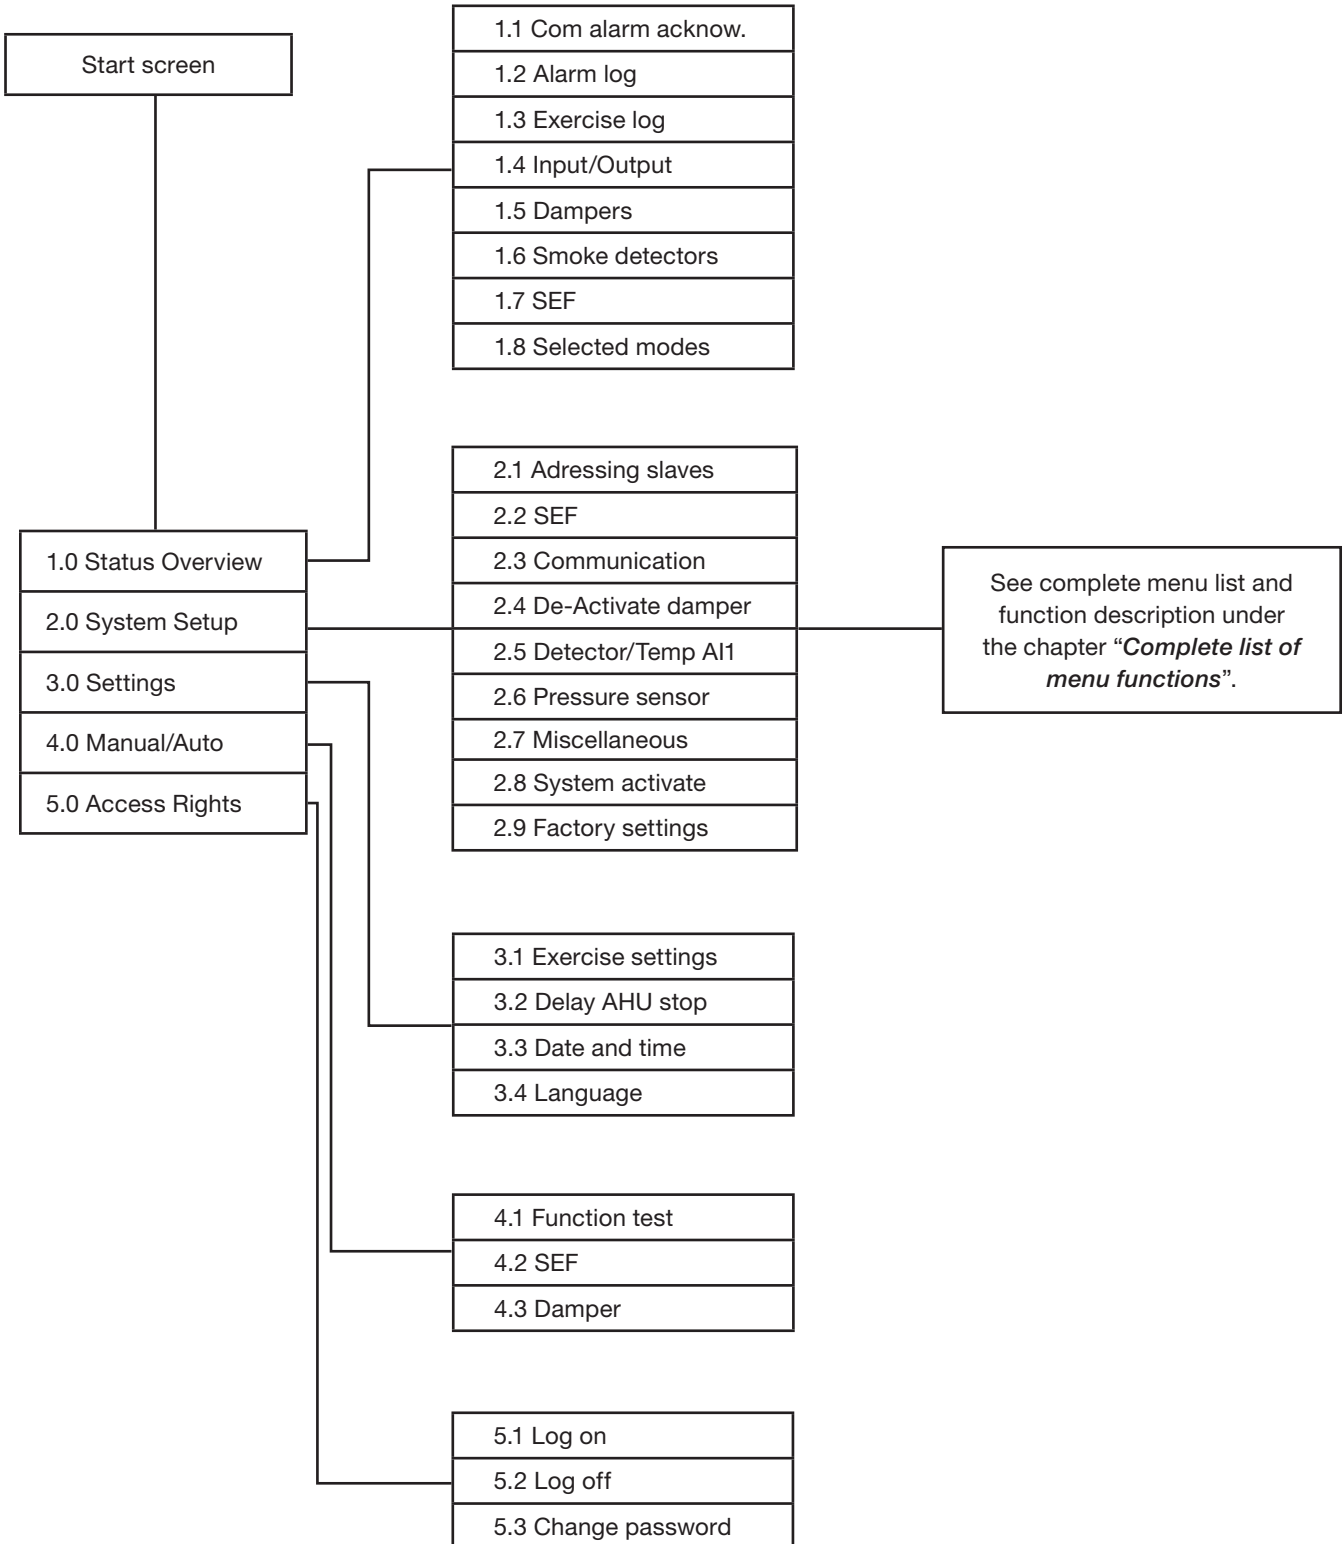

FireSystemPro

2.0 Quick start guide

This section provides you with guidelines to common settings and configurations to get the Fire System Pro running.

Note! Each guide starts from the main menu. To go back, press “back” button until you reach the main menu.

2.1 Choose language

1. Press “forward” button to find “Language



2. Press “OK” to edit language value



3. Press “down” to change language



4. Press “OK” to confirm



Language is now changed.

Note! Choose between English and Danish. Standard language is English.

2.2 Log in

1. Press “down” to find “Access rights”



2. Press “forward” to enter access rights



3. Press “forward” again to select log on



4. Press “OK” to start entering password



5. Use “up” and “down” arrows to set number



6. When first number is set, press “forward” to set next number (and so on).



7. Press “OK” when password is set.



You are now logged in.

Note! Cur. level on display changes according to user login and access right.

2.3 Change password

1. Press “down” to find “Access rights”



 
2. Press “forward” to enter access rights




3. Press “down” to find “Change password”



4. Press “OK” to start editing



 
5. Use “up” and “down” arrows to set level for password changes



6. “OK” to start entering New password



 7. Enter password (step 5-6 in 2.2 log in section)



8. Press “OK” when new password is set



Password is now changed.

FireSystemPro

2.4 Activate local fire dampers

1. Press "down" to find "System Setup"



 
2. Press "forward" to access "System Setup"



3. Press "down" to find "De-/Activate Damper"




4. Press "forward" to access "De-/Activate Damper"




5. Press "forward" to access "Damper numbers"



 6. "OK" to edit activated status (Yes/No)



 7. Press "down" to change activated status to YES



8. "OK" to confirm



Damper 1 is now activated

Note! Local dampers (connected to PRO-M) can only have address one (1), two (2) or three (3).

To activate damper number two (2) and three (3), follow step 5-8 above. Press "up" button to change damper numbers.

2.5 Add PRO-S damper units to PRO-M

1. Press "down" to find "System Setup"



 
2. Press "forward" to access "Addressing Slaves"




3. Press "forward" again to access "Add slaves"




4. Press forward again to access "Start slave number"



 5. Press "OK" to edit "Start slave number"




 6. Use "up" and "down" arrows to change "Start slave number"




Note! Lowest number for damper unit ("start slave number") is four (4).

 
7. "OK" to confirm slave number and edit "Start adding"



 8. Press "down" to change start adding value to YES



 9. "OK" to confirm "start adding"




Continue with next step on following page

FireSystemPro

Add PRO-S damper units (cont.)

10. Start running by pressing the "push-button" on all suitable damper units (PRO-S). LED lights up in color "Magenta" meaning that the unit is still offline.

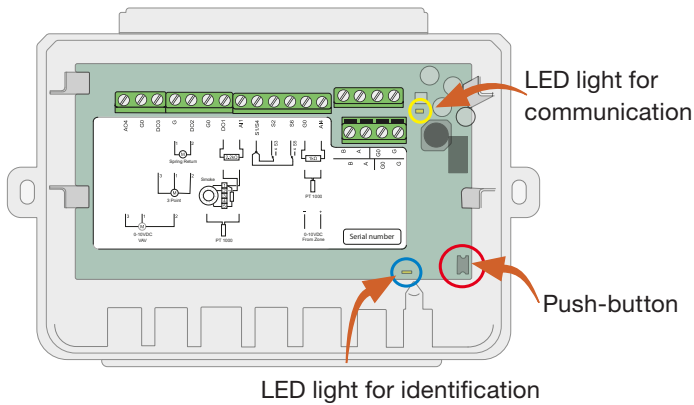

11. After running damper units, press "OK" to edit "Start adding"



12. Press "up" to change value to Yes



13. Press "OK" to confirm.



Note! PRO-S LED light should light up in color green to identify that that the damper unit is connected.

14. When all damper units are connected, press "up" to change start adding value to NO



15. Press "OK" to confirm status




All PRO-S damper units should now be added


Note! The "Start slave number" on the screen should have increased accordingly with the number of PRO-S that have been added. In the example above, we have added 26 damper units (up to address 29) meaning that the next available address is number 30.

2.6 Add PRO-S damper units via ProLink™ app

1. Open Lindab ProLink™ application
2. Click "devices" and identify one of the PRO-S damper units

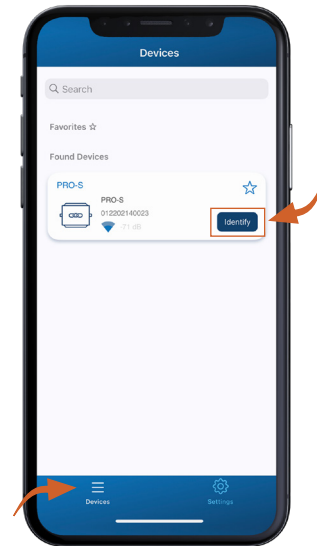

3. Log in with the given credentials

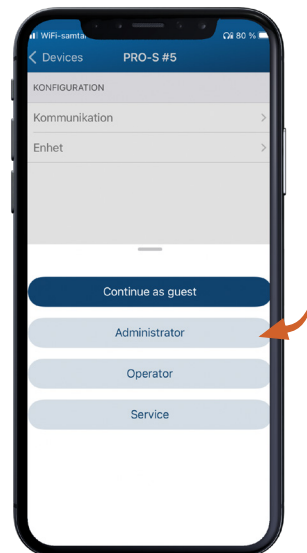


Continue with next step on following page

FireSystemPro


4. Access "communication" and set modbus address according to requirements.

Note! Lowest modbus address for PRO-S is four (4)

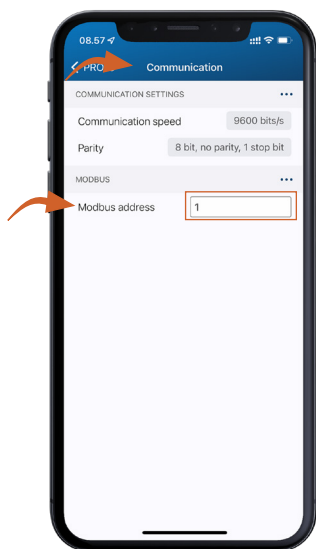


Note! If you want to add damper units in different sections in the system, it is important that they are in line in the modbus address, i.e. address 1-10 = section 1, address 11-20 = section 2 and so on.

5. **Optional:** It is also possible to change the name of the unit, for example to specify where it is located.

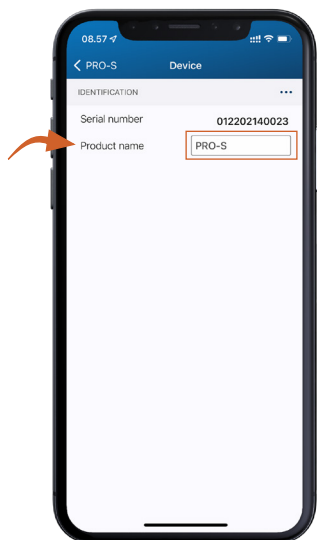

6. Confirm changes

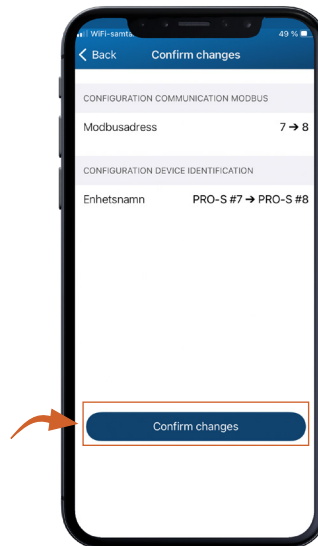

Attention! Repeat the steps for other PRO-S damper unit. When all units are identified and addressed, go to the next step.

7. In the PRO-M master unit, press "down" to find "System Setup"



8. Press "forward" to access "System Setup"



 
9. Press "forward" to access "Addressing slaves"



10. Press "down" to "Find Addressed slaves"



11. Press "forward" to access "Find Addressed slaves"



Continue with next step on following page

FireSystemPro

12. Press "OK" to edit "Start" status (Yes/No)



13. Press "up" to change status to YES



14. "OK" to confirm status



15. Wait until running status is 100%



16. Press OK to confirm and stop running.



 
PRO-S damper units should now be identified and addressed in the system

2.7 Set section functionality in PRO-M


1. Press "down" to find "System Setup"



2. Press "forward" to access "System setup"



 3. Press "down" to find "Miscellaneous"



4. Press forward to enter "Miscellaneous"



5. Press "down" to find "Section containment"



6. Press "forward" to enter "Section containment"



7. "OK" to start edit value for "Section containment"



8. Press "up" to change value to YES



9. Press "OK" to confirm value for "Section containment"



10. Press "forward" to set "Number of sections for full alarm"



11. Press "OK" to edit "Number of sections for full alarm"



12. Use "up" and "down" arrows to change "Number of sections for full alarm"



13. Press "OK" to confirm



Sections are now added and function set for the system

Note! "Number of section for full alarm" indicates the number of sections in alarm mode, in order to close the whole system. For example, if you choose two (2) as number of section for full alarm, and you have four (4) sections in the system, all four sections will close if two sections are in alarm mode.

 
FireSystemPro

2.8 Section setup in PRO-M


1. Press "down" to find "System Setup"



2. Press "forward" to access "System setup"



 3. Press "down" to find "Miscellaneous"



4. Press "forward" to access "Miscellaneous"



 
5. Press "down" to find "Section tools"




6. Press "forward" to access "Section tools"



7. Press "forward" again to access "Set same section"



 
8. Press "OK" to start editing modbus address for "Start"




9. Use "up" and "down" arrows to change "Start" number of modbus address



 10. Press "OK" to confirm "Start" number



 11. Use "up" and "down" arrows to change "Stop" number of modbus address




12. Press "OK" to confirm "Stop" number




13. Use "up" and "down" arrows to change number of "Sections"



 
14. Press "OK" to confirm "Section"



 15. Press "down" to changes status of "Set now" to Yes



 16. Press "OK" to confirm "Set now" status



Setup for section 1 are now done

 
Note! Repeat the steps above to set more sections for other PRO-S damper units (modbus addresses) in the system.

2.9 Change damper setup via PRO-M

1. Press "down" to find "System Setup"




2. Press "forward" to access "System Setup"



3. Press "down" to find "De-/Activate Damper"



 4. Press "forward" to access "De-/Activate Damper"




Continue with next step on following page


FireSystemPro

Section setup in PRO-M (cont.)

 5. Press "OK" to start edit "Select slave number"



 6. Use "up" and "down" arrows to change "slave number" to edit



Tips! Use the ProLink™ application to see modbus address applied for a specific PRO-S unit. To know which PRO-S to choose, checkup the serial number for the unit in the ProLink™ app and control it with the identification number inside the PRO-S unit.

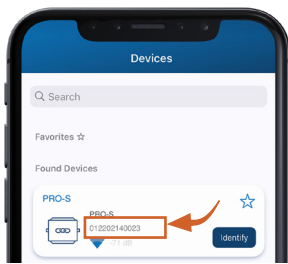


Figure 5: ID number for PRO-S in ProLink™ app


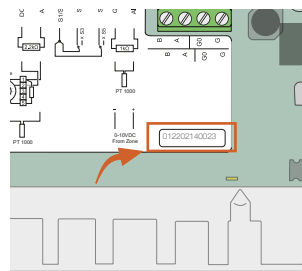


Figure 6: ID-number for PRO-S inside the unit

 7. Press "OK" to confirm "slave number"




8. Press "forward" to edit "De-/Activate Damper"



9. Press "OK" to start edit status for "Damper"



 
10. Use "up" and "down" arrows to change "Damper" to desired setup




11. Press "OK" to confirm setup for damper and set section for damper



 12. Use "up" and "down" arrows to change "section" number if needed



 13. Press "OK" to confirm or change section for the damper



Damper setup and section is now changed for selected damper unit

2.10 Activate SEF mode

 
1. Press "down" to find "System Setup"



2. Press "forward" to enter "System Setup"



3. Press "down" to find "SEF"



4. Press forward to enter "SEF" mode



5. Press "OK" to edit "SEF" mode



6. Use "up" and "down" arrows to change to desired SEF mode.



Continue with next step on following page

FireSystemPro

SEF mode (cont.)

7. Press "OK" to confirm SEF mode.



 
8. Press "up" to activate AFA in system (fire panel).



9. Press "OK" to confirm AFA system activation




10. Press "down" to set points and setups for SEF



11. Press "back" to go back to "System Setup"



 12. Press "down" to find Pressure sensor"



13. Press "forward" to enter "Pressure sensor"



14. Press "OK" to edit "Pressure sensor enabled"



15. Press "up" to change status for "Pressure sensor enabled" to YES



16. Press "OK" to confirm AFA system activation



 
SEF mode is now setup

2.11 Activate the Fire System Pro

1. Press "down" to find "System Setup"



2. Press "forward" to enter "System Setup"



3. Press "down" to find "System activate"



4. Press "forward" to enter "System activate"



5. Press "OK" to edit "Activate System"



6. Press "up" to change status to RUN



5. Press "OK" to confirm status for "Activate System"



The Fire System Pro is now activated and running

FireSystemPro


3.0 Complete list of menu functions

Following is a complete list of menu options, including a function description


3.1 Status Overview

The status overview menu (1.0) shows status for different components of the system


3.1.1 Communication alarm acknowledge

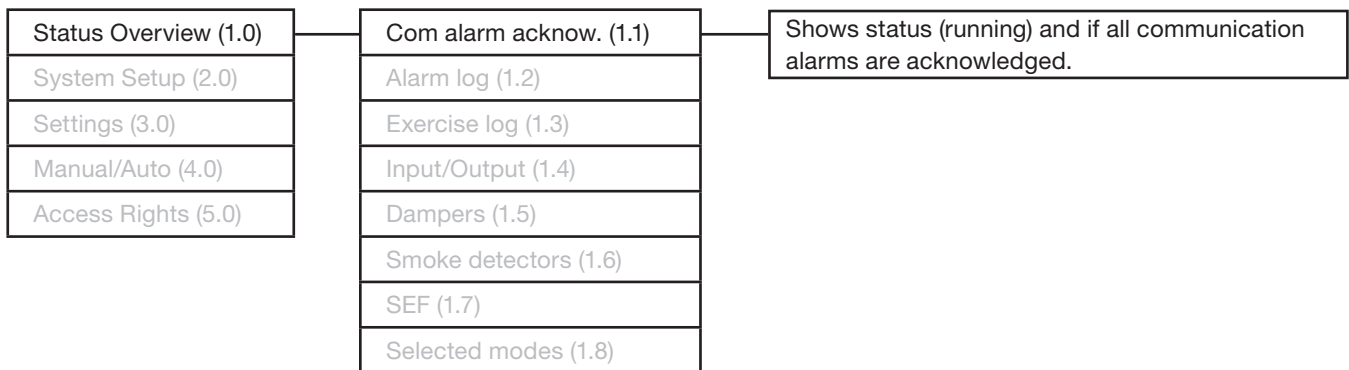

3.1.2 Alarm log

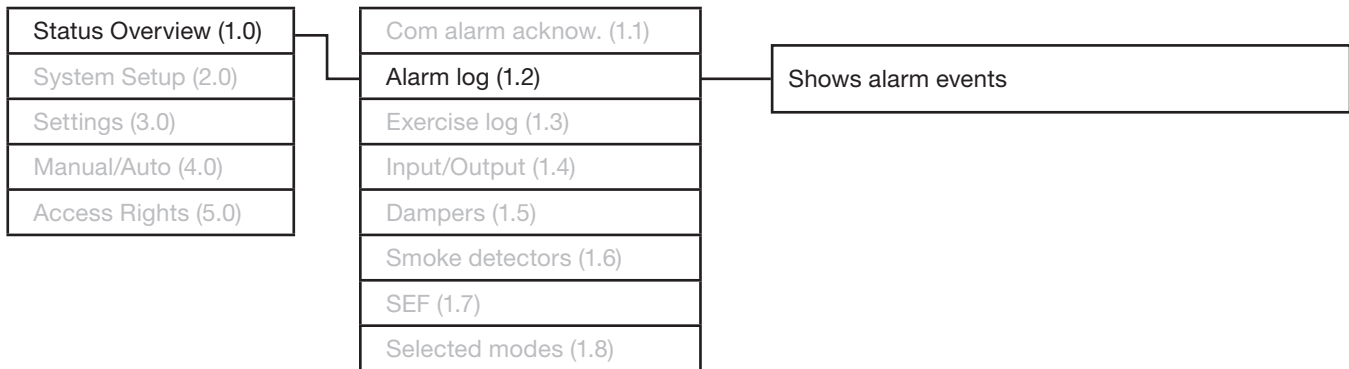


3.1.3 Exercise log

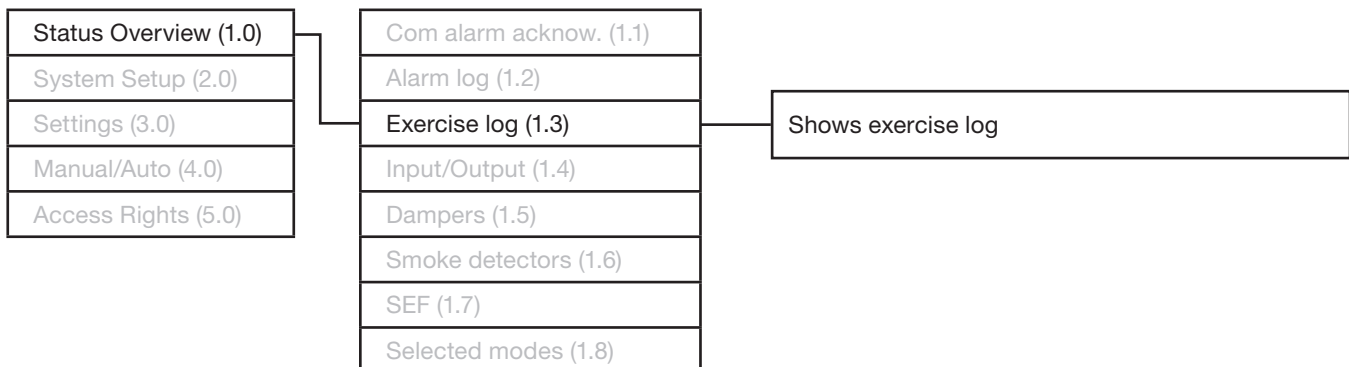


FireSystemPro


3.1.4 Input/Output

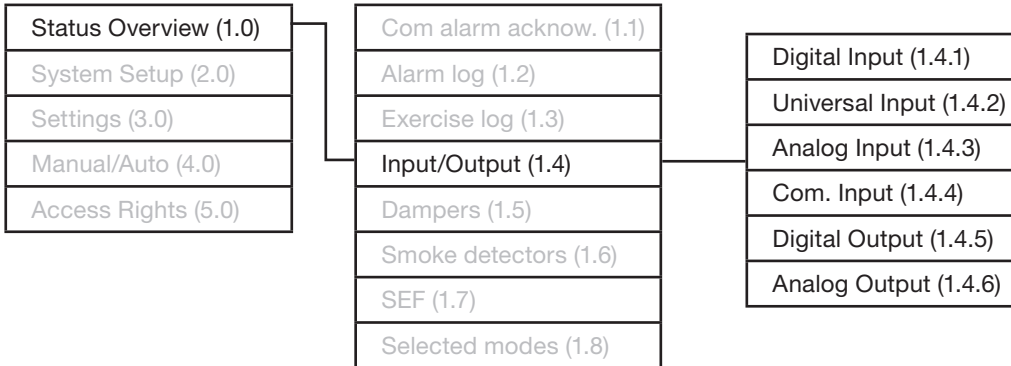

3.1.5 Dampers

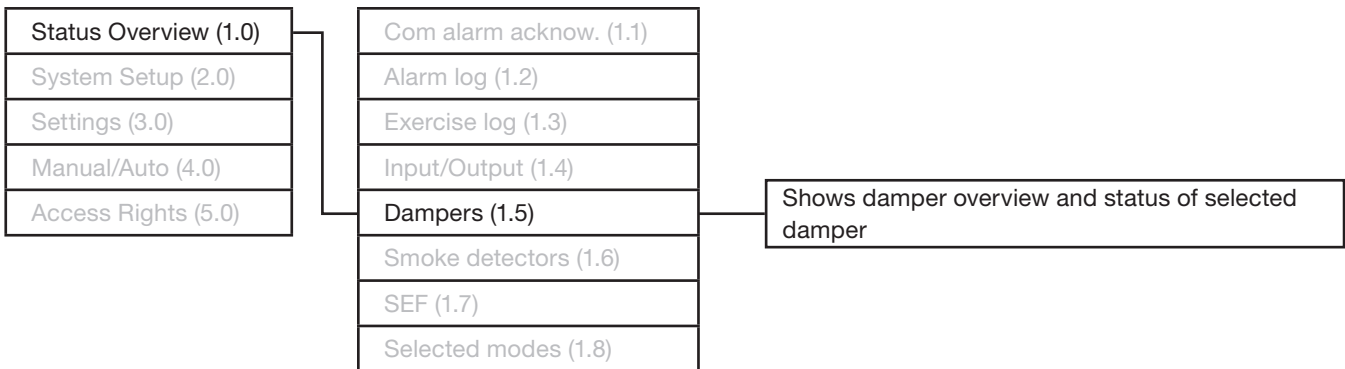


3.1.6 Smoke detectors

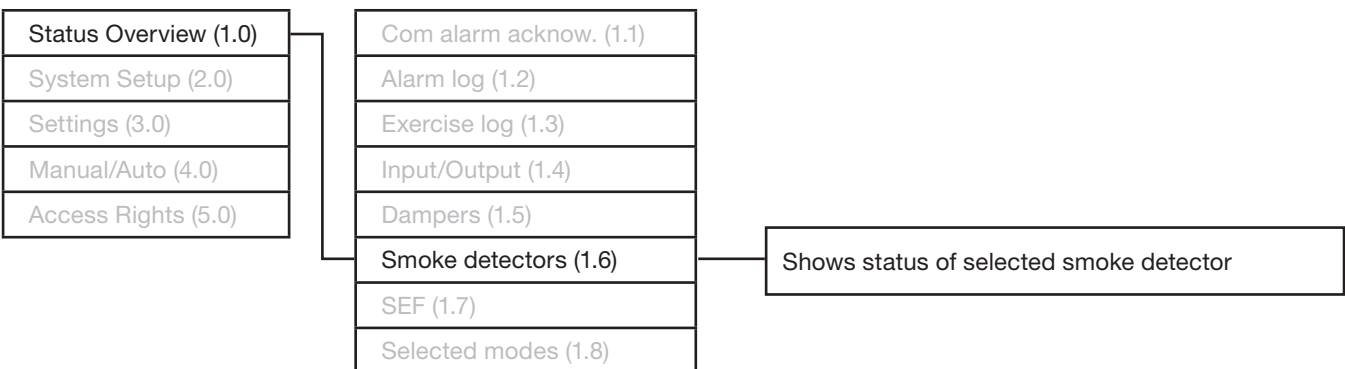


FireSystemPro

3.1.7 SEF

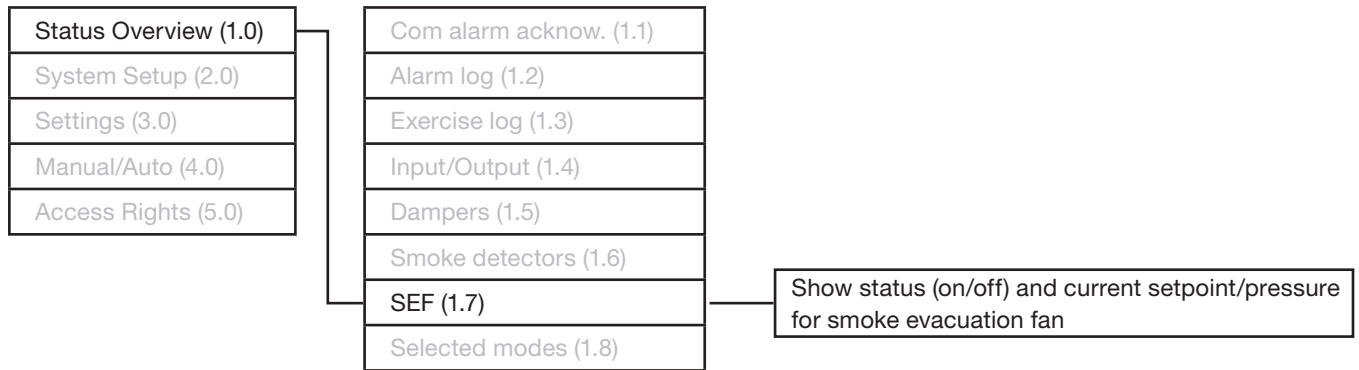

3.1.8 Selected modes

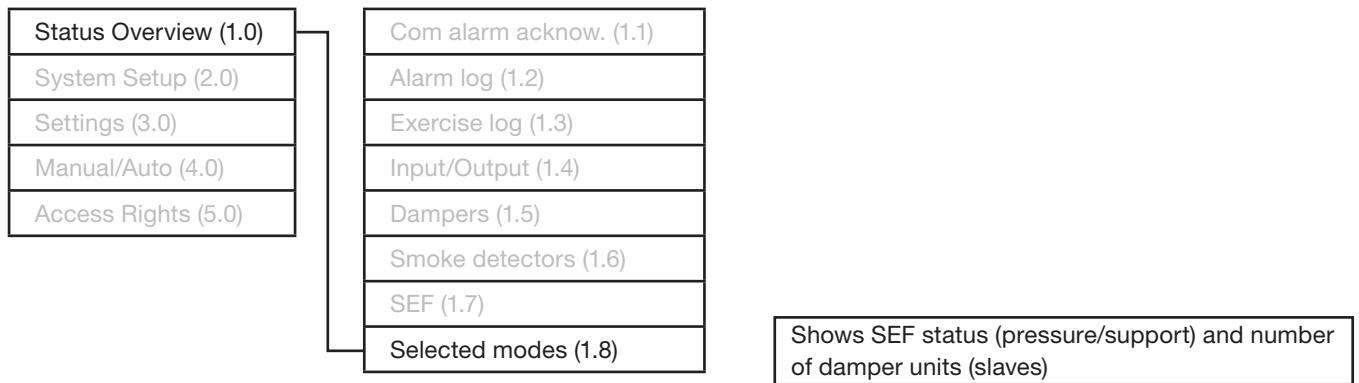


FireSystemPro


3.2 System Setup

Configurations and custom compositions are made in system setups


3.2.1 Adressing slaves

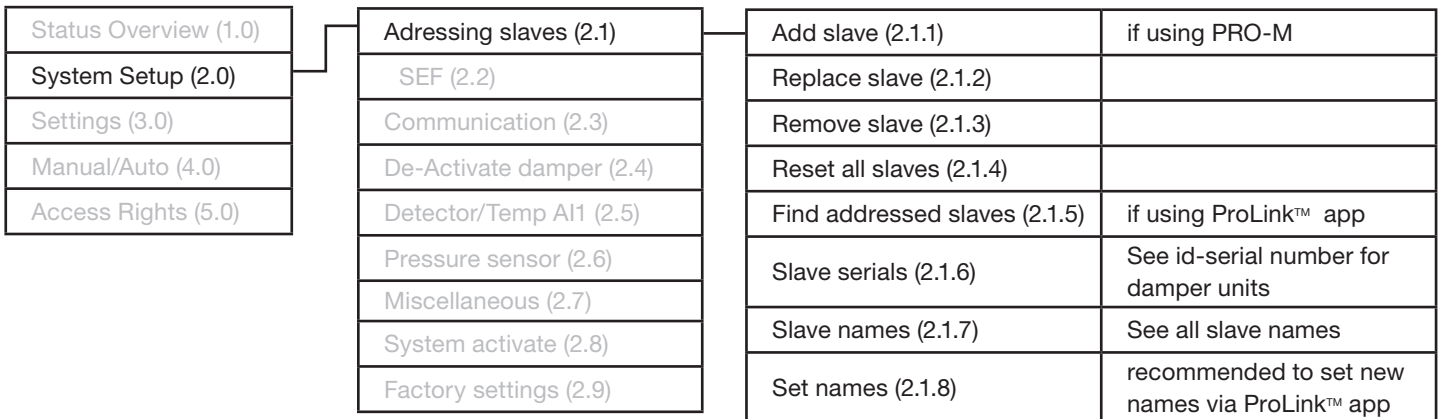

3.2.2 SEF

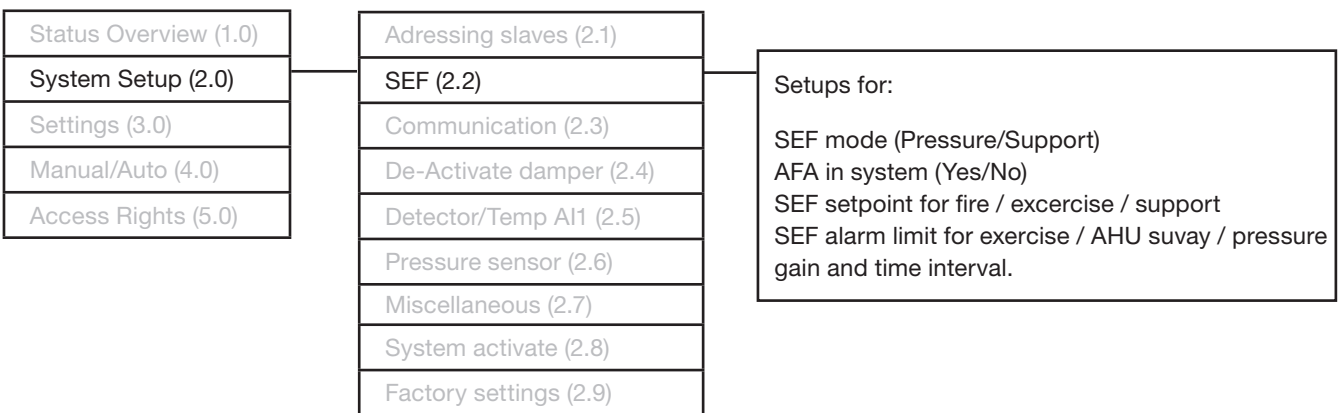


3.2.3 Communication

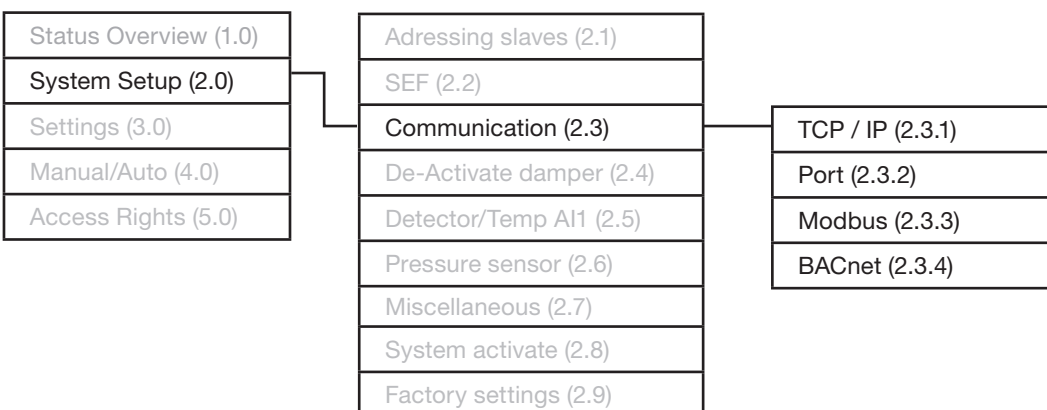


FireSystemPro


3.2.4 De-/activate damper

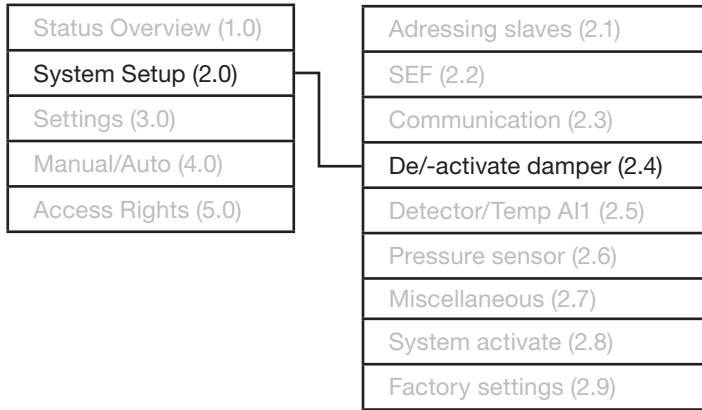

3.2.5 Detector / Temp AI1

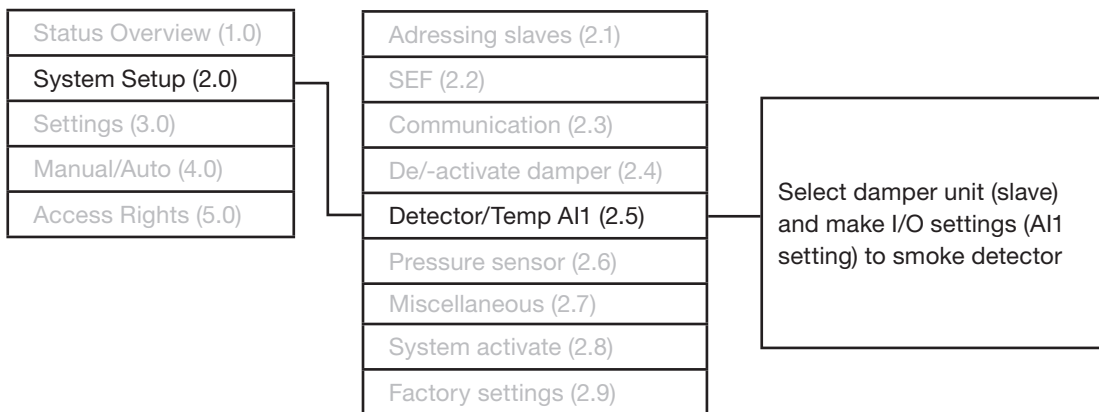


3.2.6 Pressure sensor

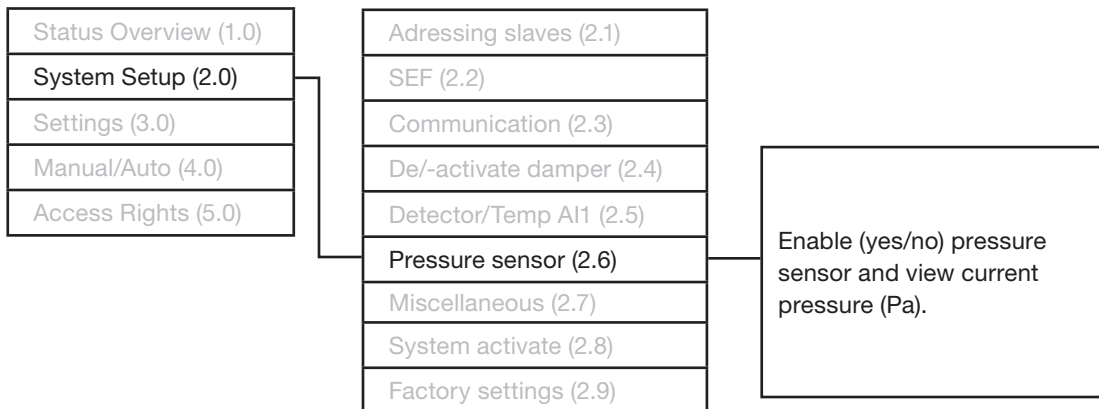


FireSystemPro


3.2.7 Miscellaneous

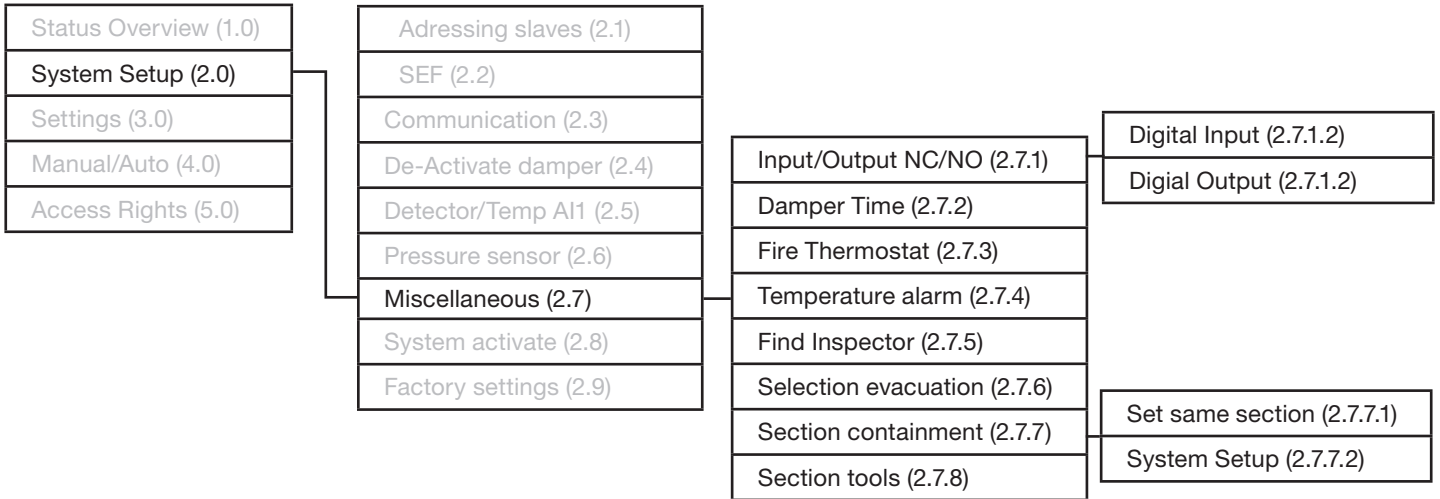

3.2.8 System active

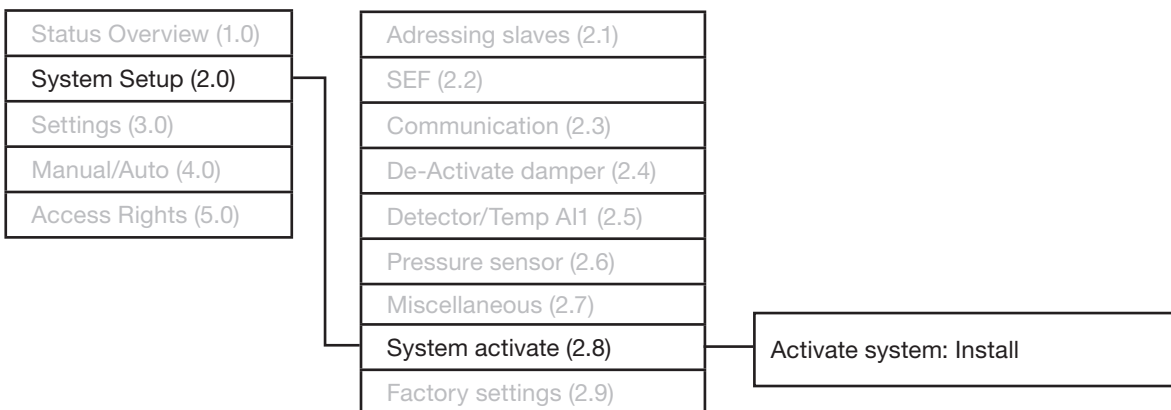

3.2.9 Factory settings

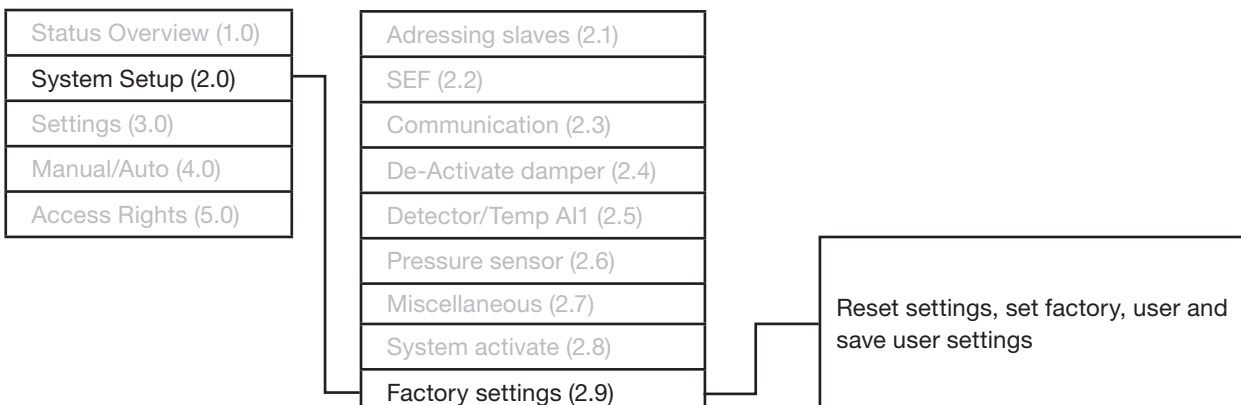


FireSystemPro


3.3 Settings

Exercise settings, delay AHU stop, date, time and language.


3.3.1 Exercise settings

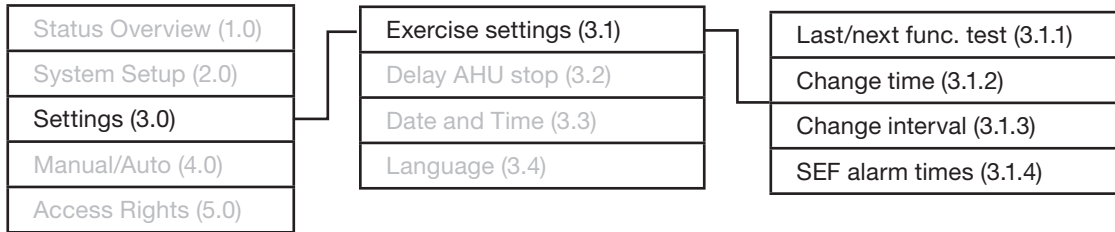


3.3.2 Delay AHU stop

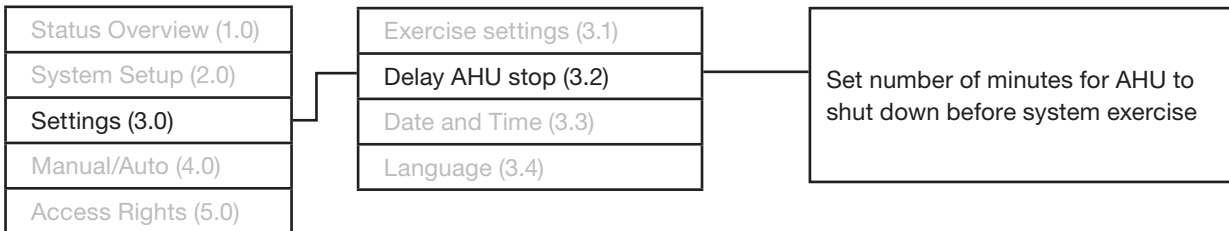

3.3.3 Date and Time

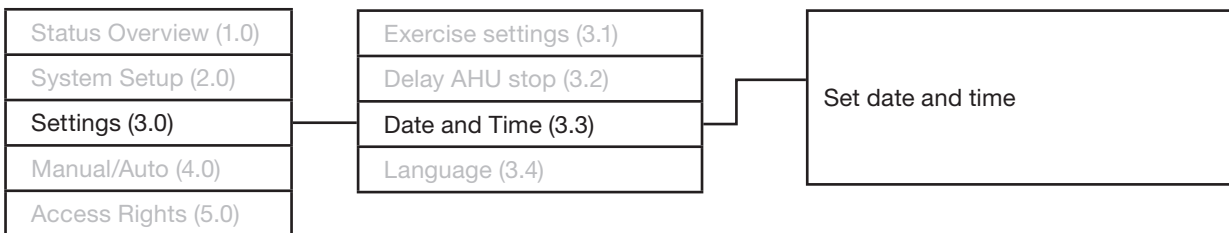

3.3.4 Language

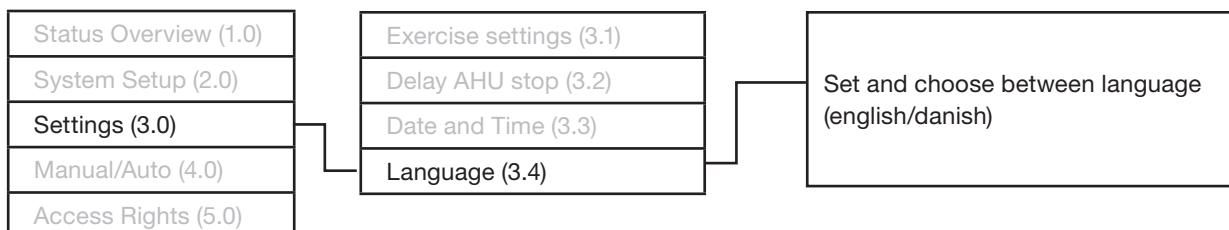


FireSystemPro


3.4 Manual/Auto

For customized setups


3.4.1 Function test

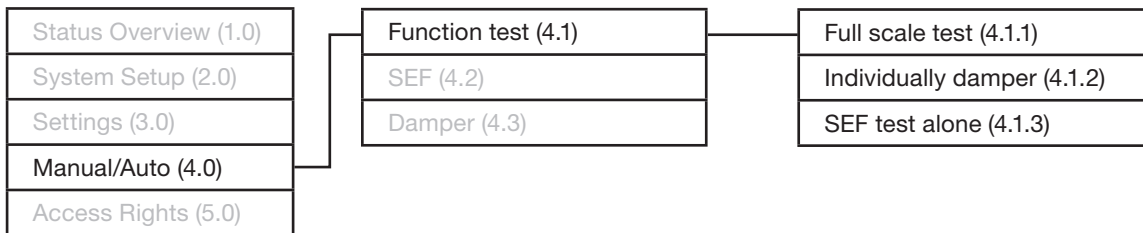

3.4.2 SEF

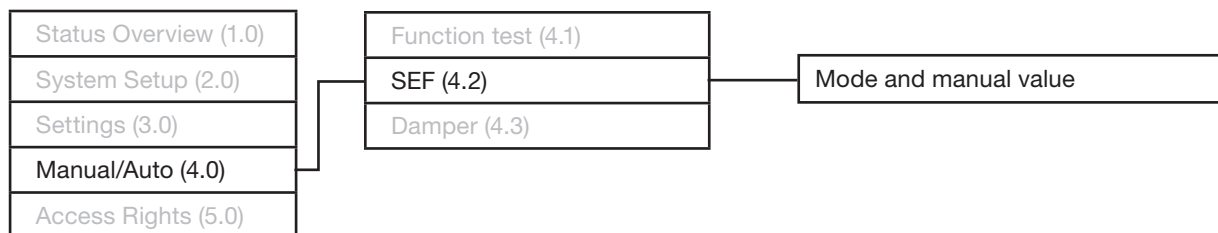

3.4.3 Damper

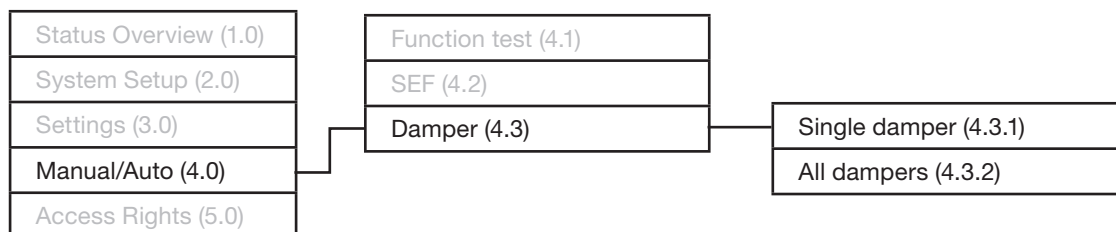


FireSystemPro


3.5 Access rights

Log on/off to the system and change password for different levels.


3.5.1 Log on

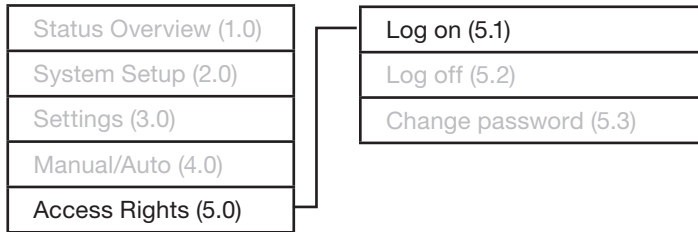

3.5.2 Log off

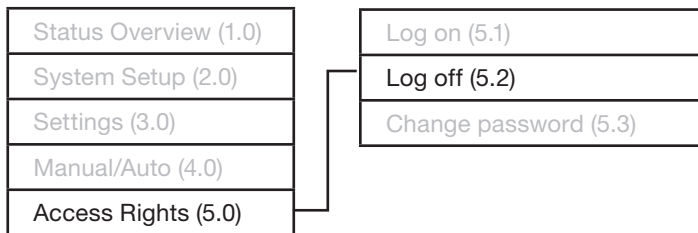

3.5.3 Change password

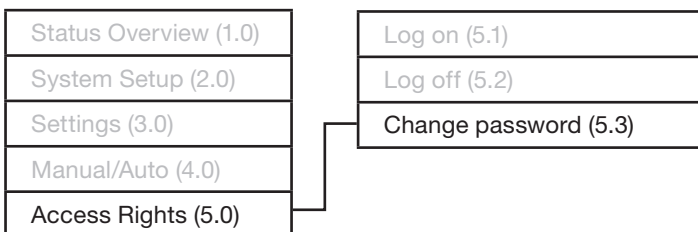



Most of us spend the majority of our time indoors. Indoor climate is crucial to how we feel, how productive we are and if we stay healthy.

We at Lindab have therefore made it our most important objective to contribute to an indoor climate that improves people's lives. We do this by developing energy-efficient ventilation solutions and durable building products. We also aim to contribute to a better climate for our planet by working in a way that is sustainable for both people and the environment.

[Lindab | For a better climate](#)