

Lindab **PRJ**

Installation instruction - UK  
Asennusohje - FI  
Montageanleitung - DE  
Istruzioni di montaggio - IT  
Instructions de montage - FR




# Installation instruction

PRJ

Product  
Tuote  
Produkt  
Prodotto  
Produit



Dimensions  
Mitat  
Maße  
Dimensioni  
Dimensions

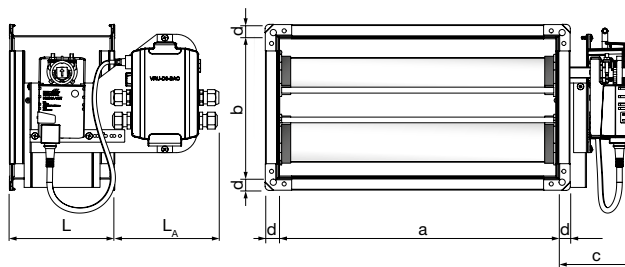

Dimension table

Flange type	d mm	L mm	L <sub>A</sub> mm	c mm
LS	20	151	147	115
RJFP20	20	151	147	115
RJFP30	30	151	147	115
RJFP40	40	151	147	115

Motor type table

Type	Regulator	Motor
UNI *	VRU-D3-BAC	NM24A-VST
UNI-M	VRU-M1-BAC	NM24A-VST
UNI-MR **	VRU-M1R-BAC	NM24A-VST
SPR *	VRU-D3-BAC	NF24A-VST
SPR-M	VRU-M1-BAC	NF24A-VST
SPR-MR **	VRU-M1R-BAC	NF24A-VST
FAS-MR **	VRU-M1R-BAC	NMQ24A-VST



\*) Max 20 m measuring hose

\*\*) Measuring hose and probe not included.

# Installation instruction

# PRJ

### PRJ in details

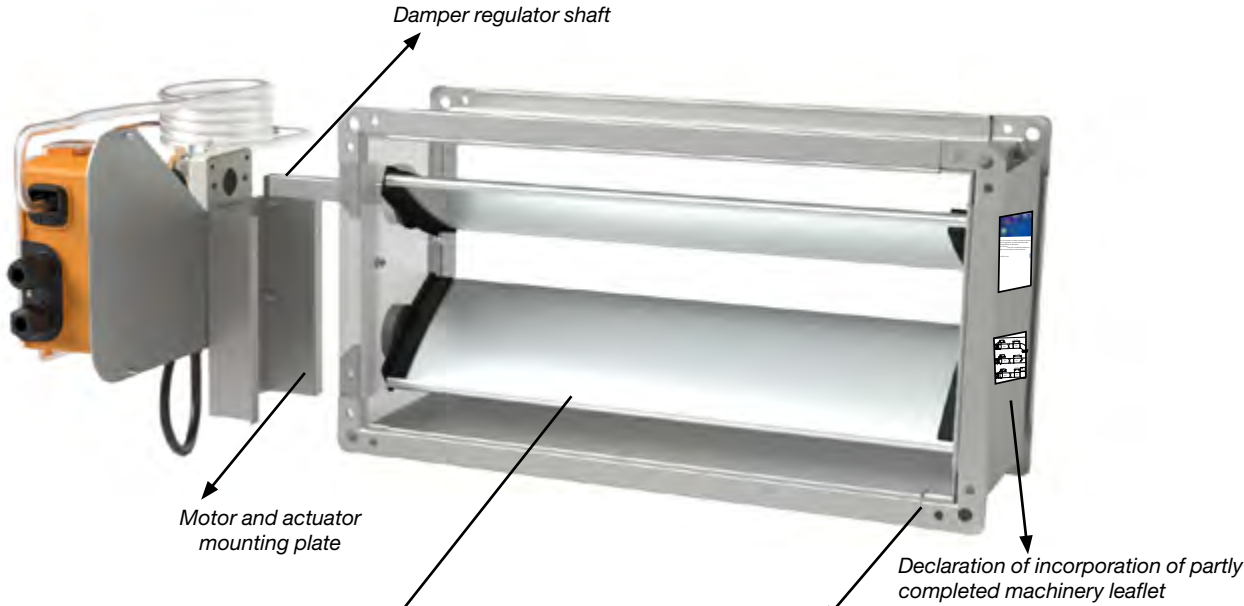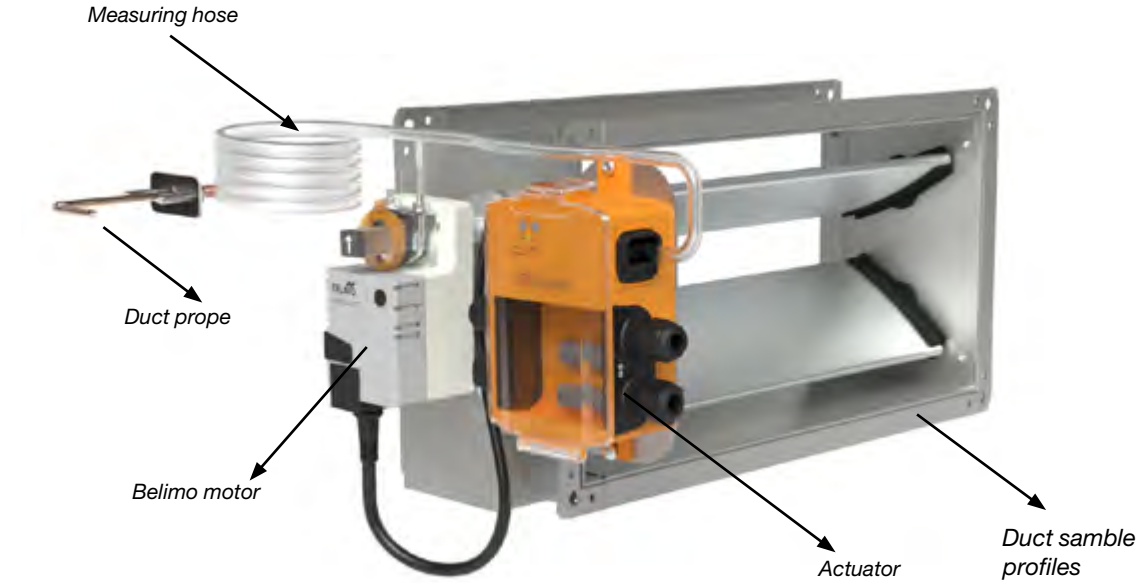


**Damper blades**  
Remember damper blades shall be installed horizontal.  
**Not Vertical !**



Joint flange profiles  
[RJFP](#) or [LS-profile](#)




Label:

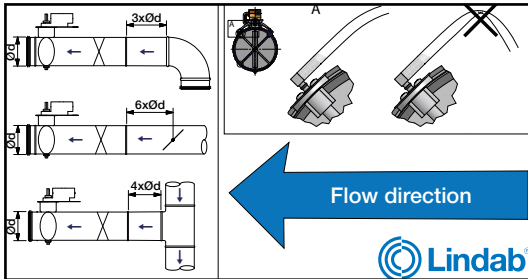


# Installation instruction

# PRJ

Mounting of PRJ  
Kannakointi PRJ  
Montage des PRJ  
Montaggio di PRJ  
Montage de PRJ

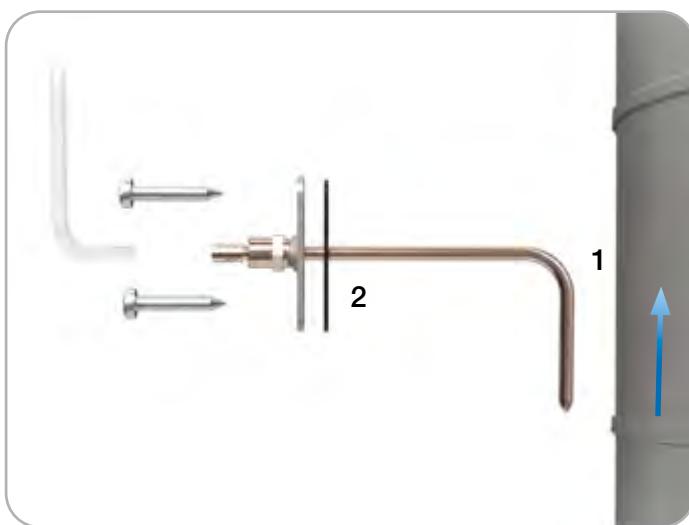

1. Drill a hole  $\text{\O}10$  mm in the duct.
2. Assembly the rubber gasket, flange and probe.
3. Mount the probe on the duct, make sure the probe points against the air direction.
4. Mount the hose.

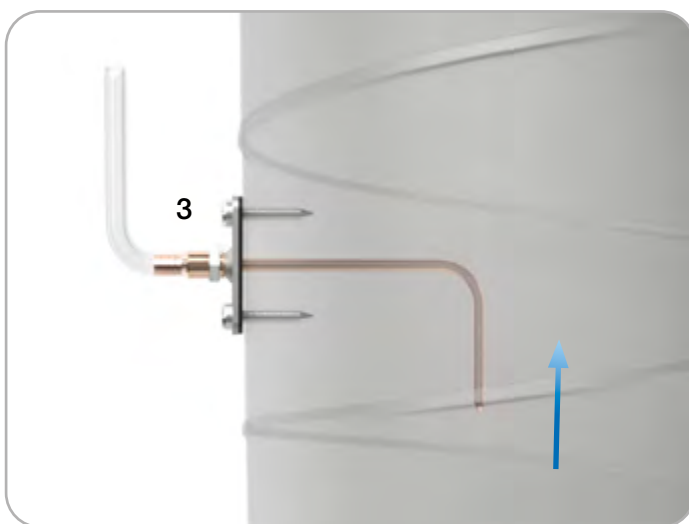


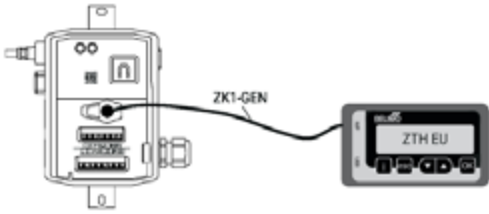

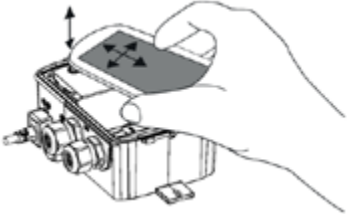
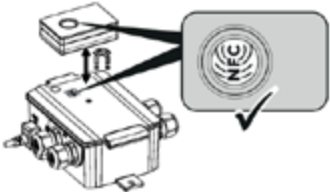
The probe shall point against the air direction in the duct.



# Installation instruction

# PRJ

**Balancing**  
**Säätöohjeet**  
**Einregulierung**  
**Bilanciamento**  
**Réglage**


	<p style="text-align: center;"><b>Universal controllers</b>  <b>UNI(-M) / SPR(-M) / FAS(-M)</b></p> 
Belimo Service Tool ZTH-EU	
Belimo PC-Tool MFT-P via ZTH-EU	
Belimo Assistant App with NFC	 <p style="text-align: right;">**</p>
Belimo Assistant App with Bluetooth via ZIP-BT-NFC	 <p style="text-align: right;">**</p>
Note *)	Modbus/Bacnet/KNX settings can be done with ZTH-EU, PC-Tool, or Belimo Assistant App.
Note **)	Belimo Assistant App works with all Universal controllers.

# Installation instruction

PRJ

**Maintenance:**  
**Huolto**  
**Wartung**  
**Manutenzione**  
**Entretien**

The visible parts of the product can be wiped with a damp cloth. The damper and duct can be cleaned through the duct system or demounted. Do not blow into the plastic hoses mounted on the Belimo unit, as this can damage the flow/membrane sensors.

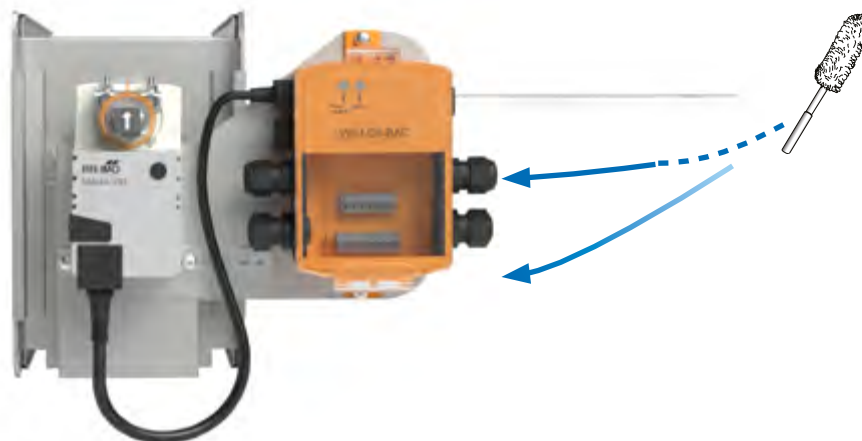

**Cleaning the measuring probe**

Please demount the hose and use clean air to clean the hose and measuring probe.

**Mounting hose**

Put the hose back followed by squeezing the black tightness rings back.



**Mounting hose step 1**

Put the hose back (bottom slot)

**Mounting hose step 2**

Squeeze the black tightness rings back.





Most of us spend the majority of our time indoors. Indoor climate is crucial to how we feel, how productive we are and if we stay healthy.

We at Lindab have therefore made it our most important objective to contribute to an indoor climate that improves people's lives. We do this by developing energy-efficient ventilation solutions and durable building products. We also aim to contribute to a better climate for our planet by working in a way that is sustainable for both people and the environment.

[Lindab](#) | For a better climate