

# Telescopic duct

# TLTR1




## Description

Used together with telescopic duct TLTR 2 where it is necessary to adjust duct length when the standard lengths are not sufficient.

Fits also inside ducts of type SRTR Ø 80–200 and LRTR Ø 80–500.


## Dimensions

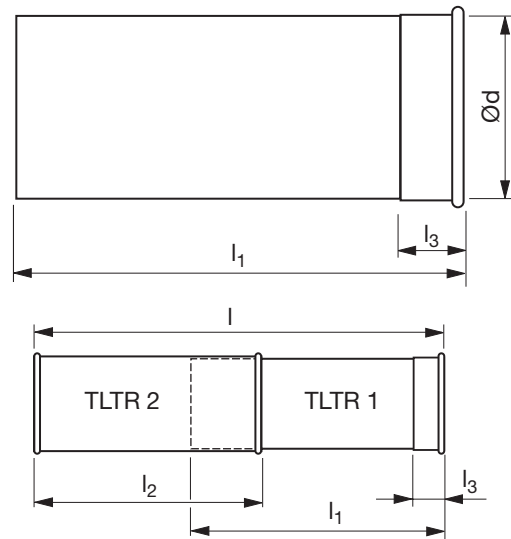

Ød nom	t mm	l <sub>1</sub> , l <sub>2</sub> mm	l <sub>3</sub> mm	l <sub>min</sub> mm	l <sub>max</sub> mm	m kg
80	0,7	220	30	250	410	0,40
100	0,7	220	30	250	410	0,45
125	0,7	220	30	250	410	0,55
140	0,7	220	30	250	410	0,60
150	0,7	220	30	250	410	0,65
160	0,7	220	30	250	410	0,70
180	0,7	220	30	250	410	0,80
200	0,7	350	30	380	670	1,35
224	0,7	350	30	380	670	1,50
250	0,7	350	30	380	670	1,70
300	0,7	350	30	380	670	2,05
315	0,7	350	30	380	670	2,15
350	0,7	350	60	410	670	2,40
400	0,9	350	60	410	670	3,30
450	0,9	350	60	410	670	3,70
500	0,9	350	60	410	670	4,10

Seal the joint after assembly by using either:

- Mastic or tape
- O-ring ORING + clip SB or SB-2

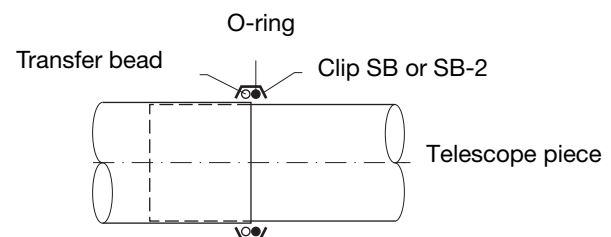

## Ordering example




# Instruction for shortening for length adaptation of Transfer ducts

1

## Spiral swaged duct SRTR

### Adaption with fixed length

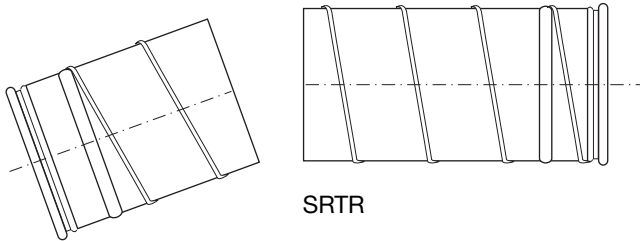

Shorten the duct to the desired length. Also consider the installation length of the slide-on stub.

2

3

4

5

6

7

8

9

10

11

12

13


14

15

16


17

18

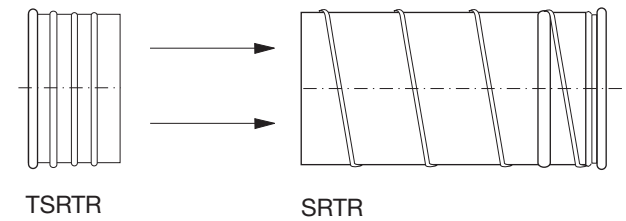


Install slide-on stub TSRTTR (please refer to page 480).

### Adaption with flexible length

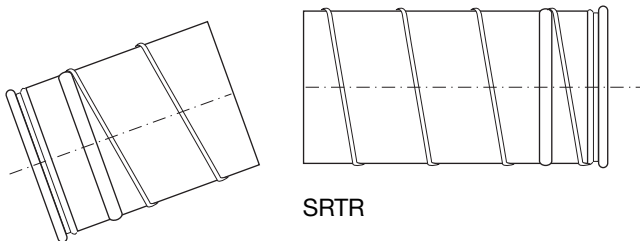

Shorten the duct to the desired length. Also consider the installation length of the slide-on stub.

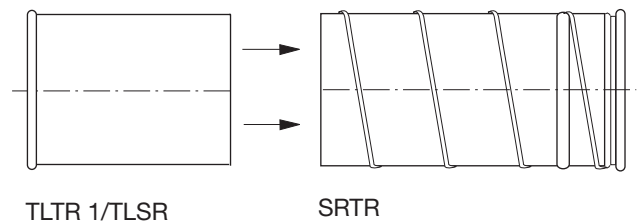


Install telescopic duct  
For Ø80-200 use TLTR-1 (page 484)

### Remember to


Turn the duct so that the joint does not point towards the direction of the air flow.

## Lengthways swaged duct LRTR

### Adaption with fixed length

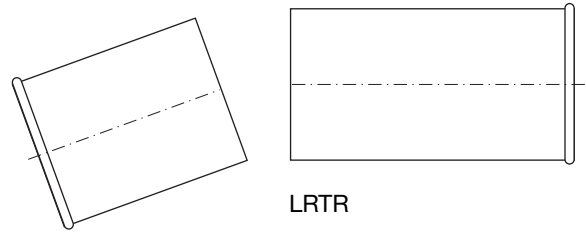


Shorten the duct to the desired length. Also consider the installation length of the slide-on stub.

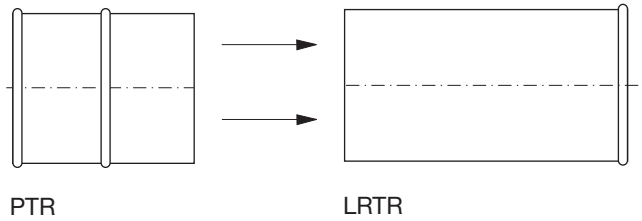


Install slide-on stub PTR (please refer to page 483).

### Adaption with flexible length

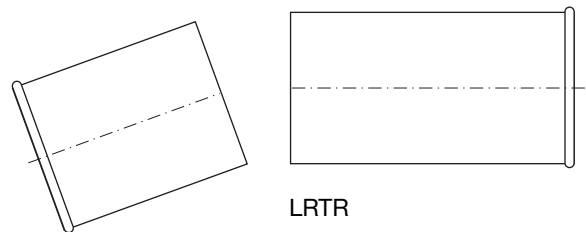

Shorten the duct to the desired length. Also consider the installation length of the slide-on stub.

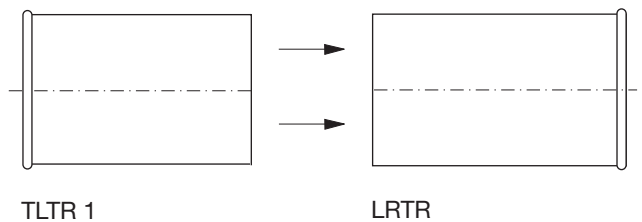

Install telescopic duct  
Use TLTR-1 (page 484)

### Remember to

Turn the duct so that the joint does not point towards the direction of the air flow.