


# Slide-on stub

TSRTR



## Dimensions

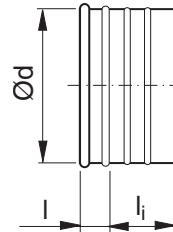

## Description

Slide-on stub for installation in ducts of type SR.

After the duct has been shortened/fitted, add sealant etc between the swaged seams on the slide-on stub, after which the slide-on stub is inserted into the duct. The two swaged seams guide and retain the slide-on stub.

To finish off, the edge of the stub is swaged, both to remove the sharp edge of the transition and to fix the slide-on stub.

Please refer to the shortening instruction on page 12.

Is also used as transition piece OTRTH between Transfer and flexible hose THVTR. See page 48.

Please refer to the shortening instruction on page 12.

Is also used as transition piece OTRTH between Transfer and flexible hose THVTR. See page 48.

<b>Ød nom</b>	<b>t mm</b>	<b>l mm</b>	<b>l<sub>i</sub> mm</b>	<b>m kg</b>
80	0,7	18	44	0,10
100	0,7	18	44	0,10
125	0,7	18	44	0,20
140	0,7	18	44	0,20
150	0,7	18	44	0,20
160	0,7	18	44	0,20
180	0,7	20	37	0,30
200	0,7	20	37	0,30
224	0,7	20	37	0,30
250	0,7	20	37	0,30
300	0,9	22	32	0,40
315	0,9	22	32	0,50
350	0,9	22	32	0,50
400	0,9	22	32	0,70
450	0,9	22	32	0,80
500	0,9	22	32	0,90

## Ordering example

Product	TSRTR	200
Dimension Ød		