




Venttiili

KI



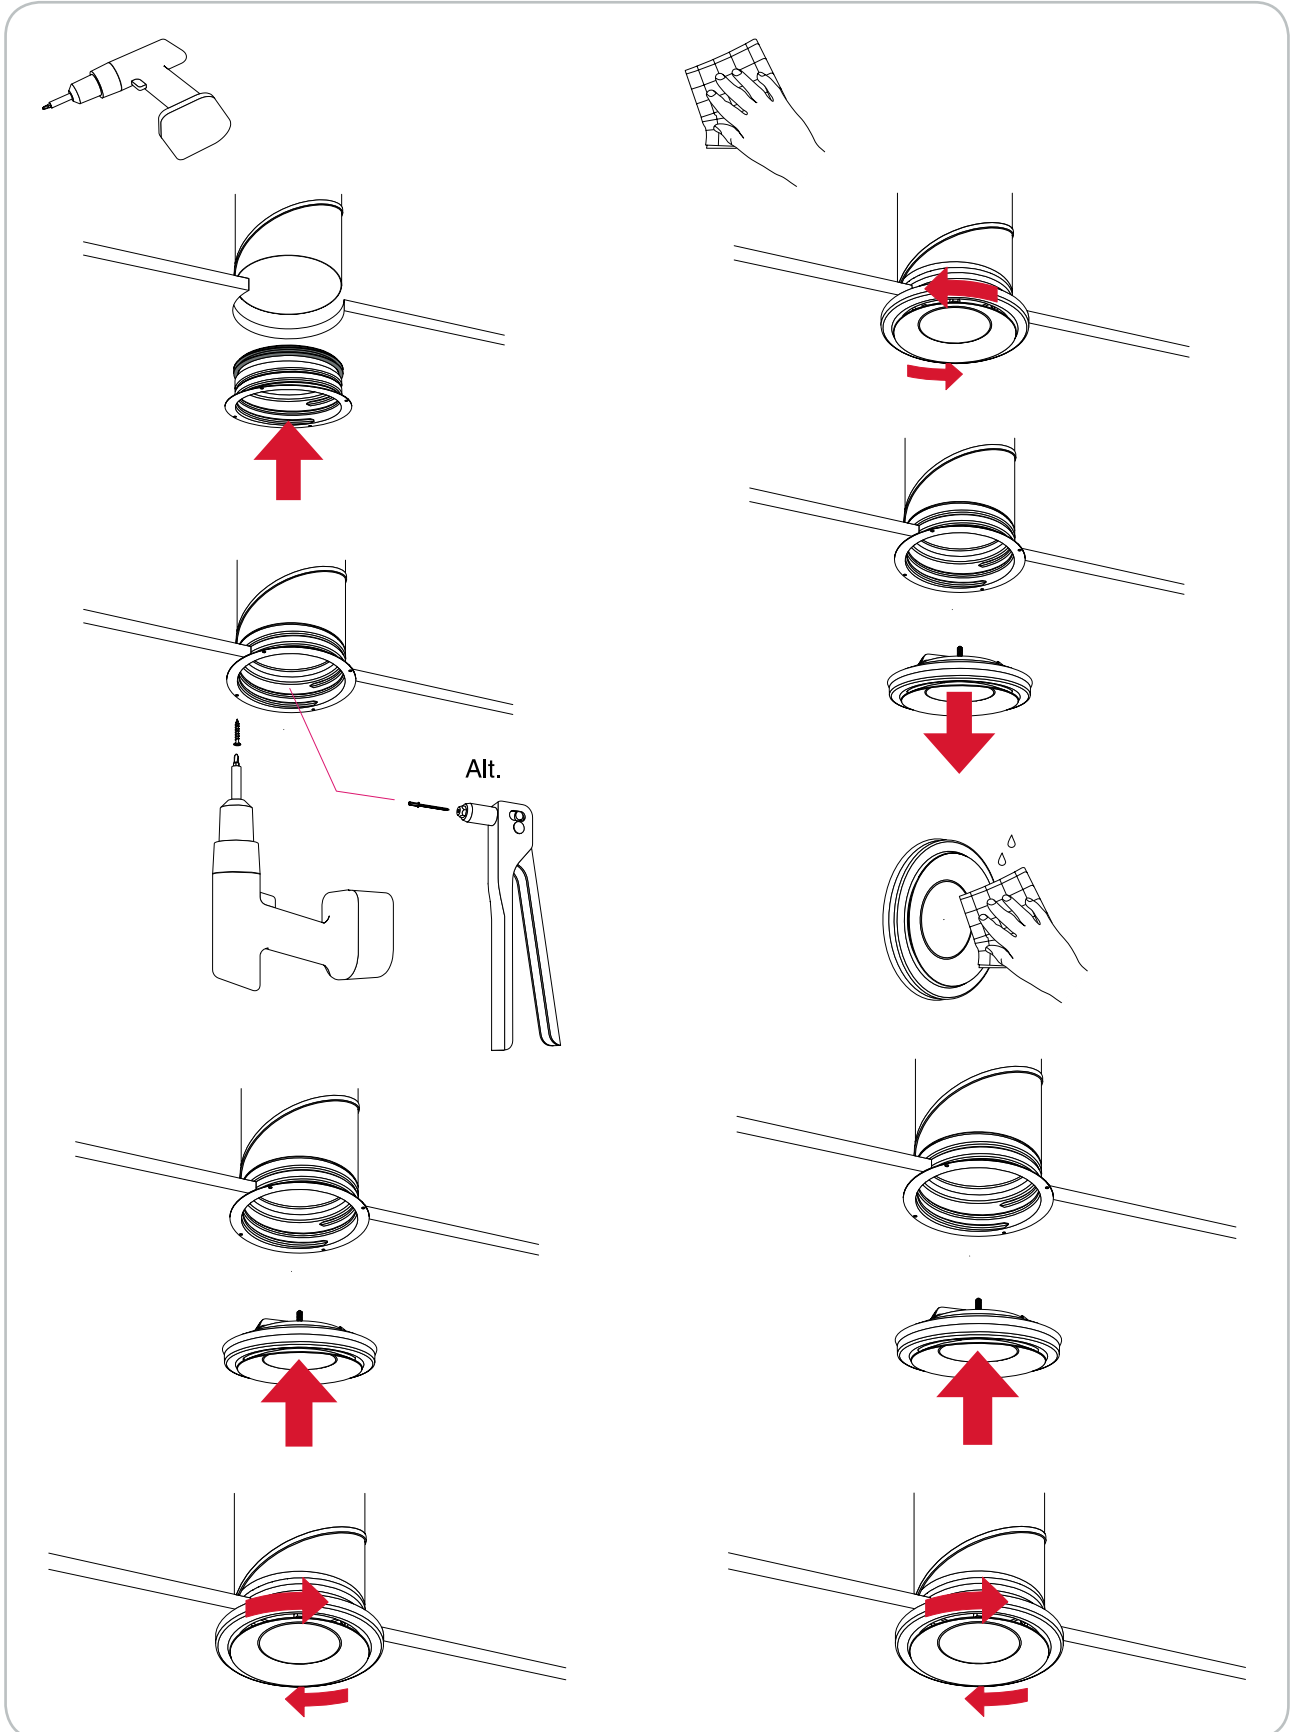

Venttiili

KI

Ø mm	Venttiili Asennus- paikka	Asento a [mm]						
		a	2	4	6	9	12	
80	Kanava	k	0,779	1,36	2,05	2,65	2,80	
		a	2	4	6	9	12	
100	Kanava	k	1,00	1,10	2,31	3,19	4,12	
		a	3	5	7	9	12	15
125	Kanava	k	1,23	1,85	2,83	3,74	5,08	6,21
		a	4	6	9	12	15	20
150	Kanava	k	2,35	3,37	4,50	5,74	7,40	10,3
		a	4	6	9	12	15	20
160	Kanava	k	1,66	3,10	4,31	6,04	7,34	10,3
		a	5	6	9	12	15	20
200	Kanava	k	3,66	5,17	7,05	8,00	10,4	12,9