

CADvent plugin on MagiCAD for AutoCAD

for version 1.9



Table of Content

Manual for Lindab CADvent plugin for MagiCAD	4
General Information	4
Installation and activation.....	4
Installation requirements	4
Installation process.....	5
List of functions and User Interface.....	9
Graphical User Interface for CADvent plugin with MagiCAD.....	9
Ribbon palette	9
Right-click menu.....	10
Graphical User Interface for CADvent plugin without MagiCAD.....	10
List of functions	10
Functionality of the Lindab CADvent plugin	13
Import Duct Series	13
Update Properties	15
Manage Ducts.....	16
Set Length	17
Optimize Fittings	19
Model Checker.....	21
Edit Forced Products.....	22
Piece Labels	23
Group by:	24
Numbering method:.....	25
Piece label format:.....	26
Edit:.....	26
Translations.....	28
Part categories	28
Assign Piece Labels to MagiCAD UserVar2	28
Face Text.....	29
Next start number.....	29
Add New	29
Modify Piece labels	30
Properties.....	31



Manually changes of the Piece label	31
Changes of the system.....	32
Bill of Materials	34
Cut all ducts to drawing length.....	34
Lengths on BoM	36
Cut all ducts to drawing length.....	38
Webshop Upload	38
Lindab Webshop.....	42
Add Space	50
lindQST Upload	52
Leakage and Leakage Area Calculation	55
Leakage classes	56
Definition of the leakage classes	56
Leakage Area Calculation:	57
Leakage plug.....	59
Special Components	59
InCapsa Design Tool – Draw a wall panel system.	60
InCapsa Design Tool – Draw a Free Panel system.....	64
Create Bill of Material for InCapsa Systems.....	65
InCapsa Design Tool – Draw the ventilation ductwork with MagiCAD	68
About	71



CADvent plugin on MagiCAD for AutoCAD

General Information

The Lindab CADvent plugin introduces advanced CADvent fabrication functionality together with MagiCAD.

Additional to this, the plugin offers features that are also available on computers without MagiCAD.

Please read more about this in 'List of functions and User Interface'

Installation

The latest version of the CADvent plugin can be downloaded from
<http://itsolution.lindab.com/downloads/cadventplugin/latest/cadventplugin.exe>

Installation requirements

To be able to use the plugin you need to have:

AutoCAD

- AutoCAD 2015 - 2021


MagiCAD

- MagiCAD for AutoCAD 2020 (with AutoCAD 2015 - 2020)
- MagiCAD for AutoCAD 2021 (with AutoCAD 2017 - 2021)

NOTE: You need to have local administrator rights to install the plugin on your computer.



Installation process

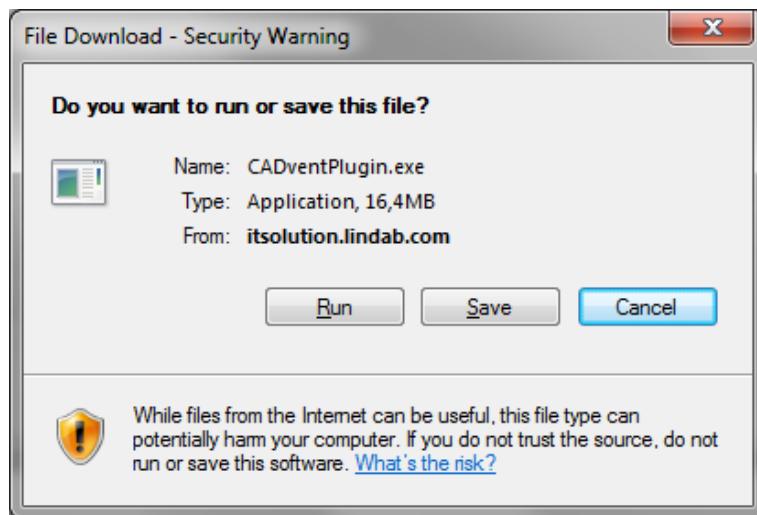


Download the installation file and save it on your computer for later installation or install it by pushing the “Run” button. If you have an earlier version of CADvent plugin installed the installation process first likes to uninstall the current version of the plugin. After the installation you will see this dialog window:





Make sure that computer has internet access and select **the first option** if you already received your license letter.

Press **Next**.

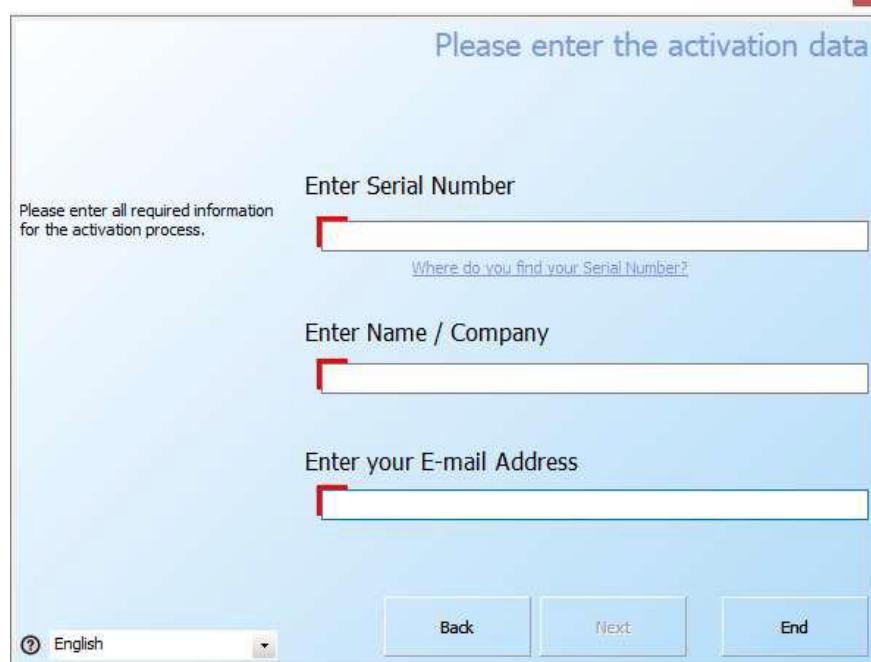

Enter your serial number, name and/or company name and your email address. The serial number can be copied from the license letter. While copying, please make sure that there is no space at the end of the number. Press "Next" to start the registration process which will register your software license in the license server.






The registration is completed. You can now work with your Lindab software.

A further registration or extension of the license is not necessary. At certain intervals, this will be done automatically by the license software if the computer is online when CADvent is started.


Now you can install the software. Please activate the installation file again. The newest features can be listed up with the link you can find in the middle of the popup window.




The following dialog needs your attention. Please read the end user license carefully. If you accept the terms in this license agreement activate these option and press Next.

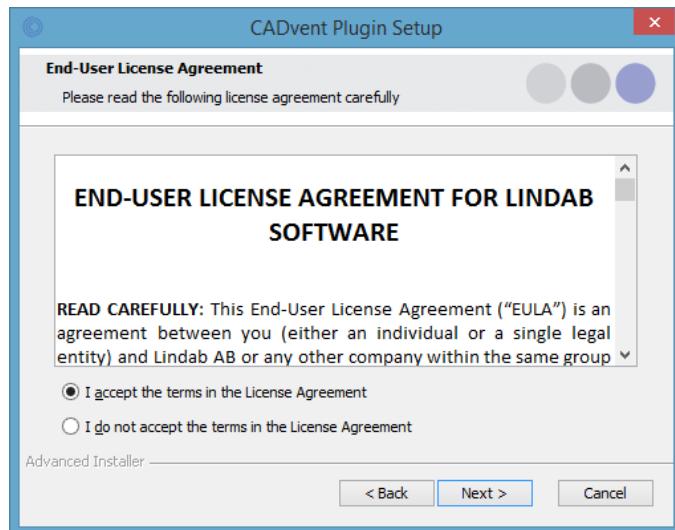

The next dialog asks you to select a market area. The selection includes certain translations and local settings for the production such as standard duct lengths and flange types:

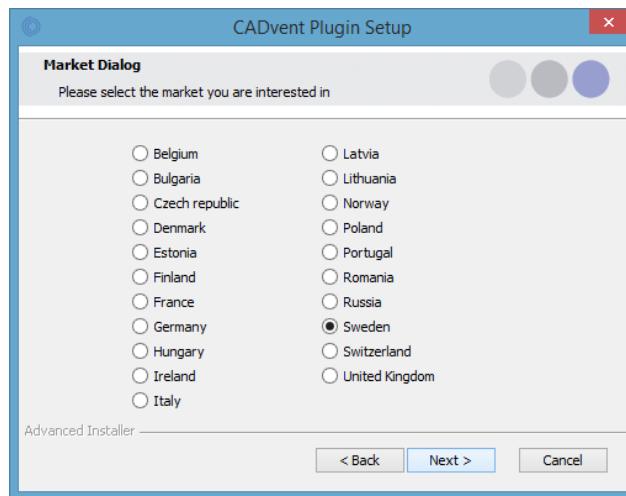

At the end of the installation process you will be asked to install the software. Press "Install", to start the final installation.

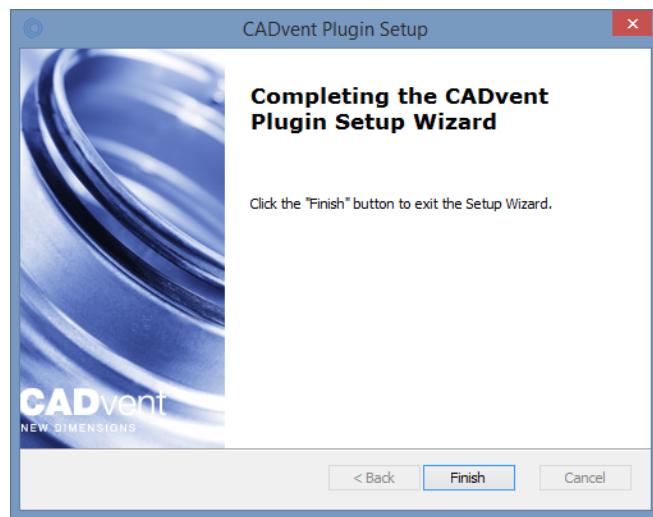

Now the installation is completed and you can start MagiCAD including the CADvent plugin.

List of functions and User Interface

Graphical User Interface for CADvent plugin with MagiCAD


The CADvent plugin on computers with MagiCAD contains two possibilities to access the commands. A right-click menu and a Ribbon palette. Both types of interface contain full functionality.

Ribbon palette





Right-click menu

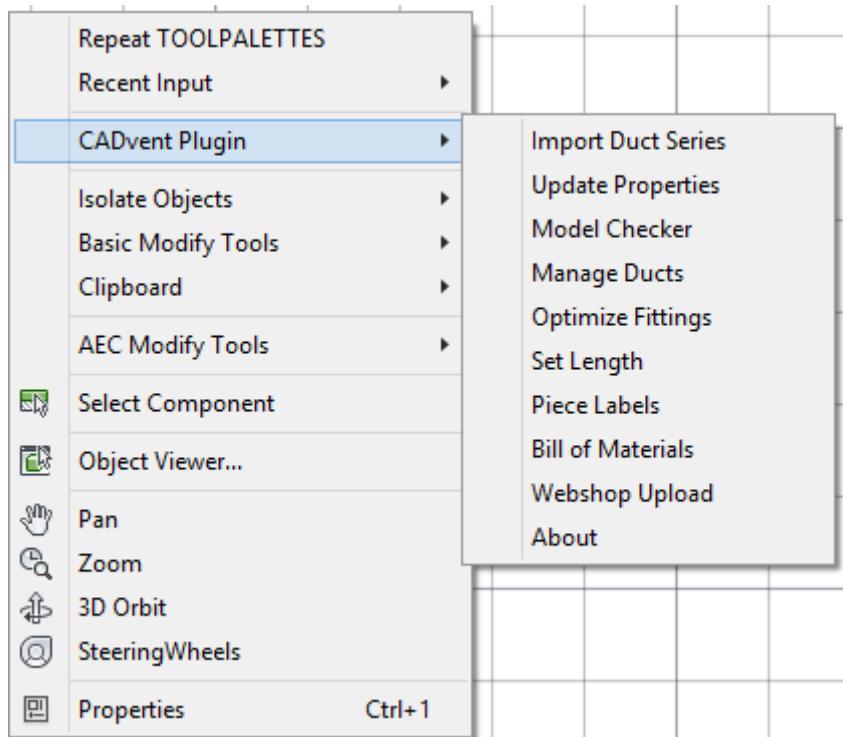

Graphical User Interface for CADvent plugin without MagiCAD




The CADvent plugin on computers without MagiCAD contains a Ribbon palette to access the commands.





List of functions

Products	 Import Duct Series	This function allows the user to import non-generic, will say "real products" into an existing MagiCAD Duct Series or to create a new Duct Series with Lindab products.
----------	---	---



	 Select Terminal	Opens a web browser to Lindab lindQST web selection tool. Here you can select or calculate Air and Water products and export them to MagiCAD. The side also presents all product documentation, electrical wiring schemes and more...
	 DIMcomfort	Opens a connection with DIMcomfort to select air devices.
	 Select Silencer	Opens a connection with DIMsilencer to select silencers.
Edit	 Update Properties	The Update Properties function allows MagiCAD to update MagiCAD objects with additional information.
	 Model Checker	The Model Checker checks the drawing for ventilation objects which do not fulfill the demands to be a real product. These objects are filtered out when you upload products from the drawing into the LindabWebshop.
	 Manage Ducts	With Manage Ducts you can cut ducts into standard lengths and insert connectors and flanges.
	 Set Length	This function allows the user to set a specific length to a new or existing round or rectangular duct.
	 Optimize Fittings	Optimize Fittings allows the user to "absorb" short pieces of duct to optimize the production.
Tools	 Piece Labels	Piece label allows you to give each ventilation product a unique identifier which is also shown in the Bill-of-Materials.
	 Webshop Upload	The webshop upload to Lindab's Eshop is only supported for selected markets at the moment. This feature allows our customers to upload products to the eshop. Please check if your local market supports this feature.




		Leakage and Leakage Area Calculation according to EN 14239 standard
Space		Create a 3D space object to add room information for uploading to lindQST, to calculate air devices or water products optimized for the specific room requirements
		Upload the 3D spaces to lindQST
InCapsa		Draw an InCapsa wall panel system. The cost effective system that makes it easier to mount and cover ventilation systems in buildings
		Draw an InCapsa free hanging panel system.
Common		Generates reports for all ventilation products.
		In the About button you can find information about market settings, contact information and CADvent plugin version number.



Functionality of the Lindab CADvent plugin

The CADvent plugin is designed to complete the production model in MagiCAD which was introduced in version 2010.5 and to a similar production model as in CADvent. As requirement you should draw or convert the MagiCAD ventilation objects in your drawing in a production model.

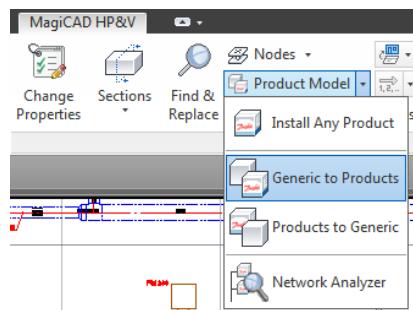

For more information please read the MagiCAD User Documentation -> Ventilation -> Production Model.

Import Duct Series




In MagiCAD you draw Duct Series after pre-defined templates. Setting up a Duct Series in MagiCAD with real products and prioritizing them correctly can be time consuming and contain errors which do not appear before creating a Bill-of Materials with the CADvent plugin.

In order to simplify this for our customers they can import Lindab products into an existing Duct Series or create a new one for Lindab Safe ducts and for rectangular ducts.

With the function “Import to all” you can automatically attach Lindab products for air duct systems to all existing Duct Series in MagiCAD separately for round ducts and for rectangular ducts.

CADvent import Duct Series dialog box

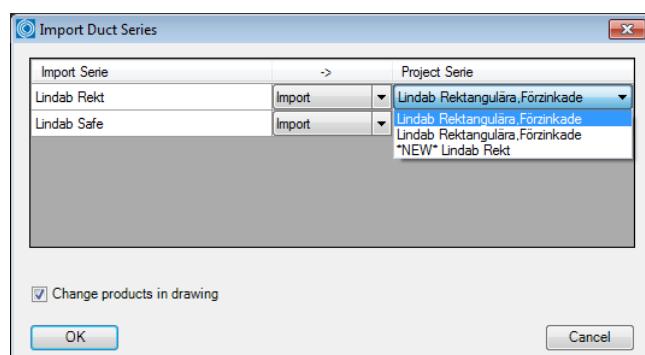



Check "Change products in drawing" to convert existing generic objects in the drawing.

This way you draft automatically with "real" products which follow the standards for a Production Model similar as in CADvent.

NOTE:


Only these products can be shown correct on the BoM and can be ordered in the webshop!

Import to all duct series



Change products in drawing

Duct Series product selection dialog

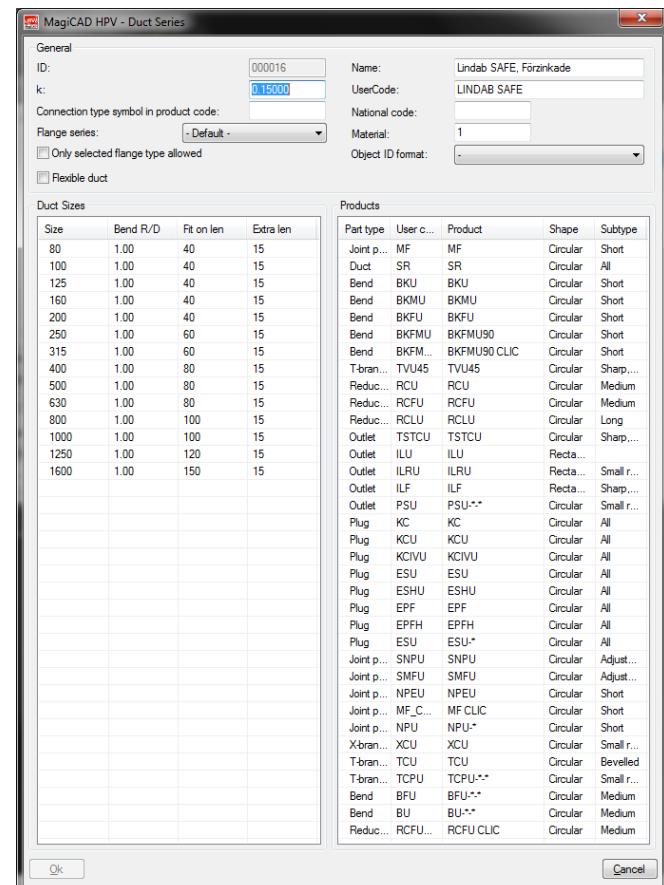



Update Properties



The Update Properties command should be used after you have drawn your MagiCAD production model objects to add information.

When you are finished drafting or to update information in-between just push the Update Properties button, select a MagiCAD ventilation object and open the AutoCAD Properties as shown to the left.


Parameters for Update Properties:

- Custom String: Allows you to set manually a text string which is shown in the **Bill-of-materials**.
- Material: Sets a material which is used in the **BoM** and necessary for product upload to the **LindabEshop**. Alternatively the material stated in the MagiCAD Duct Series can be used.
- Piece label: Gives a unique ID to each product.
- Piece label lock: Locks the ID you set manually. The ID will not get overwritten by the automatic **Piece label function** in the CADvent plugin.
- Order Length: Give a rectangular duct another length value manually to be able to cut the duct on site.
- Flange Index: Position of flange on an object. The Index is also marked per product in the drawing. By default "All" are selected and the marker is deactivated.
- Flange type: Select a standard flange type according to your market settings.
- Flange attachment: Set a flange type "Normal" or "Loose" if you want to be able to cut the duct on site.
- Flange lock: Lock the setting of this flange, then the CADvent plugin will not

CADvent	
Custom String	
Material	Galvanized
PieceLabel	
PieceLabel Lock	Off
Order Length	
Flange Index	1
Flange Type	OTHER
Flange Attach...	Normal
Flange Lock	Off

CADvent plugin Properties

Flange Index mark in drawing

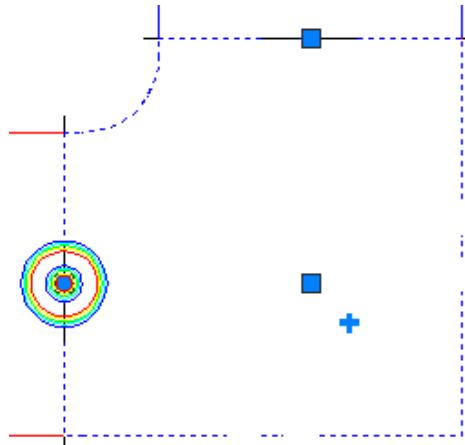




change the flange type or attachment
using the **Manage Ducts** function

Manage Ducts



The **Manage Ducts** function allows you to cut ducts into standard lengths, set flange type and insert connectors automatically.

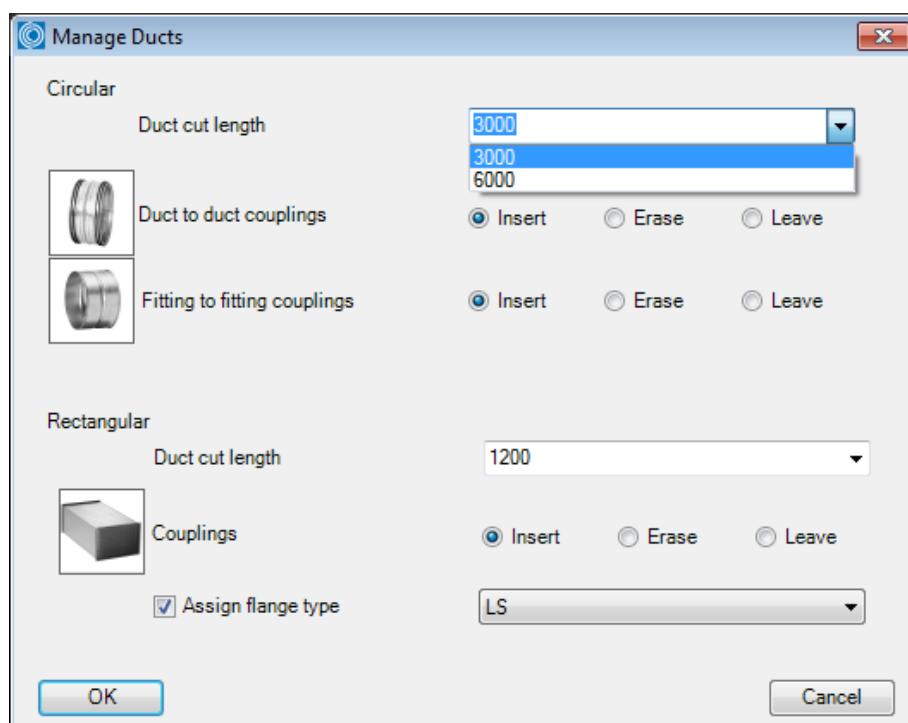

Manage Ducts dialog

In the Round Selection you can set parameters to insert duct to duct and fitting to fitting couplings and select a standard length to cut round ducts into standard lengths. You can select a market dependant standard length or manually type a standard length.


The buttons **Insert**, **Erase** and **Leave** define whether you want to cut or re-cut the ducts (Insert), whether you want to remove existing duct cutting (Erase) or you want



to leave the round duct cutting as is, f. ex. if you want to change only the rectangular settings.

In the Rectangular selection you have similar functions for duct cutting and insertion of flange types as in the round selection. In addition you also have a selection of market specific flange types and a check button to assign the selected flange type to the rectangular ductwork.

Now you can select the products to be cut by dragging a window or press right mouse click or Return/Enter to select all products in the drawing.

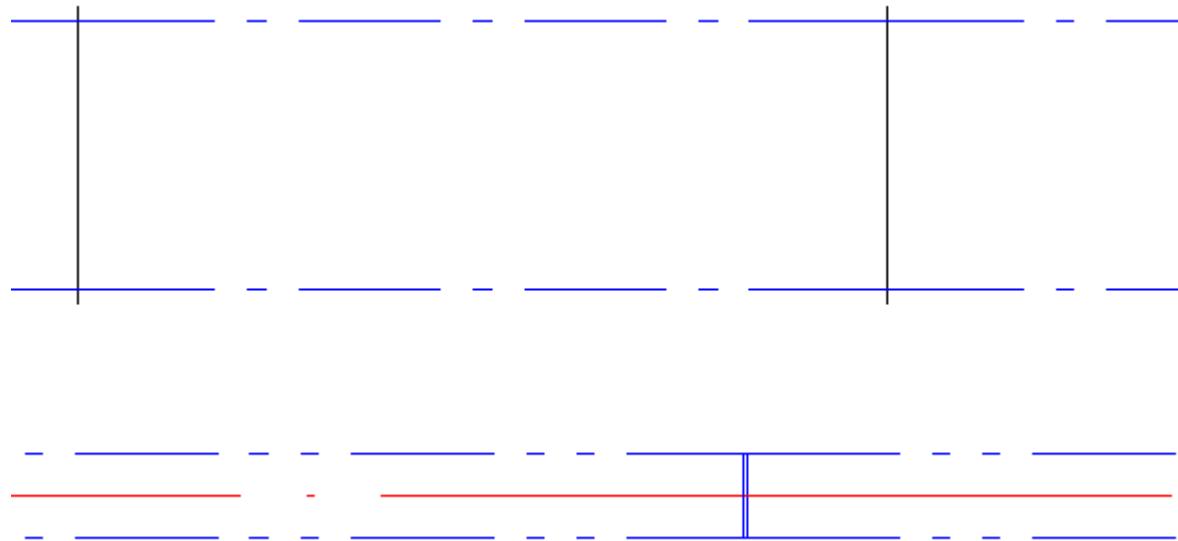


Round and rectangular ducts with inserted flanges and connectors

Set Length




The **Set Length** command shorten or stretches the length of a duct to a user given length, just click on the command button, enter the length value in the below shown dialog and select duct you want to set:

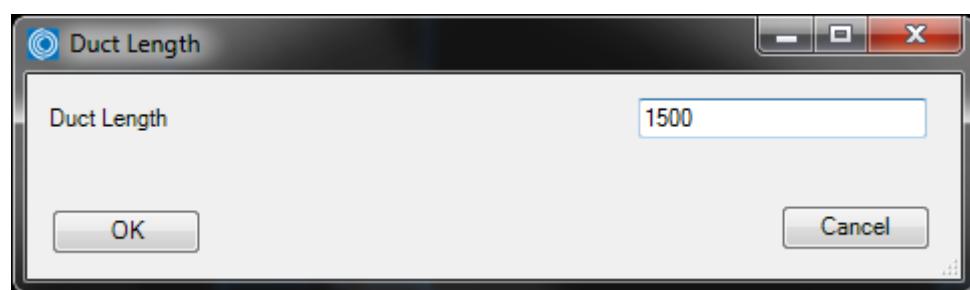




Set Length dialog

Depending on where you click on the duct, the opposite end will be stretched/shortened:

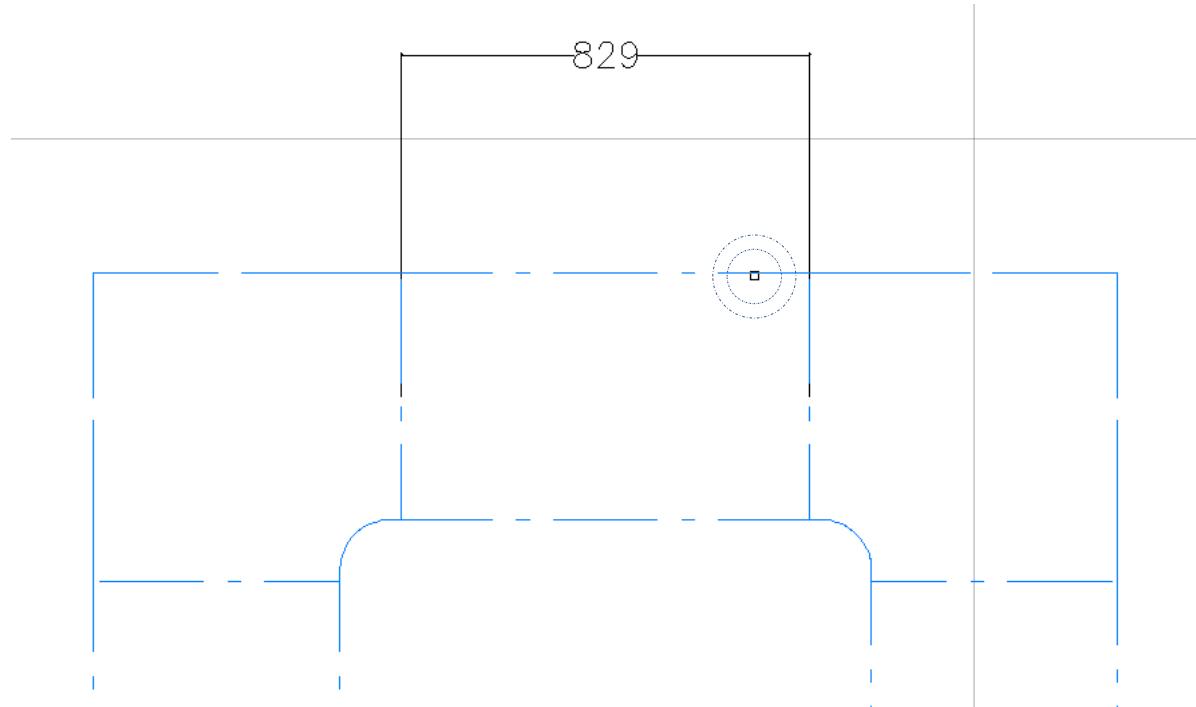

Set Length dialog with fixed end on right side before stretching

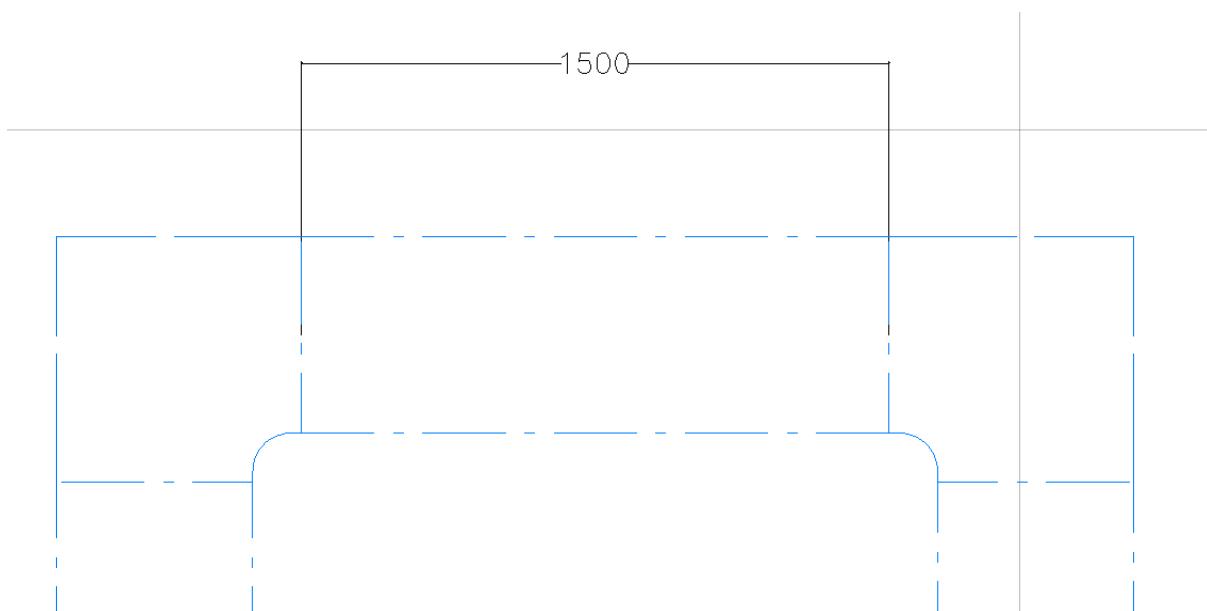





Set Length dialog with fixed end on right side after stretching

NOTE: The Set Length command has a restriction: if the movement should interfere with MagiCAD safety functions, then the command is not executed.

Optimize Fittings



The **Optimize Fittings** function checks the drawing for short rectangular duct pieces to “absorb” them into the leg length of a fitting to minimize product and installation costs.

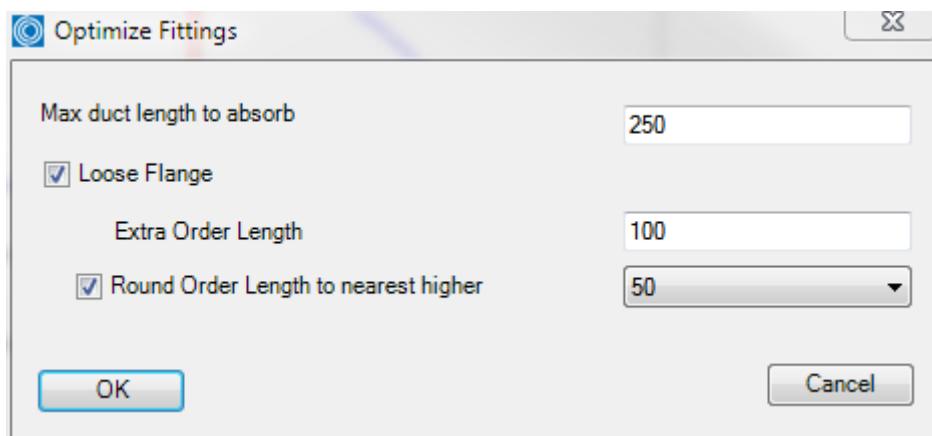

Optimize fittings set length dialog

Enter the maximum length which should be optimized and push “Ok”. The CADvent plugin will check the drawing for short ducts and open a dialog for each duct that is found.


Loose Flange will add a loose flange information to the prolonged leg of the fitting as default. It is always possible to add a loose flange on each optimization manually if the option has not been activated when the command has been started.

Extra Order Length: Adds a certain length to the fitting leg, used to cover tolerances on building site.

Round Order Length to nearest higher: Makes the order of components smarter. You can choose a round up value of 50 or 100.



Sample:

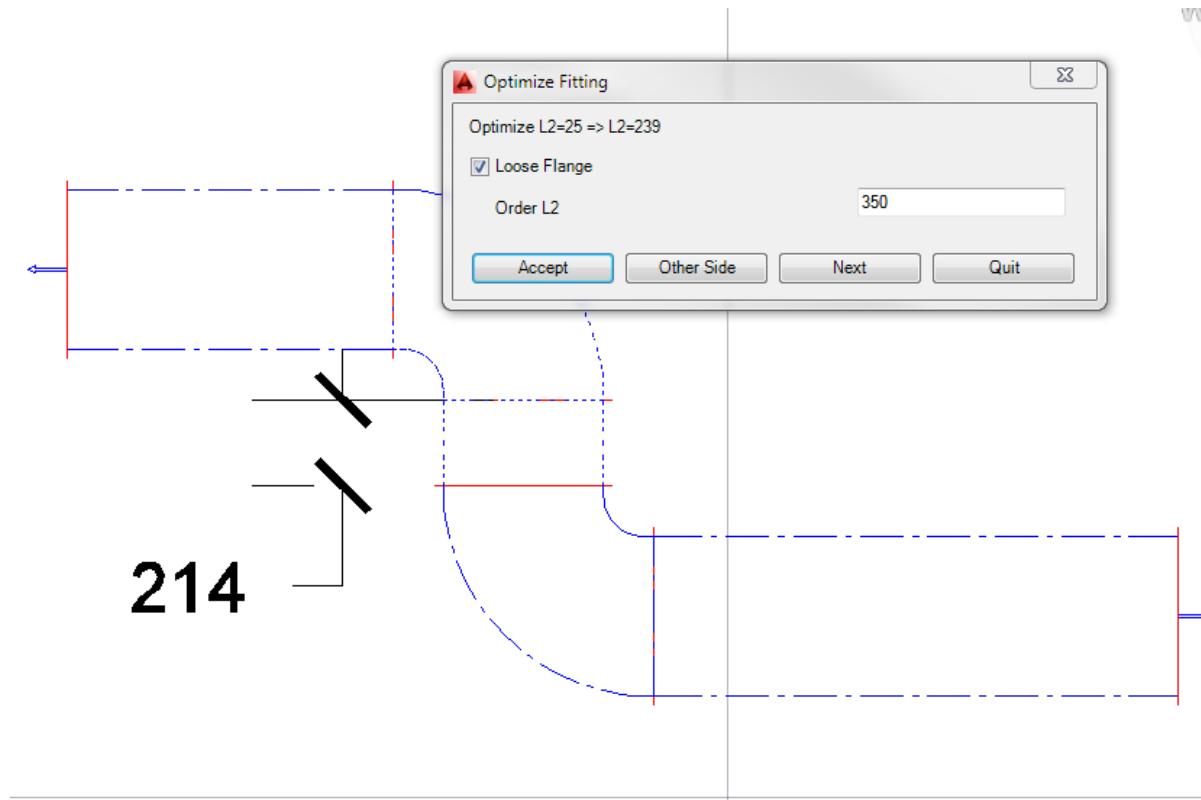

Absorb short pieces of duct to fitting

The duct and fitting which shall be optimized will be shown with dashed outlines. Press "Accept" to execute the optimization or "Other Side" (only possible when the duct is between two fittings as shown above) to switch the optimization to the other side.


The current fitting is made with a 25mm standard leg length. After optimization, following leg length will be activated at the fitting:

Not activated Loose Flange option: 239mm (= 214mm + 25mm)

Activated Loose Flange option and extra order length of 100mm: 339mm (= 239 + 100mm)

Round order Length to nearest higher 50mm: 350mm

Round order Length to nearest higher 100mm: 400mm

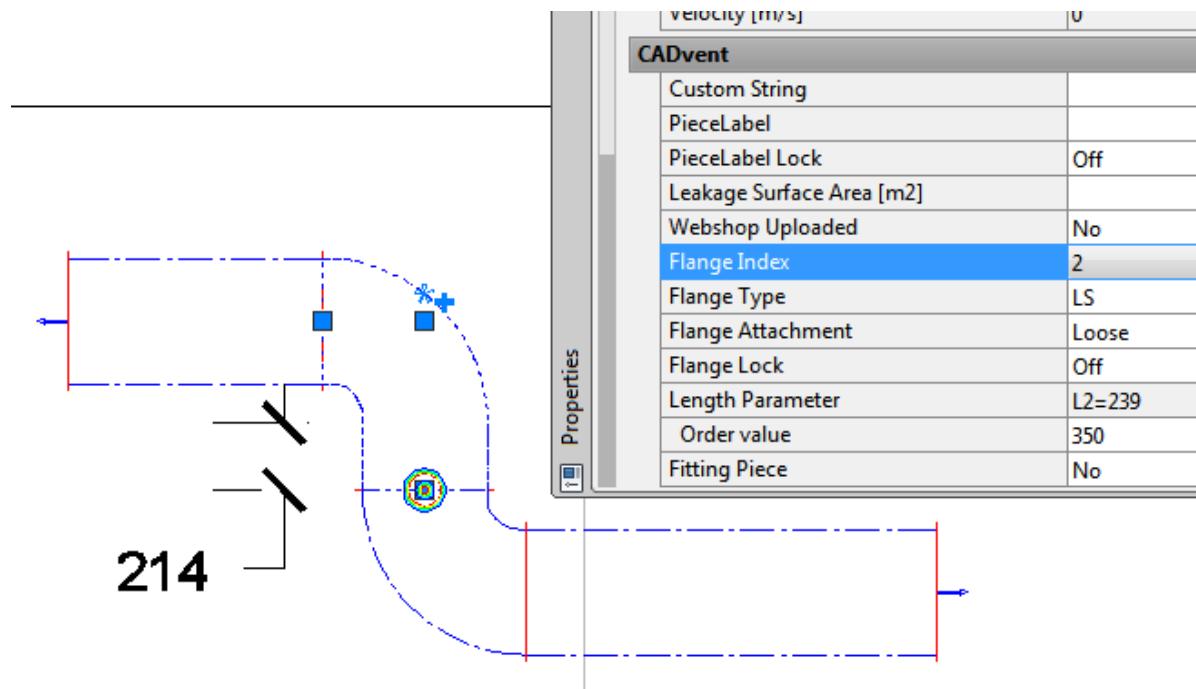

Short duct piece absorbed to bend

The properties of the fitting can be visualized in AutoCAD Properties. Activate the flange Index to show the properties of each connection side separately and activate the connection point with the prolonged leg.

Model Checker




The **Model Checker** is a function that controls all ventilation objects in a drawing if they fulfil the demands for the **CADvent Production Model**.

This function is essential to check whether all products can be shown in the **BoM** and can be uploaded in to the **LindabEshop**.

The Model Checker checks following details:

- Generic object that cannot be ordered.
- Order parameter is less than drawing parameter.

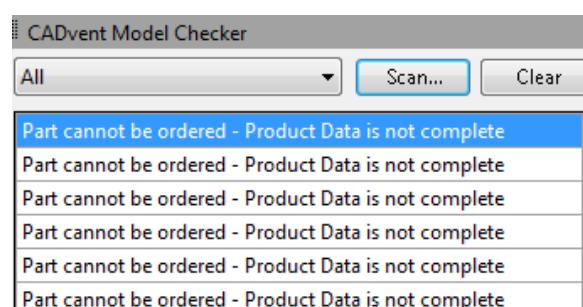




- Duct length is longer than cut length
- Space without name

Push the Model Check button to open an AutoCAD Dashboard on the side of your screen and push the “Scan” button to check the drawing for products which can't be ordered.


Click on one of the parts to move the object into scope and mark it.

CADvent Model Checker Dashboard

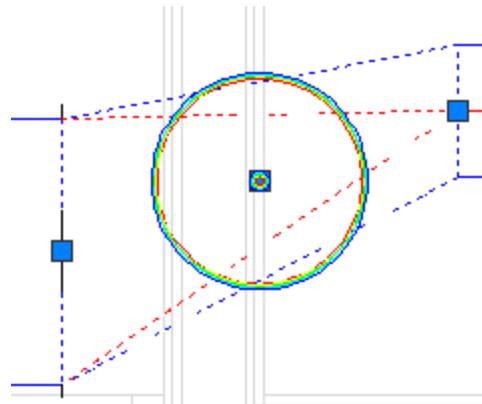

Non production model object marked with Model Checker

The marking can be shut off in the Dashboard – Options...

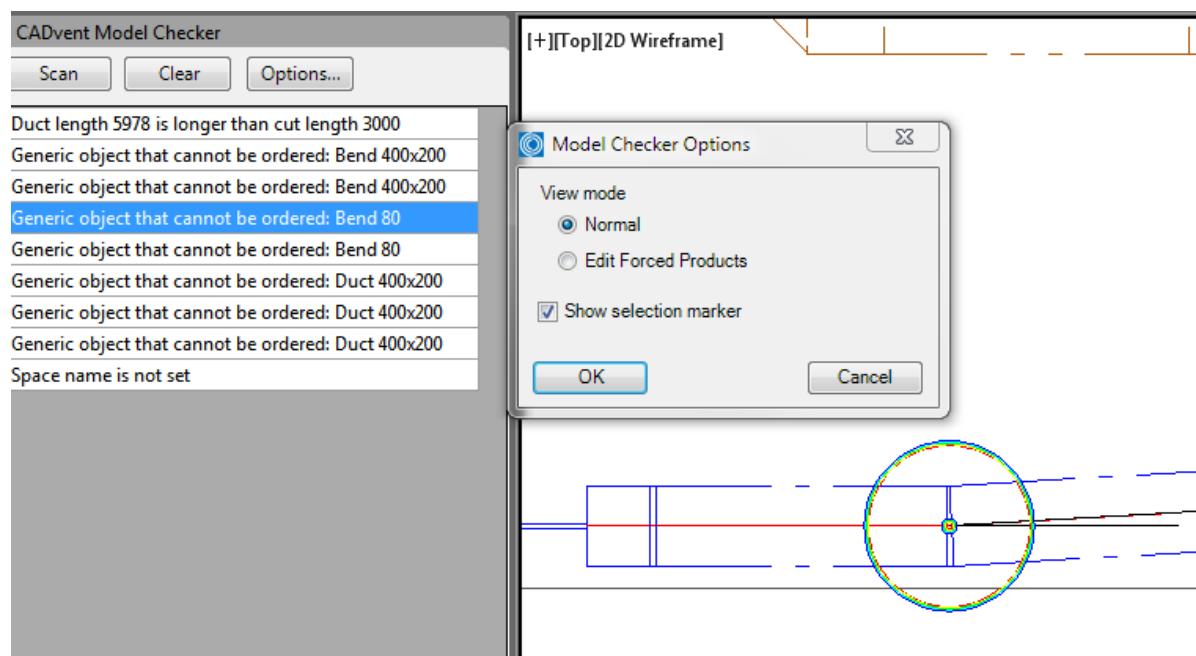


Model Checker Dashboard with marker function

Edit Forced Products

Activate this option if you like to force products to be another type of product. The image below shows a bend with a 3° angle, which is a not existing product. On building side this can be handled inside the tolerances of a duct connector NPU.


Activate *Edit Forced Products* opens an edit column in the model checker table.

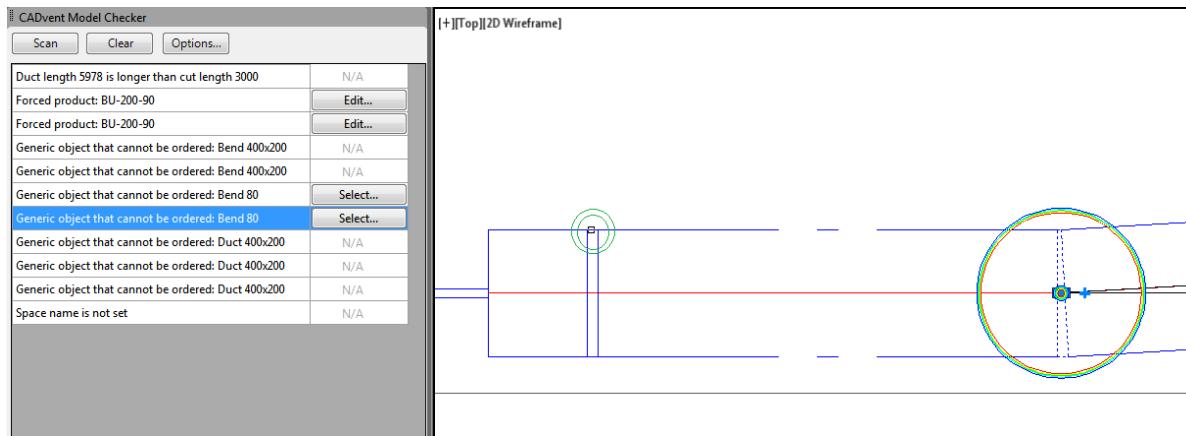

Product with the possibility to be a forced product get the option **Select...**

To use this function, the product to copy the properties from, has to be available on the drawing!

Mark the product in the *Model Checker*, press **Select...**, select the product the generic object is forced to be.

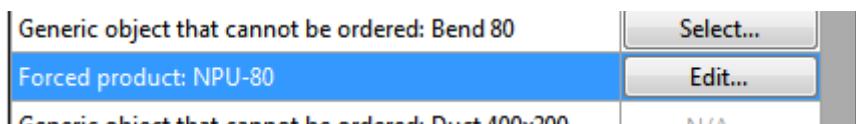


Piece Labels



The Piece Labels function allows you to assign a unique identifier to each product or to group several products with similar identifiers using a running index of numbers.

You have different parameters to group and number products and to show the text of the identifier in the drawing and the report:

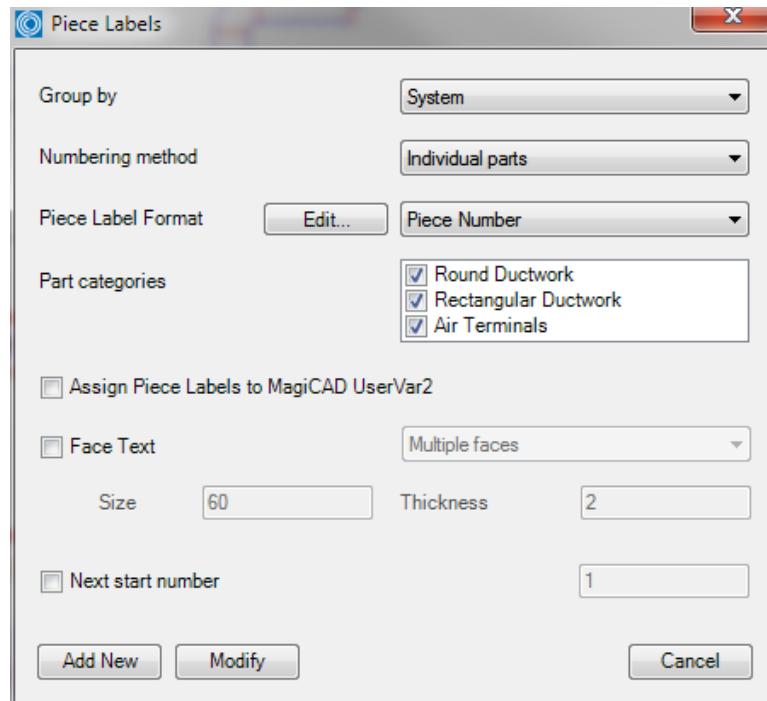

Piece Labels dialog

Group by:

You can group the numbers by system or select no grouping at all. When using no grouping all parts will get individual numbers in the piece label. When you group the piece by label by system you can have a single number per system, this means that you start again with number "1" on each system.

NOTE: Each system cannot have more than one open end on a duct as this will be used as start for the system. If you have more than one open end a warning will be shown:

None The piece number will only follow the numbering method and does not care the grouping.

System Each system will get an own numbering




Sample: numbering grouped by system

Numbering method:


The numbering method decides what number will be given to the individual component:

Individual parts

Each component will get an individual number

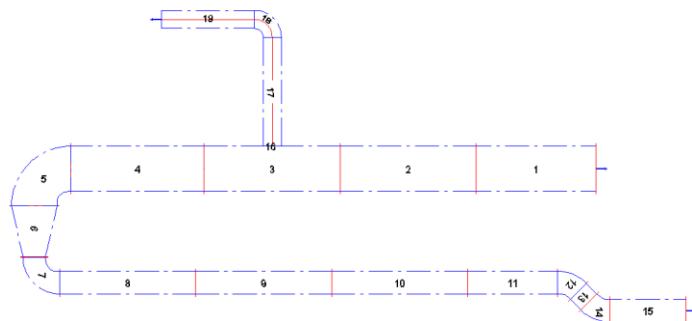


Product code + Material: Products with identical product codes and identical material will get the same number

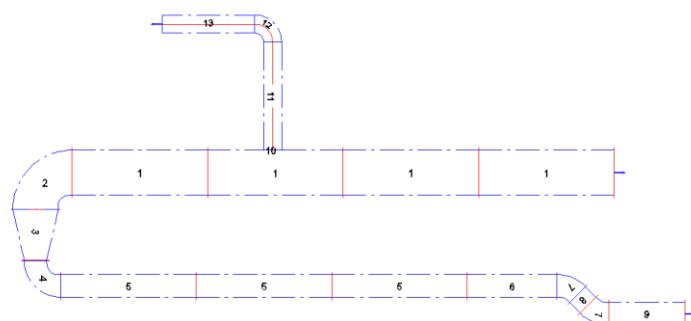

Product code + Material /Holed Duct


Same like before, but ducts with a hole inside, e.g. for grills or branches, will get an individual number.

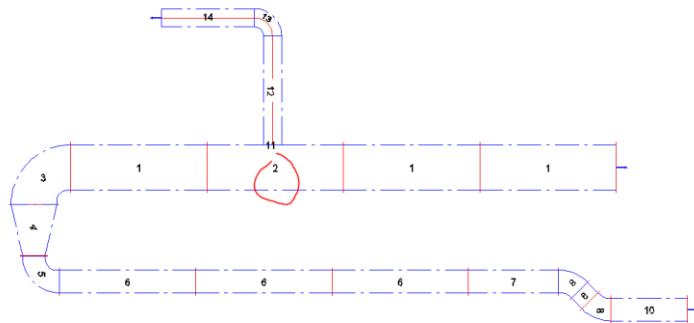

Piece label format:

A piece label can be an individual number (Piece Number) or a code that is build out of several informations.

The format of the piece label can be selected in the drop down menu of the Piece label Format

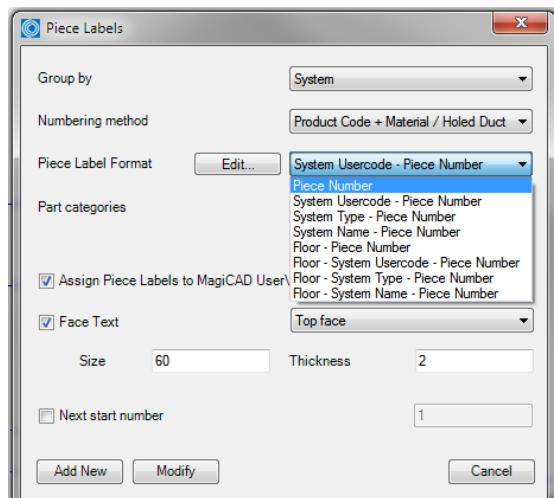


Piece label format selection menu

Edit:

The Edit function allows you to select Piece Label Formats and to edit the information you show in the piece label.

Press Edit... and the Piece Label Format window opens.

The window is structured into 3 parts:

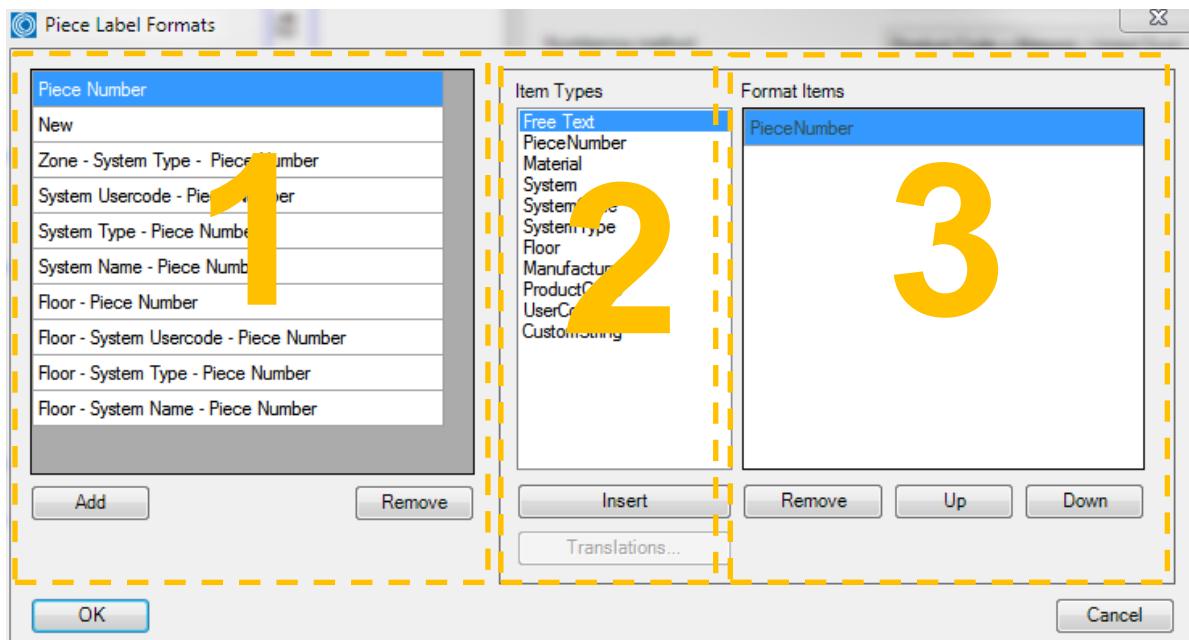

Piece Label Format dialog

Part 1: Piece label Formats – here you can find and save your piece label formats.

Part 2: Item Types – Variables you can use to create your piece label


Part 3: Format Items – This is the editor area to build Piece labels

If you push the “Add” button you can create new formats. By double-clicking on an “Item Type” the value will be attached to the editor, so you can create your own piece labels.

The “Up” and “Down” buttons allow you to change the sorting of the piece label items.

Sample:

Piece label template “Floor – Piece number”

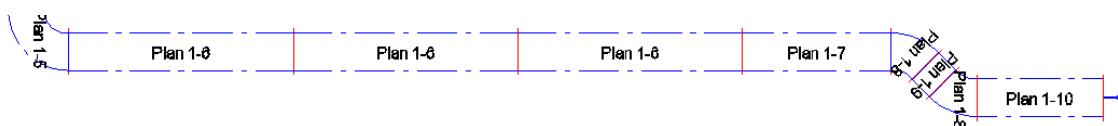



Translations


The button “Translations” allows the user to add specific data or values to be shown in the piece label item.

Mark an Item Type and press *Translation*

NOTE: For certain items – Material, System, SystemCode, SystemType and Floor - the CADvent plugin reads the existing information from the MagiCAD project.

Just click into the field for “Original value” and select one of the listed values or type your own.


New values like a new system will NOT be created as new system in MagiCAD!

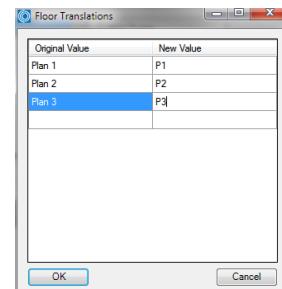

Translations dialog

Sample:

Piece label template “Floor – Piece number” with above “Floor Translation”



Part categories

You can select to which product types you want to assign a piece-label by selecting/deselecting the three product groups Round Ductwork, Rectangular Ductwork and Air Terminals.

Assign Piece Labels to MagiCAD UserVar2

If you mark the check button for “Assign Piece Labels to MagiCAD UserVar2” they can also be shown in the drawing by texting objects with the MagiCAD User Variable 2.



Face Text



The Piece labels can be visualized in the drawing with a Face Text. You can chose between two options:

Top Face

Required for 2D and wireframe visualizations

Multiple Faces

Required for 3D shaded visualization

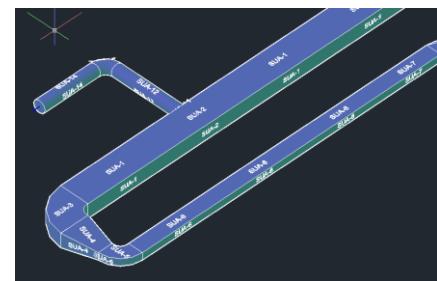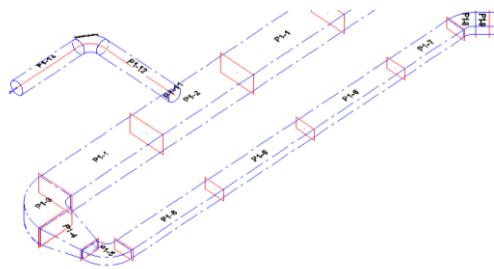

2D Wireframe visualization with Top Face Piece labels and conceptual visualization with Multiple Faces labels


Next start number

Next start number allows the user to select a self-defined start number for the numbering.

Note: The given number is used as minimum number. Does the given number already exist in the drawing, CADvent will choose the next free number!

Add New

Press the Add New button to start the piece label process. Click on a part of the system you like to label. If the system you like to label contains more than one open end, all open ends will be visualized in a table and marked with a circle. Select the open end where the labeling shall start.

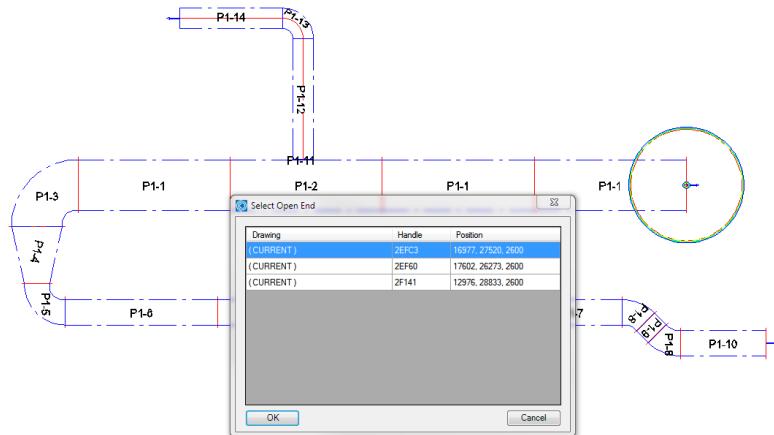

Visualization of multiple open ends to select where to start the piece labeling

Note: Add New changes not already created numbers. Once a system is numbered Add New can be used to add new components to be provided with new numbers.

Modify Piece labels

Modify

To modify existing piece labels press Modify. A window with different options appears:



Modify options

Overwrite all

Deletes all Piece Labels and creates immediately a new piece labeling for all components of the selected system. Hereby the next selected Piece Number is the next free number after the highest used number.



Clear all system


Deletes the Piece Labels for all components of the selected

Clear selection

Deletes the Piece Label only for selected components

Properties


By the AutoCAD property dashboard you can find the piece label within the CADvent area. If you have selected the option *Assign Piece Labels to MagiCAD UserVar2* you can find the piece label also listed in the MagiCAD informations.

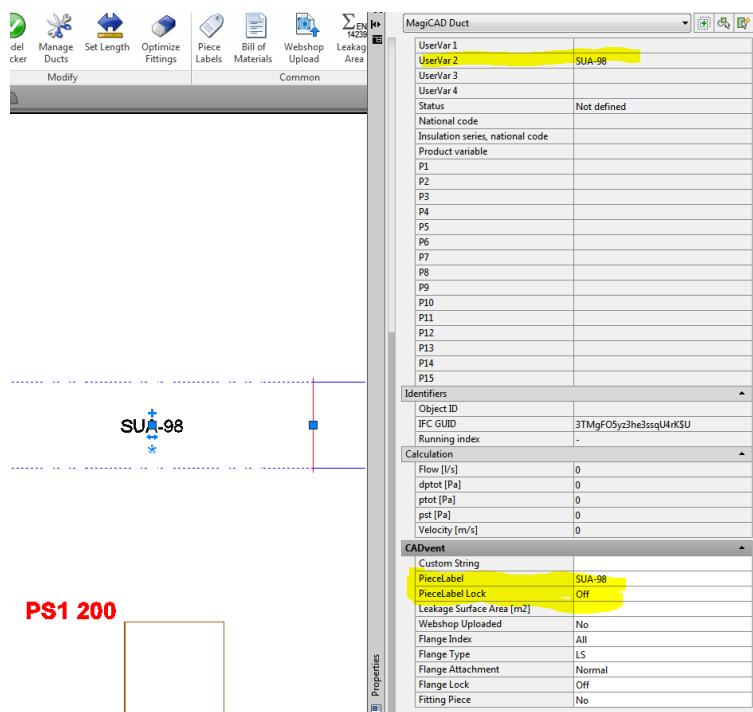

Manually changes of the Piece label.

Changing the piece label manually is possible inside the CADvent area of the properties.

1. Change the PieceLabel text
2. Active the PieceLabelLock (ON) to secure, that the automatical piece labeling does not overwrites your text.

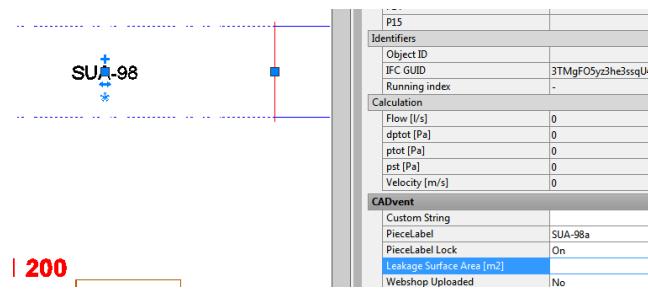

3. Activate the CADvent piece label function and press Add New

This will change the visualized piece label and writes the manual given text to the MagiCAD UserVar 2


Changes of the system

Changes in the system need almost an update of the piece labels. As soon as order processes have already been started, changes of existing piece labels are taboo.


How to handle changes in the system:

Sample:

Below you can see a duct system with final piece label

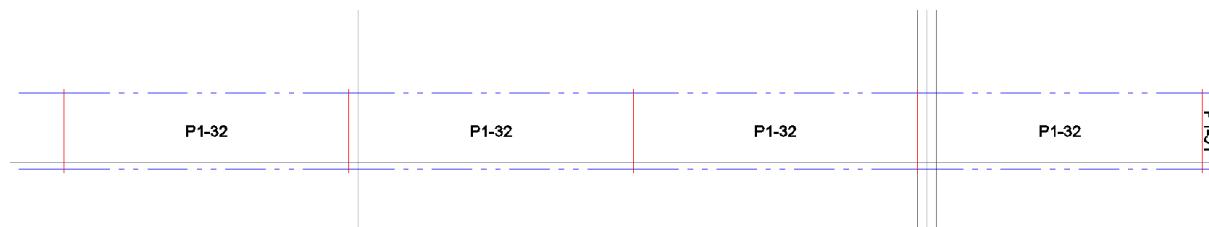


After the order process has already been started the middle duct shall be set a few cm down, to give some space for heating pipes. As long as the same ducts are used, the piece label will not change, not even when the duct length has been changed.

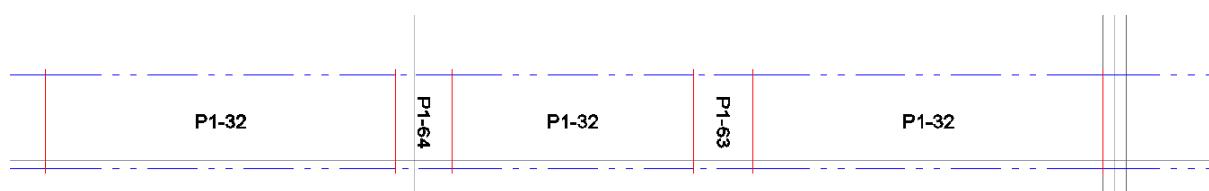




For situations like this, you have to use the modify option *Clear Selection* to delete the piece label of the changed duct and use *Add New* for this system. The new components will get a new piece label. The next free number from the highest existing will be used.

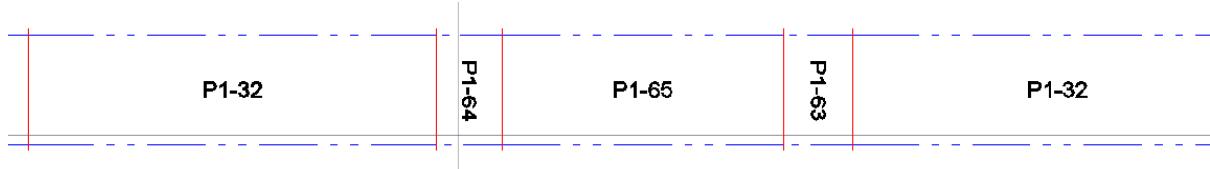

OR

You change the piece label manually. The sample shows a labeling according to the previous number with additional letters.

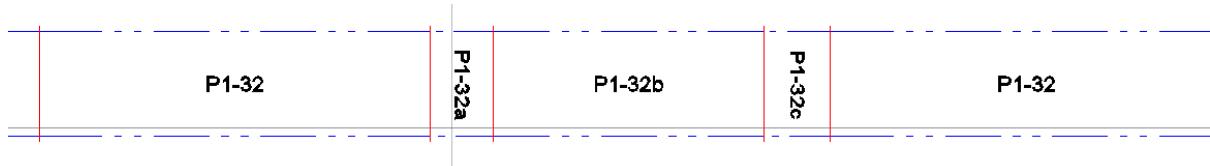



Bill of Materials




Bill of
Materials

Push the button for Bill of Materials and drag a window over the Lindab products which shall be included on the BoM reports.

Two reports will appear: One report for the rectangular ducts and another report for circular ducts and technical components.

You can decide whether you want to show the piece-label on the report or if you want to suppress it by checking/unchecking the show piece-label function

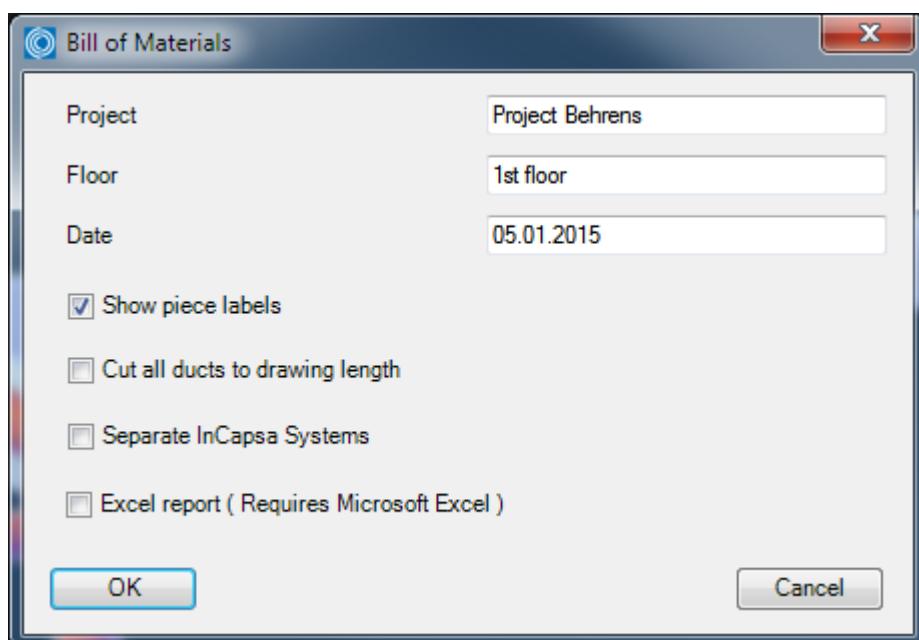

Dialog for Bill-of-Materials

Find more info about “Separate InCapsa Systems” at “Create Bill of Material for InCapsa Systems”

Cut all ducts to drawing length

Without active checkbox the BoM will summarize all round ducts into standard lengths, set in the Manage Ducts command, except the drawn ducts will have a length of 3000 or 6000mm (Lindab Standard)

**Stykliste**

Projekt			Test MagiCAD								
Afsnit			1st floor								
Dato			2011-05-24								

CADvent Plugin 1.0.51 for MagiCAD

LKR	Pos. nr.	Antal	a	b	h	I				flange 1	flange 2	flange 3
	6	1	600	400	400	800				LS	LS	LOOSE
		14	600	400	400	978				LS	LS	

ILRU	Pos. nr.	Antal	I	r	s				flange 1	flange 2	flange 3
	7	1	25	25	0				LS		
		1	25	25	0				OTHER		

LBR	Pos. nr.	Antal	a	a1	a2	angle	b	I1	I2	r	s	flange 1	flange 2	flange 3
		1	90	400	400	90	250	25	25	100		LS	LS	
		1	90	400	400	90	250	25	279	100		LS	LS	
	17	1	90	500	500	90	250	287	25	100		LS	LS	
		1	90	600	600	90	400	25	25	100		LS	OTHER	
	5	3	90	600	600	90	400	25	25	100		LS	LS	

LDR	Pos. nr.	Antal	a	b	c	d	e	f	h	I	I1	flange 1	flange 2	flange 3
	19	1	500	250	400	150	0	0	50	450		LS	LS	
	15	1	600	400	500	250	-50	50	75	450		LS	LS	

Rectangular Report:**Stykliste**

CADvent Plugin 1.0.51 for MagiCA

Projekt	Test MagiCAD
Afsnit	1st floor
Dato	2011-05-24

Type / Producent / Materiale	Produktkode	Pos. nr.	Antal
------------------------------------	-------------	----------	-------

Kanaler

Lindab

Galvanized

SR-160-3000		2
SR-200-3000	7	3
SR-250-3000		2
SR-315-3000	3	5

Andet

GENERIC

Galvanized

GENERIC Fitting 400x250 / 400x250 / 300x200		1
GENERIC Reducer 160 / 200		1
GENERIC Reducer 160 / 250		1



Circular report and technical components:

Products which are not following the rules for a production model are listed with their connection information and type as generic objects.


The reports can be exported as PDF or to Excel.

Lengths on BoM

Without active checkbox the BoM will summarize all round ducts into standard lengths, set in the Manage Ducts command, except the drawn ducts will have a length of 3000 or 6000mm (Lindab Standard)

Sample 1:

1. Draw a 22m long duct
2. Activate the duct cut length to 2500mm, without placing connectors.

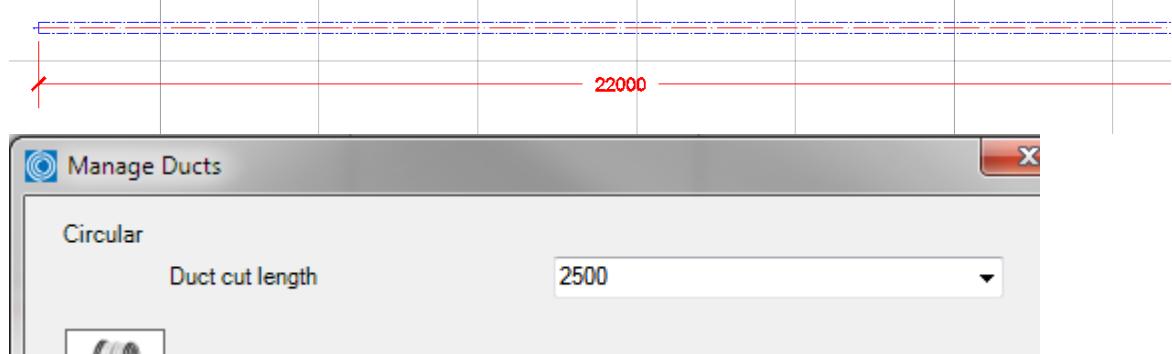

3. Result on Bill of Materials.

Lindab
galv. Metal
SR-200-2500

9

The material list summarizes all ducts per size and divides the total length into 2500mm pieces.

Sample 2:

1. Do the same process like above and activate a Duct cut length of 3000mm
2. Insert connectors.
3. Change the Duct cut length to 2500 mm without inserting any connector.



4. Result on Bill of Materials

Lindab

galv. Metal

SR-200-2500	1
SR-200-3000	7

Lindab

galv. Metal

NPU-200	7
---------	---

The material list summarizes all ducts per size and divides the total length into 2500mm pieces, except all pieces with 3000 and 6000mm, these will be listed separately.



Note: The division of the lengths in standard and special lengths does only work with 3000 and 6000mm lengths.

Sample 3:

1. Do the same process like above and activate a Duct cut length of 2000mm
2. Insert connectors.
3. Change the Duct cut length to 2500 mm without inserting any connector.
4. Result on Bill of Materials

Lindab

galv. Metal

SR-200-2500	9
-------------	---

Lindab

galv. Metal

NPU-200	10
---------	----

The material list summarizes all ducts per size and divides the total length into 2500mm pieces, except all pieces with 3000 and 6000mm, these will be listed separately. In the last sample we do not have 3 or 6m ducts, only 2m ducts.

Note: The BoM process does not read the “real” duct lengths, except for 3 and 6m long ducts, therefore the 2m splitting has no effect on the order list for ducts, but it has direct effect on the amount of connectors!



Cut all ducts to drawing length

This options will list ALL real duct length on the BoM.

BoM from Sample 1:

Lindab	
galv. Metal	
SR-200-22000	1

BoM from Sample 2:

Lindab	
galv. Metal	
SR-200-3000	7
SR-200-951	1

Lindab	
galv. Metal	
NPU-200	7

BoM from Sample 3:

Lindab	
galv. Metal	
SR-200-1930	1
SR-200-2000	10

Lindab	
galv. Metal	
NPU-200	10

Webshop Upload




Webshop
Upload

The webshop upload is currently only available in DK, SE, NO, UK. Push the button and select the products which you want to upload, then a selection dialog and afterwards a login dialog will open:



The connection to the webshop requires a login account. Please contact Lindab or fill out the New User Request form in your local Webshop: <https://eshop.lindab.com/>

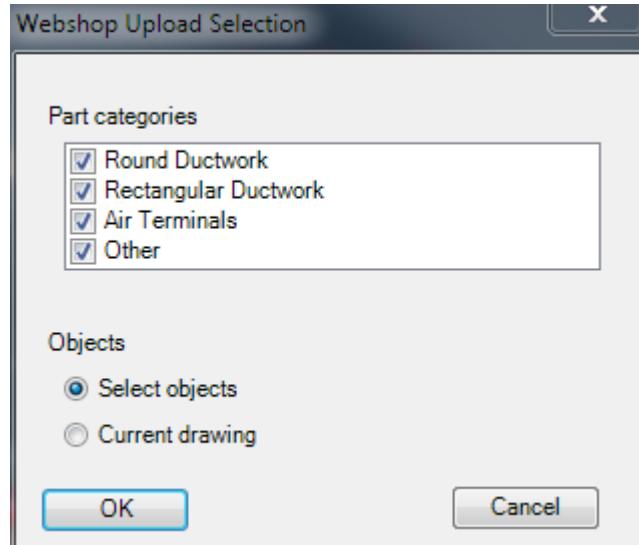


Selection for Lindabs Webshop Upload

Select the part categories you want to upload to Lindabs Webshop. The option “Select objects” allows the user to select the products manually for the upload and “Current drawing” will upload all products from the current drawing, which are in the activated part category.

Press OK

In case of several uploads it can happen that you pick already uploaded objects which will be shown in a dialog.

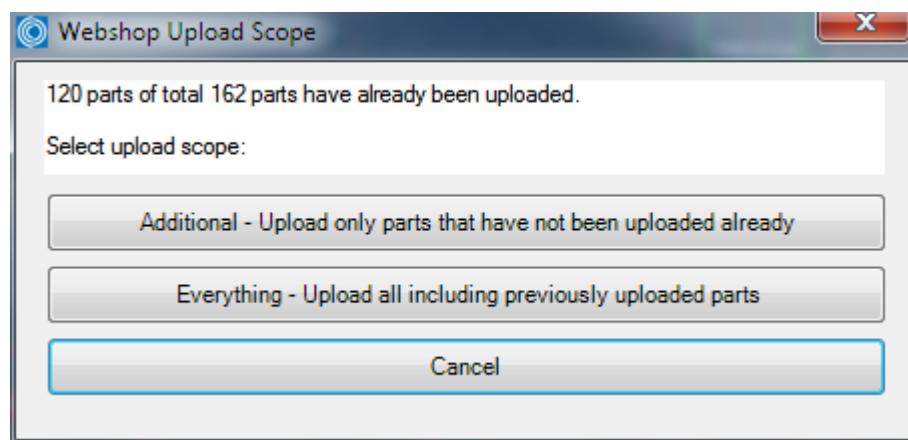


Multiple product upload dialog



You can then upload only additional products which have not been uploaded before, all products again or cancel the upload procedure.


The Webshop Upload window appears

Type in your Username and Password and press "Connect"

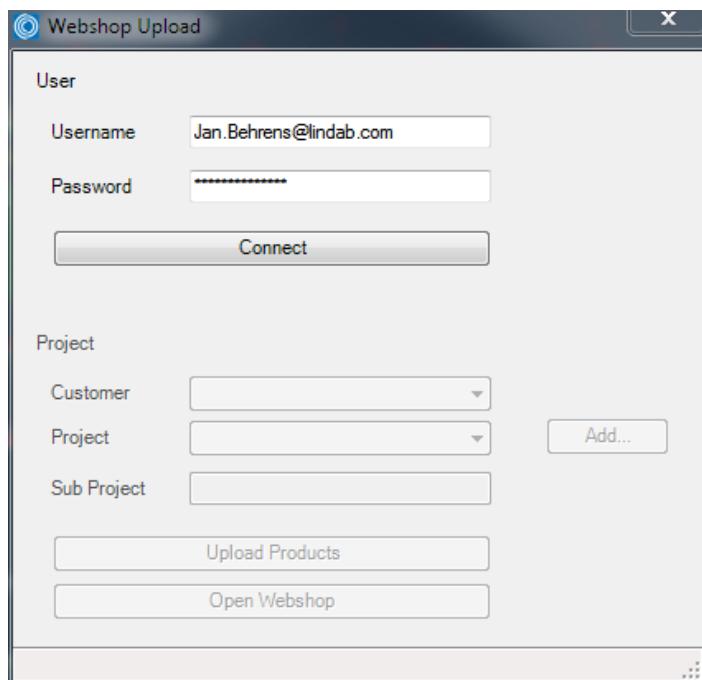


Lindabs Webshop Upload window before Connect

If the combination of Username and Password is not valid, following message appears:

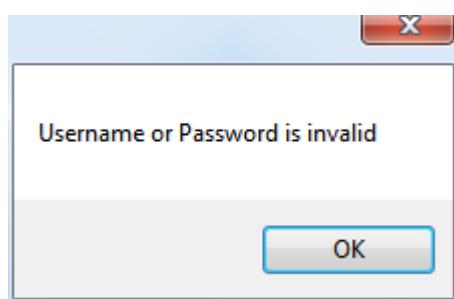

For a valid combination the project fields get active:

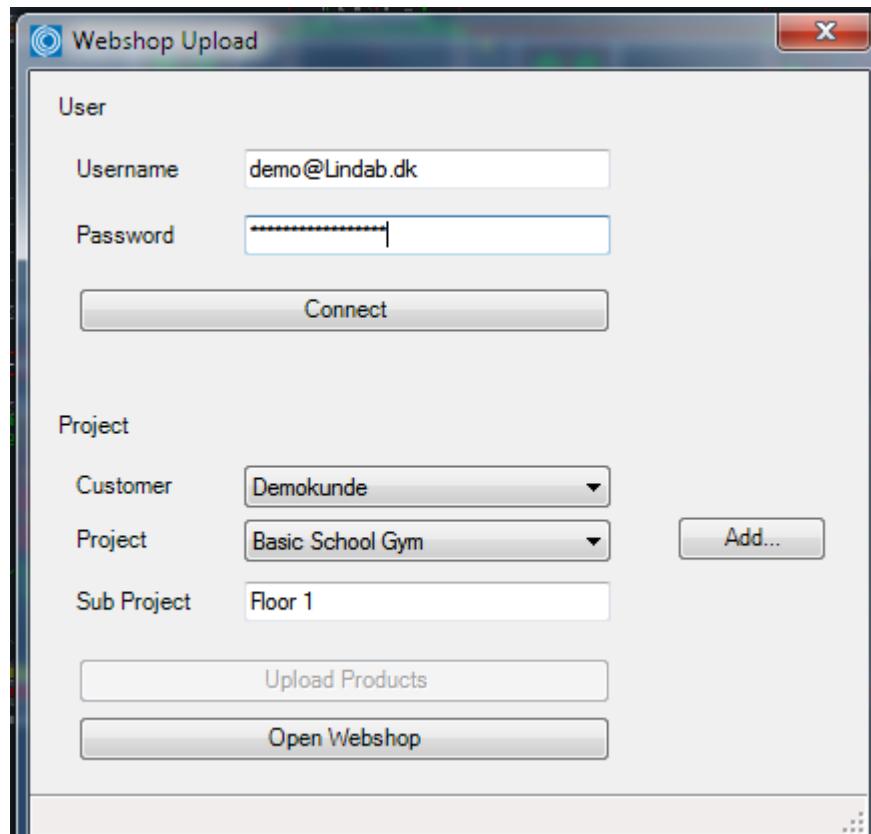


Lindabs Webshop Upload window after successful connection

Select “Customer” and “Project” or create a new project using the “Add” button.

With “Sub Project” you can add the order name for this upload in your project.

Push “Upload Products”.

A dialog shows that the transaction was successful:

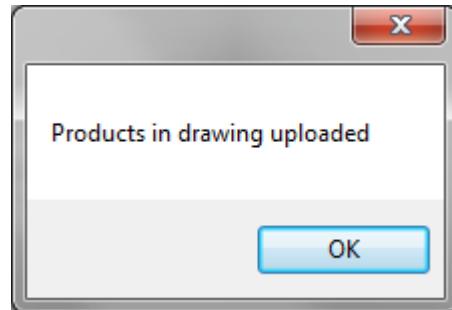

Upload OK dialog for Lindab Eshop




Push the button “Open Webshop” to open Lindabs Webshop on your web browser.

Lindab Webshop

<https://eshop.lindab.com/>

This chapter will explain how to handle project uploads in the Lindab Webshop.

Note! The following images are based on Lindab Webshop Denmark. Other markets may have a different Webshop layout!

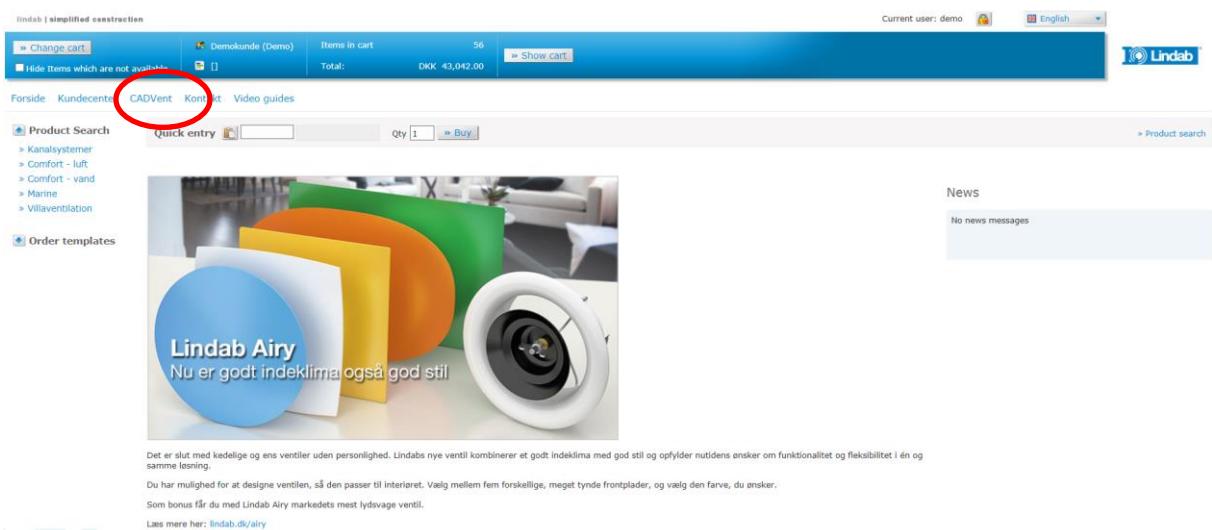


The screenshot shows the Lindab Webshop frontpage. At the top, there is a navigation bar with links for 'Change cart', 'Demokunde (Demo)', 'Items in cart' (56), 'Total: DKK 43,042.00', 'Show cart.', 'Current user: demo', 'English', and the Lindab logo. Below the navigation bar, there are links for 'Forside', 'Kundecenter', 'CADVent' (which is circled in red), 'Kontakt', and 'Video guides'. A 'Product Search' bar is present with a 'Quick entry' field and a 'Buy' button. The main content area features a large image of a white Lindab Airy ventilation unit with a blue circular graphic overlay containing the text 'Lindab Airy Nu er godt indeklima også god stil'. Below the image, there is a brief description in Danish: 'Det er slut med kedelige og ens ventilér uden personlighed. Lindabs nye ventil kombinerer et godt indeklima med god stil og opfylder nutidens ønsker om funktionalitet og fleksibilitet i én og samme løsning.' and 'Du har mulighed for at designe ventilén, så den passer til interiøret. Vælg mellem fem forskellige, meget tynde frontplader, og vælg den farve, du ønsker. Som bonus får du med Lindab Airy markedets mest lydsuge ventilé.' A 'Læs mere her: lindab.dk/airy' link is also present. On the right side, there is a 'News' section with a message 'No news messages'.

Lindab Webshop Frontpage

Press “CADvent” (Import)

A project list presents all your projects

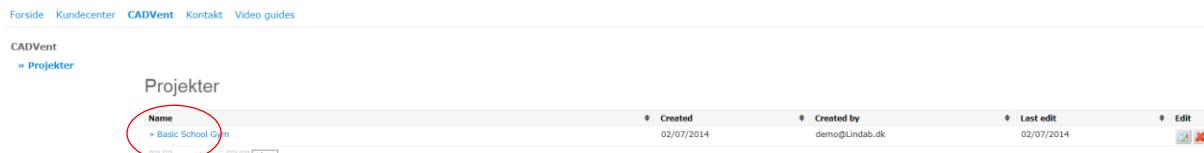

The screenshot shows the Lindab Webshop project list. The navigation bar includes 'Forside', 'Kundecenter', 'CADVent' (circled in red), 'Kontakt', and 'Video guides'. Below the navigation bar, there is a 'Projekter' section with a table showing project details. The table has columns for 'Name' (with a link to 'Basic School Gym'), 'Created' (02/07/2014), 'Created by' (demo@Lindab.dk), 'Last edit' (02/07/2014), and 'Edit' (button). At the bottom of the table, there are buttons for 'Ny', 'Ny', 'Ny', and 'Ny'.

Lindab Webshop Project List

Click on your current project

The project opens and all sub projects will be presented



Basic School Gym

Name	Status	Drawing	Created	Created by	Last edit	Edit
> Floor 1	Sent to Cart	MC 2012.11 Test for comparison with CV.dwg	02/07/2014	demo@Lindab.dk	02/07/2014	
> Floor 2	Received	Basic School Gym.dwg	02/07/2014	demo@Lindab.dk	02/07/2014	

Lindab Webshop Sub Project List

You have following options:

Name: Name of the sub project, activation of the link opens the product list

Status: Received = A product list has been uploaded

Approval settled = The products have been checked by the order system

Sent to cart = Products have been added to the order cart

Drawing: Name of the drawing that is used for the upload

Created: Date when the project has been created

Created by: Username

Last edit: Date of last modification

Edit: Change Name of sup project or delete the sub project

Activate the name of your sub project to open the material list

Basic School Gym » Floor 2


Status: Received	Drawing: Basic School Gym.dwg	
Created by: demo@Lindab.dk Created: 02/07/2014		
	31 Received	0 Approved
0 Add to chart	0 Incomplete	0 Failed
Name	Comment	Qty
RCFU 250 200		1
RCFU 315 160		1
RCFU 315 250		1
RCU 400 315		2
SNPU 160 150		10
TCPU 200 125		1
SR 125 3000		3
SR 160 3000		7
SR 160 400		1

Lindab Webshop product list

This list contains all products from the upload.



The next step is to verify all products. Pressing “Approve” starts a verification process if all products are according to the Lindab order rules.

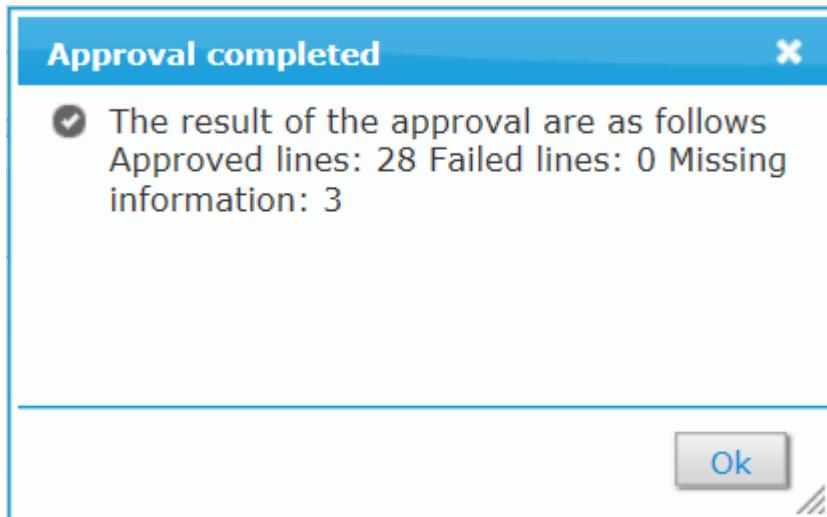

Lindab Webshop product verification

The window above appears and tells the user, that 28 products fit to the order rules, no product upload failed and 3 products contain missing information!

The result is automatically transferred into the specific tables:

Basic School Gym » Floor 2

Status: Approval settled	Drawing:Basic School Gym.dwg	Transfer to cart
Created by:demo@Lindab.dk	Created: 02/07/2014	


0 Received	28 Approved	0 Add to chart	3 Incomplete	0 Failed
-------------------------	--------------------------	-----------------------------	---------------------------	-----------------------

Name	Comment	Qty	Pos. in drawing	Status	Delete
RCFU 250 200		1	0	Approved	
RCFU 315 160		1	0	Approved	
RCFU 315 250		1	0	Approved	
RCU 400 315		2	0	Approved	
SNPU 160 150		10	0	Approved	
SR 125 3000		3	0	Approved	

0 Received	28 Approved	0 Add to chart	3 Incomplete	0 Failed
3 Incomplete items				
Name	Comment	Qty	Pos. in drawing	Status
LRCA 400 1000		3	0	Missing information 
MBBV 125 160 S		6	0	Missing information 
MBBV 160 200 S		11	0	Missing information 

The sub project status is changed into “Approval settled”

All applied products can now be transferred to the order basket with "Transfer to cart".

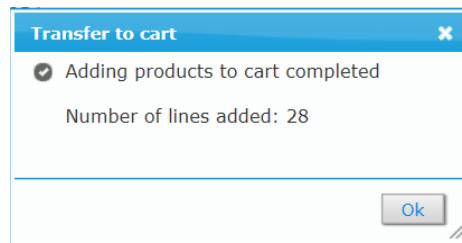

The screenshot shows the Lindab simplified construction software interface. At the top, there is a navigation bar with links for 'Change cart', 'Demokunde (Demo)', 'Items in cart' (28), 'Total: DKK 21,521.00', and a red-circled 'Show cart.' button. Below the navigation bar, the page title is 'Basic School Gym » Floor 2'. The page content includes a table of products with columns for Name, Comment, Qty, Pos. in drawing, Status, and Delete. The table lists various components like RCFU 250 200, RCFU 315 160, etc., with their respective details.

Name	Comment	Qty	Pos. in drawing	Status	Delete
RCFU 250 200		1	0	Sent to basket	
RCFU 315 160		1	0	Sent to basket	
RCFU 315 250		1	0	Sent to basket	
RCU 400 315		2	0	Sent to basket	
SPU 160 150		10	0	Sent to basket	
TCPU 200 125		1	0	Sent to basket	
SR 125 3000		3	0	Sent to basket	
SR 160 3000		7	0	Sent to basket	

Now all products that have been verified from the order system have been placed in the order basket. The project status is changed to “sent to cart”

The value of the current basket is presented in the top bar. The basket can be opened with “show cart”.

The Shoppingbasket is the current order list. You can add components, change the amount of products or add comments to the products.

Products that have been appeared on the table “Incomplete” can be manually added to the order list. Type in the product code in the “Quick entry” field:



1. Shoppingbasket 2. Order information 3. Delivery 4. Confirmation

Save order template Load order template

Quick entry

Product no.	Description	Gross Price	Net Price	Discount%	Qty	Net Amount
507233	KSU 100 Exhaust air KSU 100 valve w/o frame	95.00	95.00		1	95.00
249812	TCPU 400 200 GALV Tee-pieces TCPU 400.200	559.00	499.00	-10.00	1	499.00
249810	TCPU 400 160 GALV Tee-pieces TCPU 400.160	559.00	499.00	-10.00	1	499.00
249772	TCPU 315 315 GALV Tee-pieces TCPU 315.315	371.00	333.00	-10.00	1	333.00
249762	TCPU 315 125 GALV Tee-pieces TCPU 315.125	278.00	250.00	-10.00	1	250.00
249702	TCPU 250 125 GALV Tee-pieces TCPU 250.125	278.00	250.00	-10.00	1	250.00
249670	TCPU 200 160 GALV Tee-pieces TCPU 200.160	278.00	250.00	-10.00	1	250.00
249667	TCPU 200 125 GALV Tee-pieces TCPU 200.125	278.00	250.00	-10.00	1	250.00
256508	RCFU 200 160 GALV Reducers RCFU 200.160	105.00	95.00	-10.00	1	95.00
256507	RCFU 200 125 GALV	105.00	95.00	-10.00	1	95.00

Quick entry lrc400

Product no.	Description
507233	KSU 100 Exhaust air KSU 100 valve w/o frame
249812	TCPU 400 200 GALV Tee-pieces TCPU 400.200
249810	TCPU 400 160 GALV Tee-pieces TCPU 400.160
249772	TCPU 315 315 GALV Tee-pieces TCPU 315.315
249762	TCPU 315 125 GALV Tee-pieces TCPU 315.125
249702	TCPU 250 125 GALV Tee-pieces TCPU 250.125
249670	TCPU 200 160 GALV Tee-pieces TCPU 200.160
249667	TCPU 200 125 GALV Tee-pieces TCPU 200.125
256508	RCFU 200 160 GALV Reducers RCFU 200.160
256507	RCFU 200 125 GALV

Type in the amount and press "Buy". The selected product will be listed in your basket.

1 >> Buy

Product no.	Description
278903	LRCA 400 1000 GALV Silencer LRCA 400.1000
507233	KSU 100 Exhaust air KSU 100 valve w/o frame
249812	TCPU 400 200 GALV

Press "Next" to go ahead with the order.

Press the Excel Symbol to transfer the list to Microsoft Excel.

Press "Clear cart" to delete all products from the basket.

Press "Delete selected order lines" to delete individual products from your order list.



Reducers RCFU 250.200	25,621.00
Total	25,621.00

You can find this features at the end of your order list.

“Next” forwards you to “Order Information”

Please fill out all relevant fields and select a “requested shipping date”

1. Shoppingbasket 2. Order information 3. Delivery 4. Confirmation

Delivery address

Invoice address

Same as invoice address

Select existing address

Enter address

Pickup address

Name	<input type="text"/>
Address	<input type="text"/>
	<input type="text"/>
	<input type="text"/>
Full Valid Postcode	<input type="text"/>
City	<input type="text"/>
Country	<input type="text"/>

Order information

Project name	Basic School Gym	Customer contact person	demo
Contact Phone No		Customer order number	
Requested shipping date	03/07/2014 * 	Customer reference	Jan Behrens
Comment	<div style="border: 1px solid black; height: 100px; width: 100%;"></div>		



The system checks the delivery time of each product and offers a dispatch date without part deliveries. Activate Split delivery to deliver into parts.

Split delivery allows to change the delivery date for each component:


Requested shipping date: 03/07/2014

⚠ Earliest dispatch date without part deliveries: 07/07/2014

Split delivery

Product number **Description** **Gross Price** **Net Price** **Discount%** **Qty** **Net Amount** **Anticipated Shipping Date**

Product number	Description	Gross Price	Net Price	Discount%	Qty	Net Amount	Anticipated Shipping Date
LRCA4001000	LRCA 400 1000 GALV Silencer LRCA 400.1000	4,100.00	4,100.00		1	4,100.00	07/07/2014
KSU100	KSU 100 Exhaust air KSU 100 valve w/o frame	95.00	95.00		1	95.00	07/07/2014
TCPU400200	TCPU 400 200 GALV Tee-pieces TCPU 400.200	559.00					07/07/2014
TCPU400160	TCPU 400 160 GALV Tee-pieces TCPU 400.160						07/07/2014
TCPU315315	TCPU 315 315 GALV Tee-pieces TCPU 315.315						07/07/2014
TCPU315125	TCPU 315 125 GALV						07/07/2014



NOTE! A part delivery always contains a higher delivery cost!

All products with same delivery time will be summarized in the order table:

Requested shipping date: 03/07/2014		<input checked="" type="checkbox"/> Split delivery 
Product number	Description	Anticipated Shipping Date
Anticipated Shipping Date: 03/07/2014		
TCPU250125	TCPU 250 125 GALV Tee-pieces TCPU 250.125	03/07/2014 
TCPU200160	TCPU 200 160 GALV Tee-pieces TCPU 200.160	03/07/2014 
TCPU200125	TCPU 200 125 GALV Tee-pieces TCPU 200.125	03/07/2014 
RCFU200160	RCFU 200 160 GALV Reducers RCFU 200.160	03/07/2014 
RCFU200125	RCFU 200 125 GALV Reducers RCFU 200.125	03/07/2014 
BU16090	BU 160 90 GALV Bends pressed RII 160 90	03/07/2014 
.....		



RCFU315160	RCFU 315 160 GALV Reducers RCFU 315.160	03/07/2014
RCFU250200	RCFU 250 200 GALV Reducers RCFU 250.200	03/07/2014
Anticipated Shipping Date: 09/07/2014		
LRCA4001000	LRCA 400 1000 GALV Silencer LRCA 400.1000	09/07/2014
KSU100	KSU 100 Exhaust air KSU 100 valve w/o fram	09/07/2014
TCPU400200	TCPU 400 200 GALV Tee-pieces TCPU 400.200	09/07/2014
TCPU400160	TCPU 400 160 GALV Tee-pieces TCPU 400.160	09/07/2014
TCPU315315	TCPU 315 315 GALV Tee-pieces TCPU 315.315	09/07/2014
TCPU315125	TCPU 315 125 GALV	09/07/2014
....		

Activate the checkbox “Approve order” and press “Approve order” to activate the order of the list of components.

Reducers RCFU 250.200

Total
<input checked="" type="checkbox"/> Approve order
« Prev » Approve order



Add Space




The 3D Space element gives the user the possibility to create 3D objects in the drawing to create zones. The zones can be created as simple rectangular boxes (default) or as Polyline (Type P in the command Line, or activate Polyline on the right click menu) to create zones which follow the architecture.

The Space object allows the user to divide the drawing into several rooms or zones which can be uploaded to LindQST, the Lindab Quick Selection Tool, for selecting and calculating water and air products.

Rectangular rooms:

- Activate the *Add Space* command.
- Click on one edge of the room
- Click on the opposite edge of the room

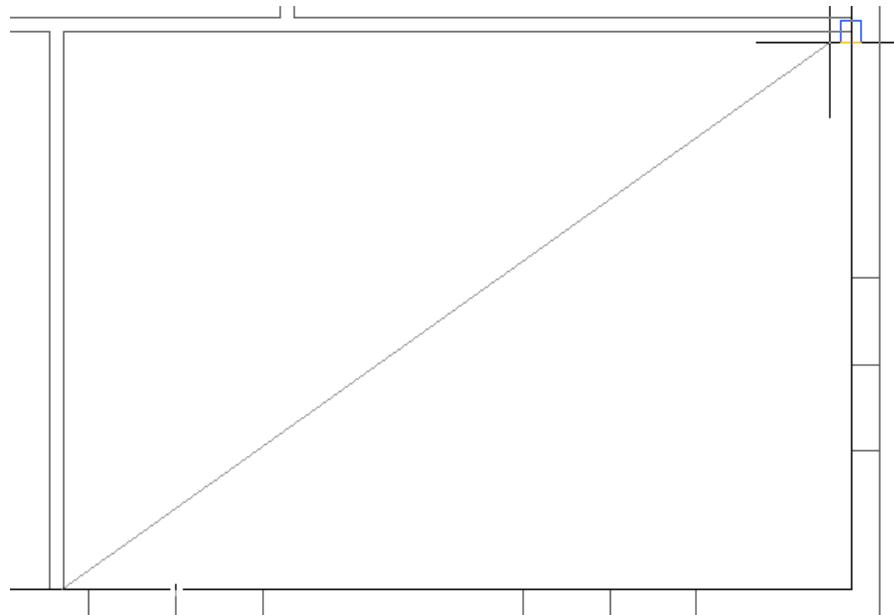


Define a rectangular space object

Non rectangular room:


- Activate the *Add Space* command.
- Type P in the command line to activate the polyline command
- Click on one edge of the room
- Follow the walls of the room, by clicking on each edge

- Stop at the last edge and type D (done) to close the Polyline

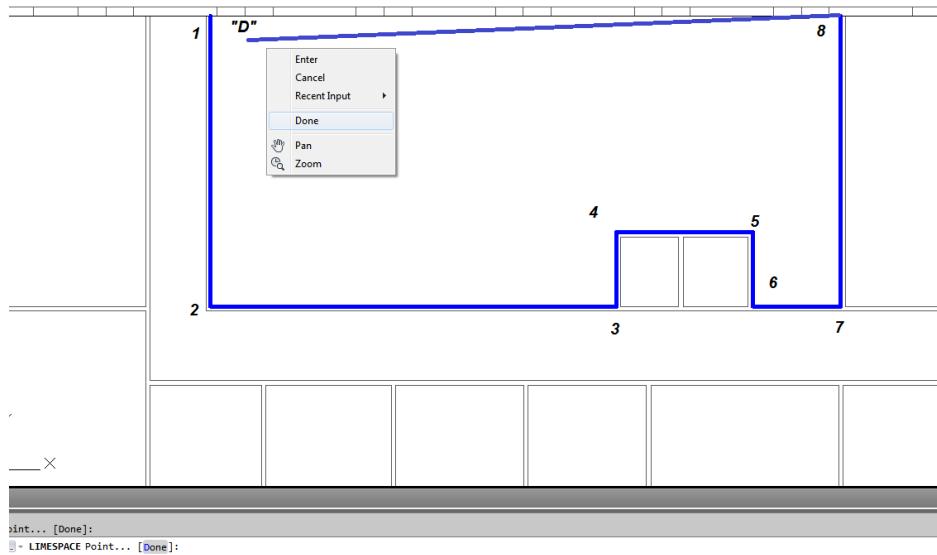

Define a non-rectangular space object

When you have created a zone you can change the parameter in the AutoCAD Properties to define the requirements for the room.

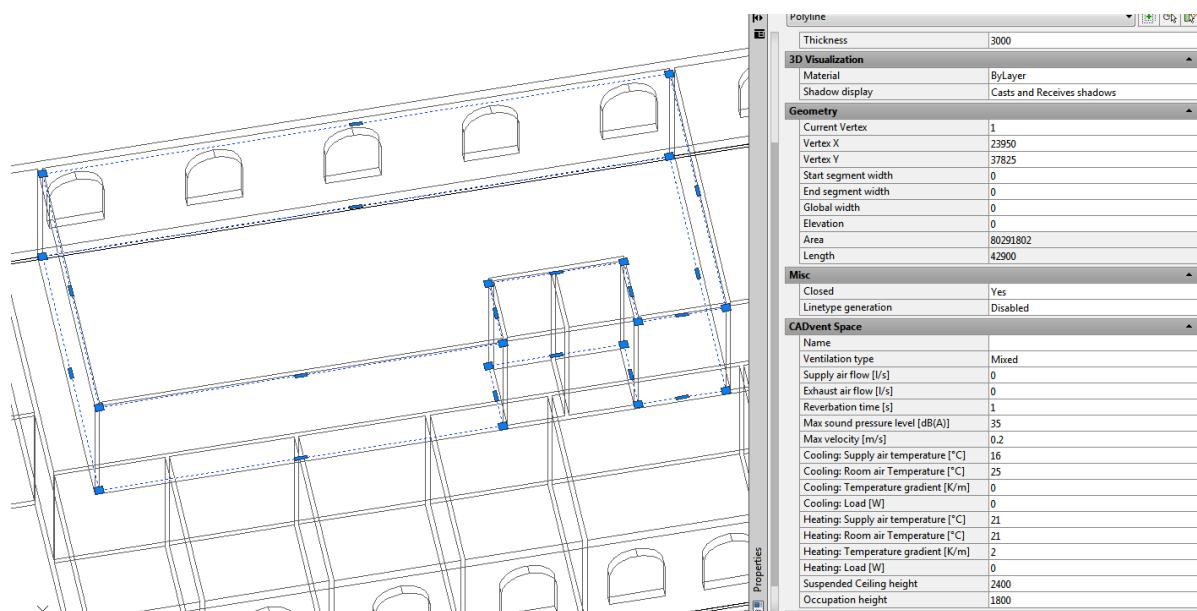

CADvent Space in drawing with AutoCAD properties

Thickness:

Height of the space object

Name:

Name of the Room/ Zone (**required**)



Ventilation Type:	Mixed, Displacement or Chilled Beams
Supply and Exhaust air flow in l/s:	Total air volume for this room/space
Reverberation time in s:	Sound reverberation time
Max. sound pressure level in dB(A):	Max allowed sound level in the occupied zone
Max. velocity in m/s:	Allowed average air velocity in the occupied zone
Occupation distance:	Max. distance from displacement unit where the air velocity is allowed to prevail
Cool./Heat. Supply air temp. in °C:	Temperature of the supply air
Cool./Heat. Room air temp. in °C:	Temperature of the room air
Cool./Heat. Load in W:	The required power for the room
Suspended ceiling height:	Distance from floor to suspended ceiling
Occupation height:	Height of the occupancy zone

You can edit the zone afterwards by dragging on the AutoCAD Grip points in the corners or on the lines.

lindQST Upload




After creating rooms / zones with the Add Space command you can upload the spaces into lindQST.

Note: The upload is not limited to a single room. You can upload multiple rooms in one process.

1. Activate the lindQST Upload command
2. Mark all spaces you like to update to your project in lindQST.

Note: You can all time add more spaces to your project in lindQST

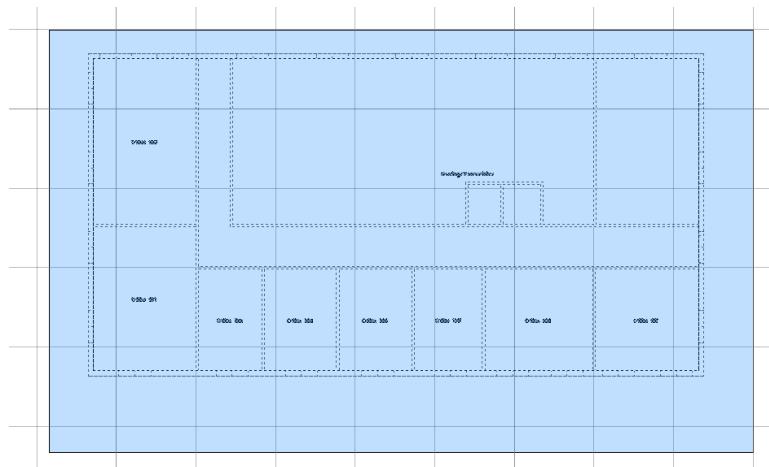


Mark multiple CADvent spaces for the upload to lindQST

3. Accept your selection with Enter
4. A browser window opens and ask you to log in.
5. Please enter your login data or register for the project area in LindQST

lindQST welcome page for non registered or logged out users

6. The following window allows you to add the spaces to an existing or a new project. Please select your choice from the drop down menu
If you chose an existing project, you can select from existing floors or add a new.

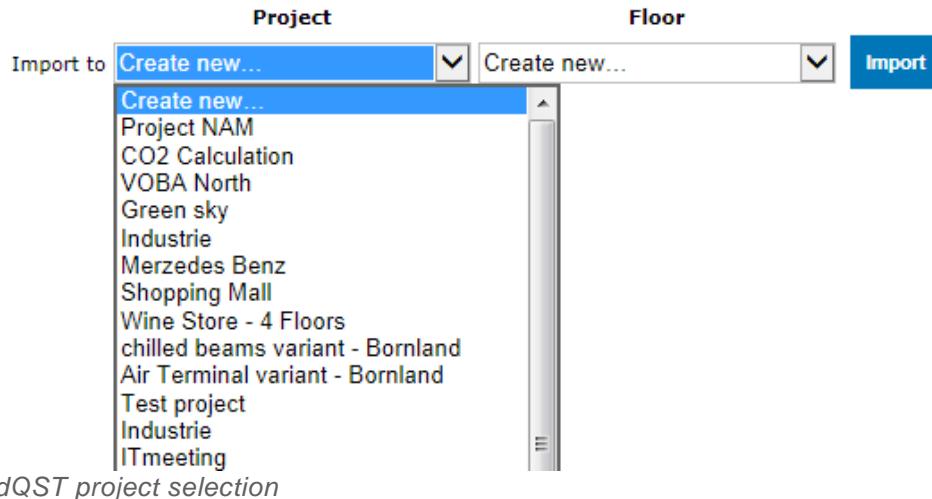

7. If you select 'Create new...' for project and floor. Lindqst will automatically name the project and floor „AutoCAD“, which you can rename in a later state.

Import AutoCAD Space

Import completed. [Project Manager](#)

lindQST verification of the project upload and link to Project Manager


8. The import complete message confirms the correct upload process. Using the Project Manager link jumps you directly to your project in lindQST.

The screenshot shows the lindQST software interface. At the top, there is a toolbar with icons for file operations. Below the toolbar, a tree view shows a project structure under 'AutoCad'. The structure includes a root 'AutoCad' node and several sub-nodes labeled 'Office 100 (Mixing)', 'Office 101 (Mixing)', 'Office 102 (Mixing)', 'Office 103 (Mixing)', 'Office 104 (Mixing)', 'Office 105 (Mixing)', 'Office 106 (Mixing)', 'Office 107 (Mixing)', and 'Meeting Presentation (Mixing)'. On the right side of the interface, there is a 'Results' tab and a 'Velocity diagram' tab. The 'Results' tab is active, displaying a table of ventilation parameters and their results. The table has four columns: 'Ventilation type', 'Mixing Required Result', 'Cooling', and 'Required Result'. The data in the table is as follows:

Ventilation type	Mixing Required Result	Cooling	Required Result
Temperature difference	9.0 K	Supplied thermal power: 0 W	0 W
Sound pressure level	35 dB(A) Heating	Supplied thermal power / area: 0 W	0 W
Total supply air volume	100 l/s	Supplied thermal power: 0 W	0 W
Total exhaust air volume	100 l/s	Supplied thermal power / area: 0 W	0 W

*lindQST project tree*

9. Here you can define a suitable diffuser or chilled beam based on the given room size and technical requirements.

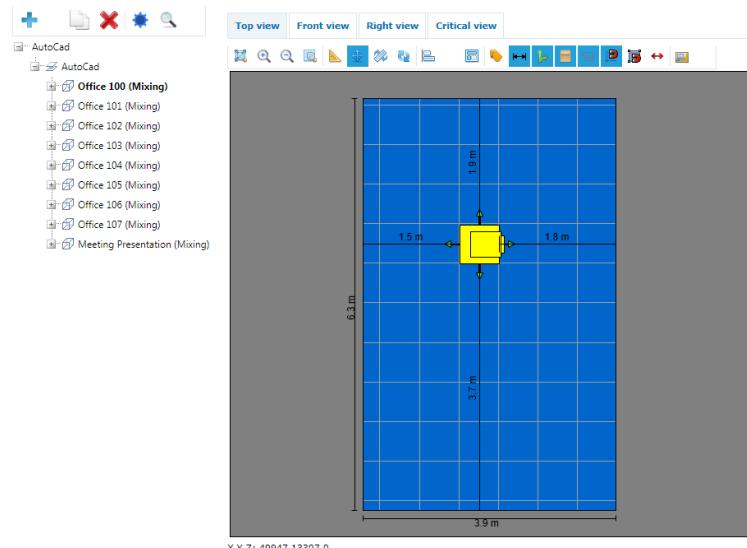

Leakage and Leakage Area Calculation

$\sum_{EN 14239}$
Leakage
Area

Ventilation systems have to be defined and built with low leakage values.

Air leakage can have following negative effects:

The AHU has to deliver X% more air than calculated. That effects

- a worse SFP value
- higher air velocity
- higher pressure lost
- higher energy costs for air conditioning
(heating, cooling, (de-)humidifying, filtering)
- higher soundvalues (+ sound values from leakage points like whistle sound)



- necessary to build bigger system sizes
- higher system producing costs
- higher Life Cycle Costs
- more inefficient real estate

with all resulting problems.

Leakage classes

The leakage classes according to the EN 13779 are defined in 4 classes: A to D, whereby D is the best class. The measurement procedures are defined in EN 12237, EN 1507, EN 1751 and EN 15727

- A - (Class A not mentioned anymore in newest norms)
- B - is the general minimum requirement
- C - in a lot of situations the required minimum class
- D - Lindab Safe = Lindab required leakage class

Definition of the leakage classes

The leakage classes are defined in leakage air flow per m^2 surface area at a specific static system pressure.

Leakage class	Max. leakage per m^2 (f_{max}) $l/(s \cdot m^2)$
A	$0,027 \times p_t^{0,65}$
B	$0,009 \times p_t^{0,65}$
C	$0,003 \times p_t^{0,65}$
D	$0,001 \times p_t^{0,65}$

p_t = test pressure

The leakage area has to be calculated according to EN 14239.

You can find more details about the leakage test process here:


http://itsolution.lindab.com/lindabwebproductsdoc/pdf/documentation/ads/lindab/mounting/manual-ltest-1082_en-de-fr-se.pdf



(If the link below does not work, please go to www.Lindab.com and search for "Manual-
Ltest")

Leakage Area Calculation:

1. Activate the command *leakage area*.

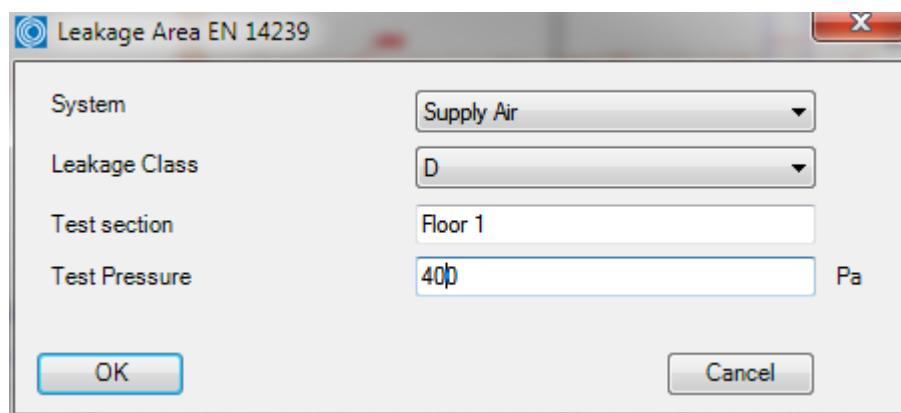


2. Select System in the drop down menu.
3. Select the required Leakage Class in the drop down menu.

Note: The test area needs to be at least 10m² (EN 12237)

4. Define the name for the *Test section* and the value for *Test Pressure*
5. Mark the system that shall be calculated and accept with ENTER

Note: Air Terminals are not part of the calculation and will be listed with a surface area 0m². We recommend to freeze the air terminal layer before selecting the system. This will order the system to create a virtual plug, which will be part of the calculation. (see Leakage Plug)

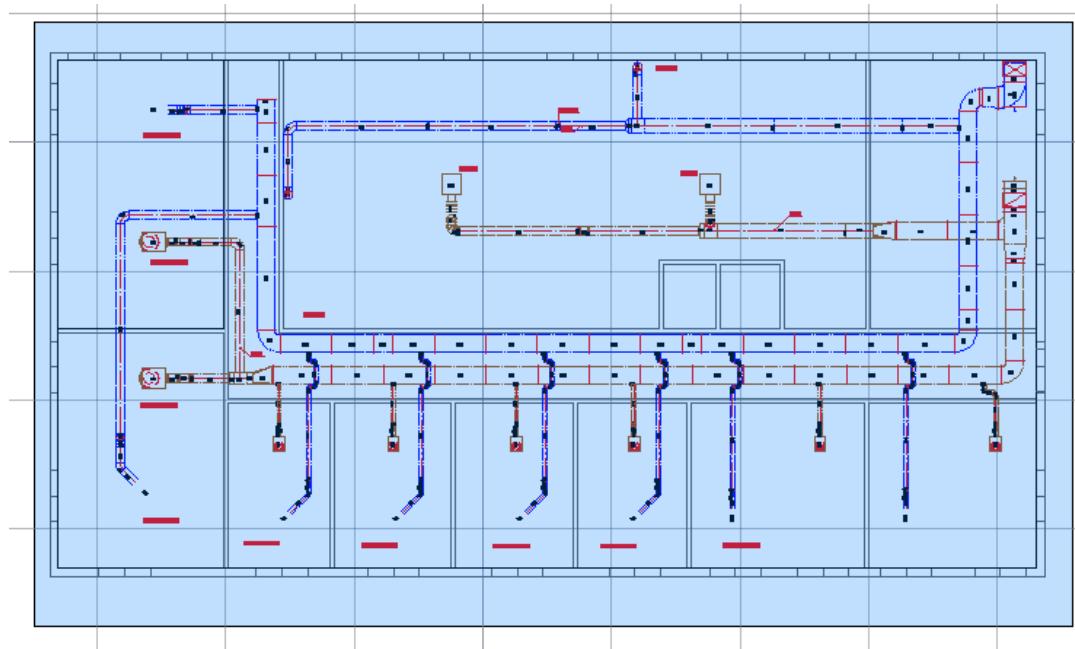

6. A calculation report according to EN 14239 will be generated:

All pages of the report contain a head with all necessary test informations and the calculated Area according to EN 14239, named as "Leakage Area in section" as well as the max. Leakage in the test section totally in l/s and l/s m².



Leakage Area EN 14239

CADvent Plugin 1.6.0 for MagiCAD

System	Supply Air
Test section	Floor 1
Expected Leakage class	D
Test pressure	400 Pa
Max Leakage per m ²	0,049 l/(sm ²)
Leakage Area in section	71,166 m²
Max Leakage in section	3,50 l/s

Produkt	Pos. nr.	Calculation (mm)	Area (m ²)
LBXR-500-300-500-90-100-LS-LS-25-25	321	1600*750	1,200
LBXR-300-500-300-90-100-LS-LS-25-25	320	1600*550	0,880

The content of the product lines is:

Produkt	Pos. nr.	Calculation (mm)	Area (m ²)
BU-100-90	356	314*200	0,063

Product name

Piece Label

Circumference * Length

Area




Leakage plug

Open ends will be closed by a virtual leakage plug. The plug is named with TEST Leakage Plug, which is calculated and included in the list.

TEST Leakage Plug 500x300 150000 0,150


Special Components

Self defined components or components with a different surface then calculated by the CADvent Plug can get a forced Area.

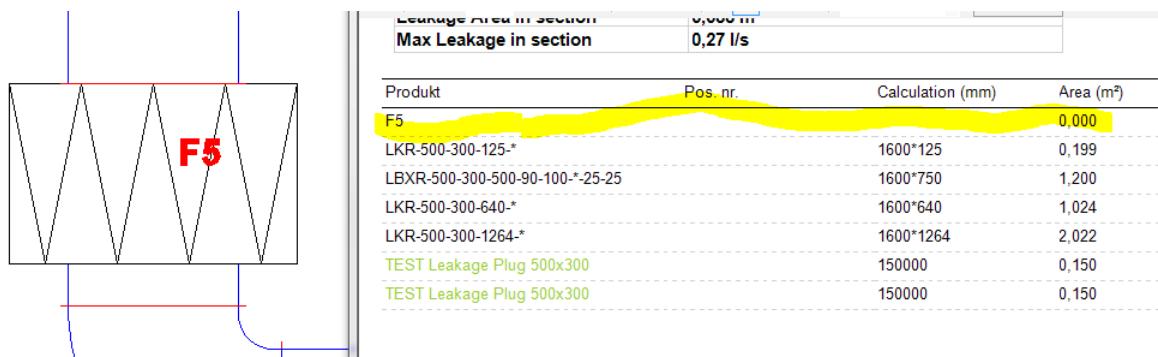

This can be changed by the CADvent property area in the AutoCAD properties dashboard.

1. Mark the product
2. Open the properties dashboard
3. Add the Leakage surface Area in m²

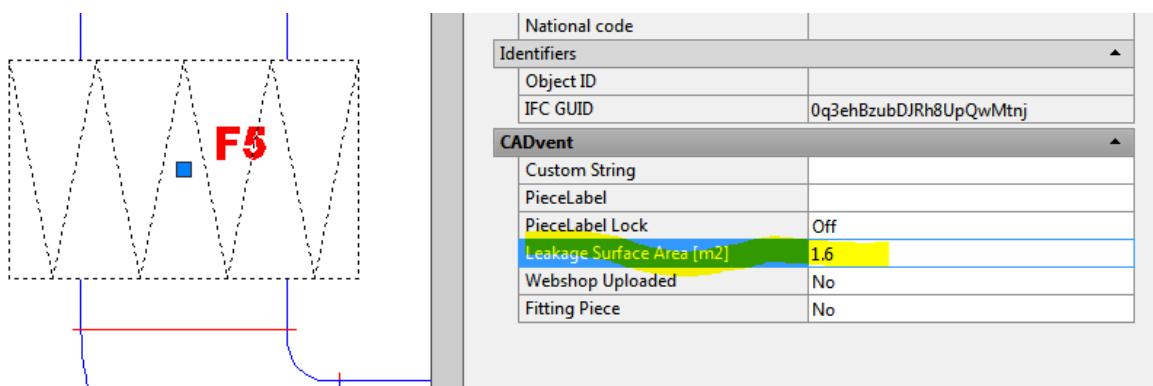

4. The manual changed area is shown in red in the report.



Produkt	Pos. nr.	Calculation (mm)	Area (m ²)
F5			1,600
LKR-500-300-125-*		1600*125	0,199
LBXR-500-300-500-90-100-*25-25		1600*750	1,200

InCapsa Design Tool – Draw a wall panel system.



InCapsa is a cost effective system that makes it easier to mount and cover ventilation systems in buildings. InCapsa is developed to be used in building that were built in the 50's, 60's and 70's in large scale.

InCapsa consists of different parts that is easy to combine to find solutions for most apartments. In a few simple steps the ventilation system is mounted and covered behind panels made of sheet metal.

InCapsa is adapted to rooms with straight walls and corners. In other cases traditional covering of the ventilation system is recommended.

The system is adjusted to function with Lindab's Safe system and Lindab's assortment of air terminal units and valves.


Push the button "Wall Panels"

Following window appears:

Fill in the **System Name**

Each InCapsa installation is called a system. A system has a start and end point, but can contain consoles for different duct sizes.

Select the **Duct Size**. Available sizes are 100, 125 and 160. The suitable consoles will automatically be selected. The duct sizes can be changed during the drawing process.

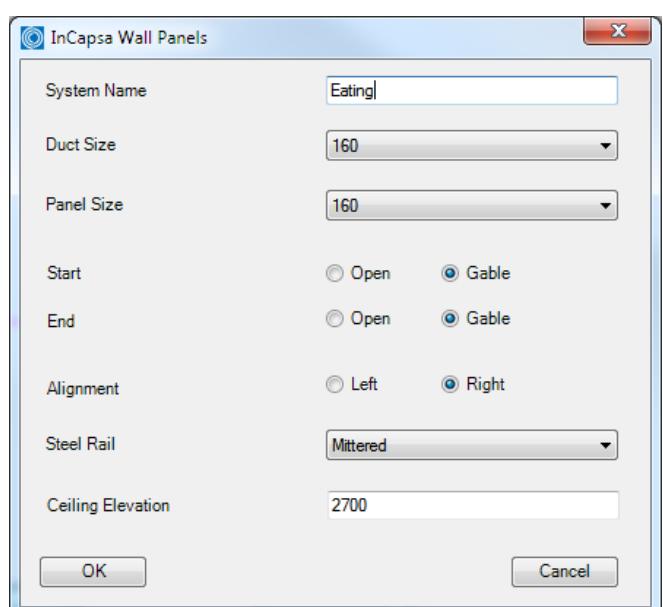



Select the **Panel Size**. The panel size is dependent on the duct sizes


Panel dimension	Duct dimension
100	100
125	100
125	125
160	100
160	125
160	160

Decide if the **Start** and the **End** of the System shall get a **Gable** or stay **Open**

Gable: A gable is used when the start or end of the system shall get a visible closing

Open: The open end is used when the duct leads thru the endpoint e.g. to transfer into the next room.

Alignment defines the drafting direction

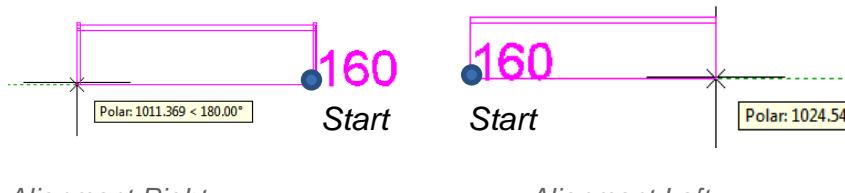

Alignment Right

Alignment Left

Steel Rails

Steel rails which are held in place by consoles have a fold in which the panels are attached. You can define if you like to get the rails mitered or straight.

Ceiling Elevation

Type in the elevation of the room ceiling. The system will be drawn directly below the ceiling. While drawing the z coordinates will be ignored. The system will automatically draw with upper side = ceiling elevation.

Accept the selection with **OK**

Select the start point of the system. We recommend to use the ACAD snap functions. Move the mouse along the walls, the InCapsa System will follow the mouse.

Click with the left mouse button to fix a **change point**.

A change point can be a corner to change direction or a point to change the duct dimension.




Corner

Click with the left mouse button into a corner to define a change point. We recommend to use the ACAD snap functions.

Move the cursor to the next direction. Only 90° angles are possible.

Right Click Menu

During the drafting process, the InCapsa drawing tool offers a right mouse click menu

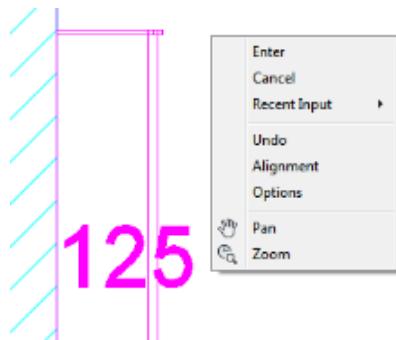


Undo: Undo the drawing until the last change point


Alignment: Change the alignment direction

Options: opens the InCapsa property window to change Duct size (offers only duct sizes, that are available for the selected panel size)


The changing of duct size, will create a size note. The note will be more specified after finishing the system. A symbol marks the click point of the change point. The symbol can be used as a snap point when implementing the duct work.

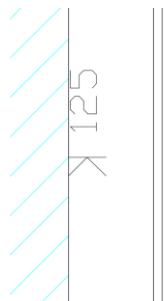


Finish the drafting process with a last change point (left mouse click) and press **Enter**

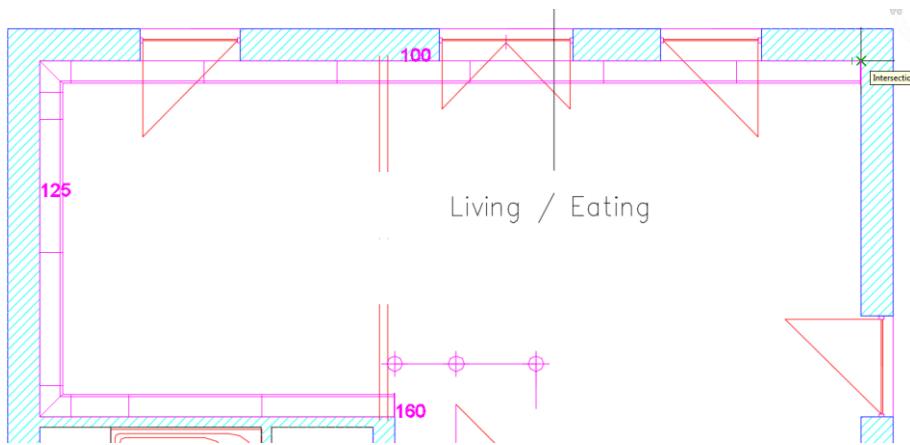

View before finish. The drawing process uses the current Layer.

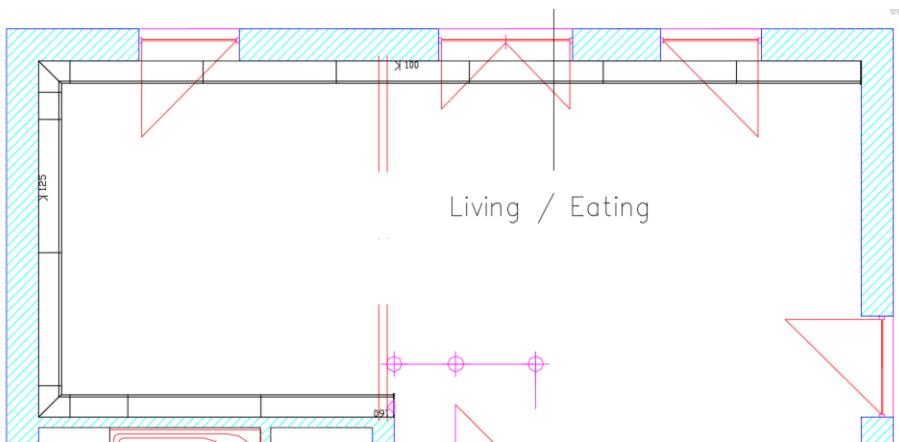

View after finish with Enter. The system gets the CADventInCapsa Layer, dimension changing points get a symbol and marker with new dimension size.

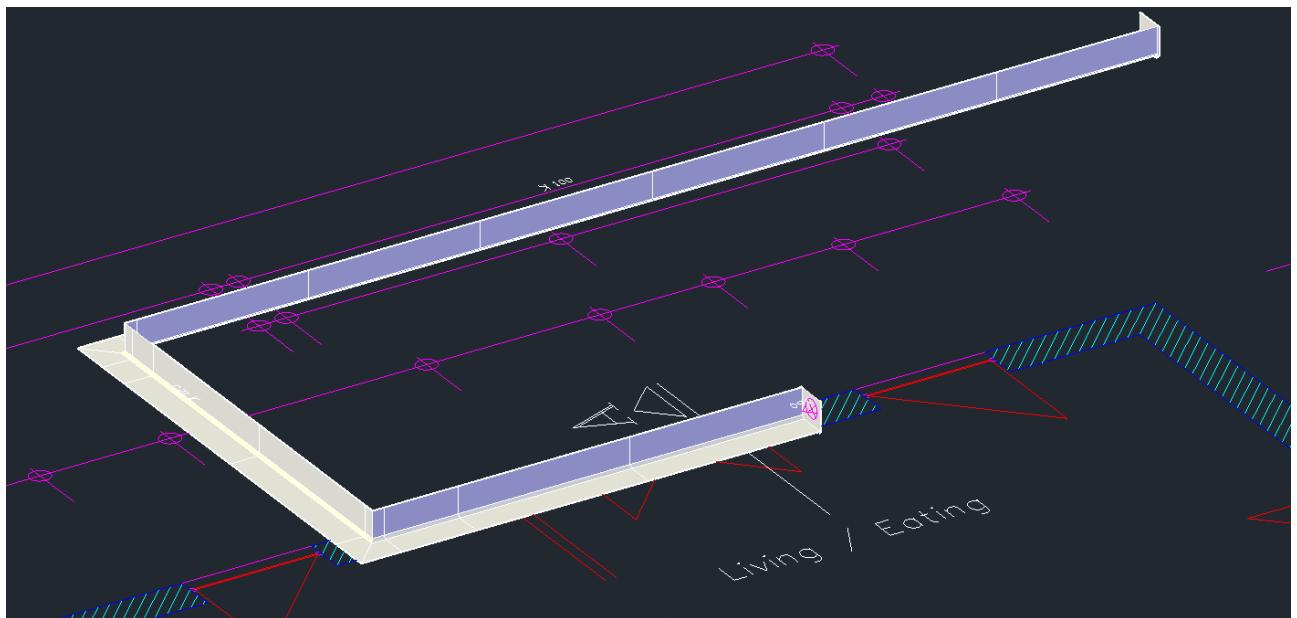

InCapsa Design Tool – Draw a Free Panel system.




A Free Panel is a U-Panel that can be mounted at the ceiling or the wall.

Activate the button **Free Panels**

Following window appears.

Fill in System Name and Ceiling Elevation.

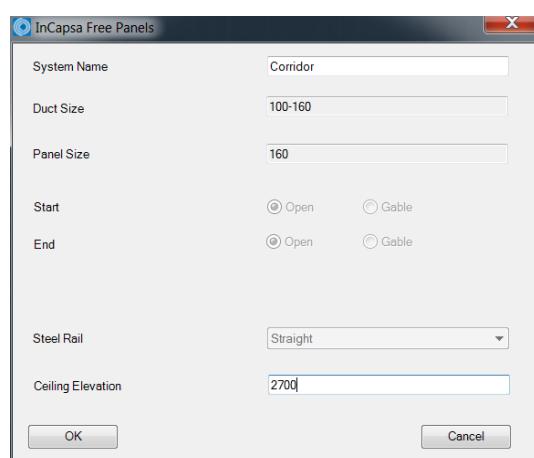

Note:



Only Duct Size and Panel Size 160 is available.
Whereby the consoles are usable for duct sizes 100, 125 and 160.

Press OK

Select start and end point with the left mouse button.




Only straight systems can be drawn - angles are not available!

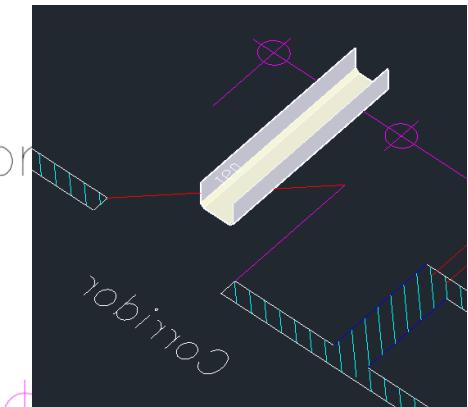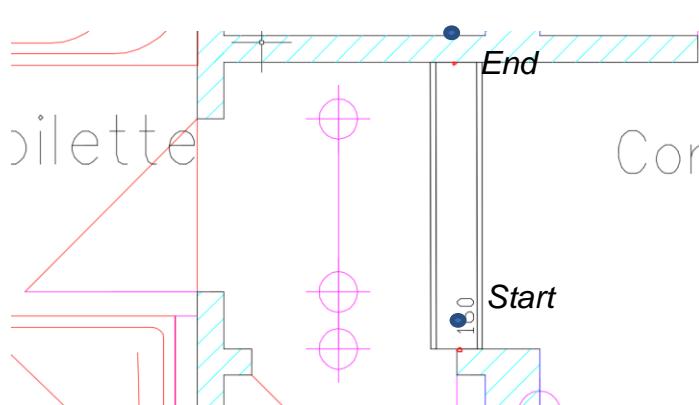

Create Bill of Material for InCapsa Systems



Activate the BOM command.

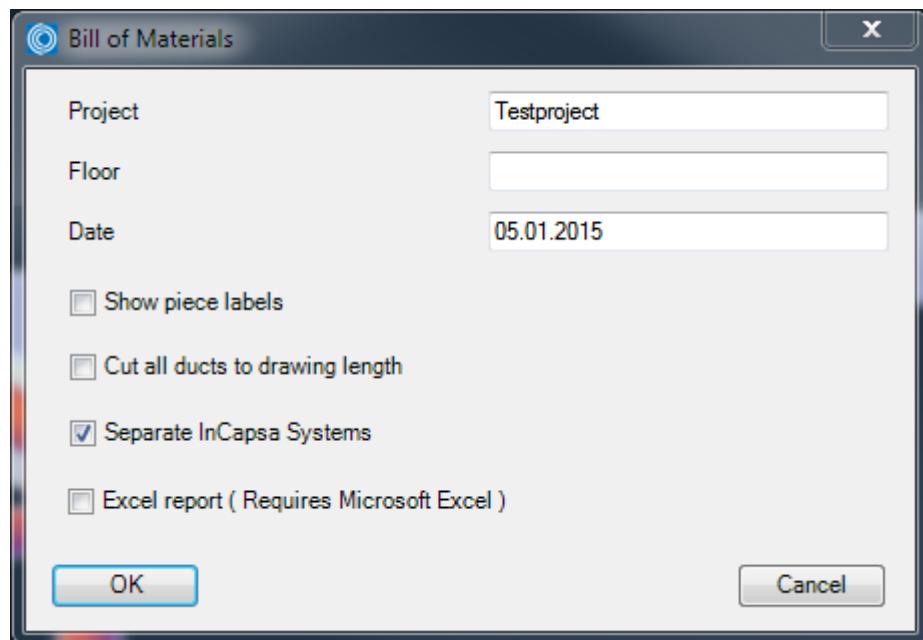

Fill in the information for Project name, Floor and Date (actual date auto selected)

Select your option:




Separate InCapsa Systems: Creates a detail list per system if selected or a summary of all components if not selected.

Excel report: Create the BOM in Microsoft Excel format. This option eliminates the option for the separation of the system

Press OK

Select all InCapsa Systems you like to add to your BOM.

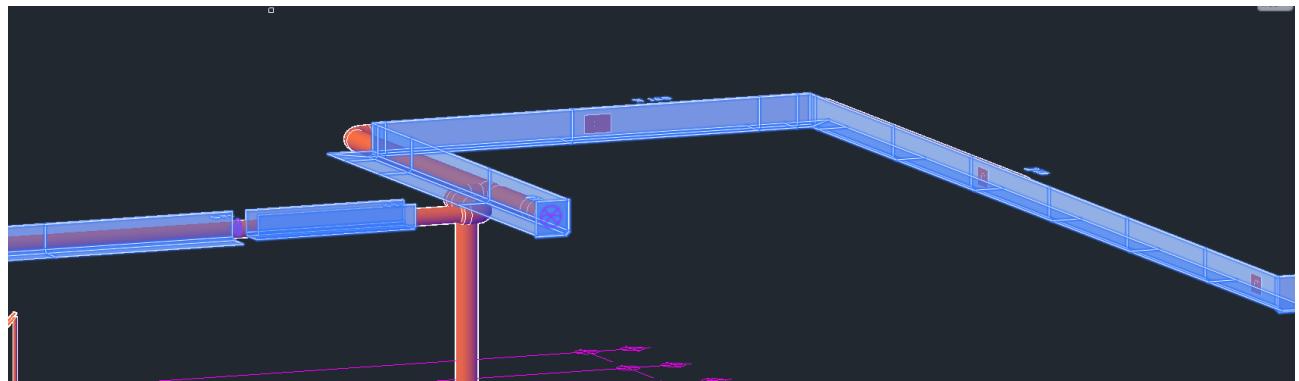

Press Enter



Materialspecification			
Projekt	Testproject		
Del			
Datum	05.01.2015		
Typ / Tillverkare / Material	Produkt	Pos. nr.	Antal
Child			
LINDAB			
	CC 125 125	6	
	CP 125 1500	3	
	CPJI	4	
	CPJO 125	2	
	CSR 1500	6	
	FTK	8	
Living/Eating II			
LINDAB			
	CSR 1500	2	
	CUC	2	
	CUP	1	
Living/Eating			
LINDAB			
	CC 160 100	7	
	CC 160 125	8	
	CC 160 160	9	
	CCI 160	2	
	CG 160	2	
	CP 160 1500	11	
	CPJI	30	
	CPJO 160	15	
	CSR 1500	20	
	CSR1 1500	2	
	CSR2 1500	2	
	FTK	60	
Lindab Sverige AB	Telefon 0431 85000 Telefax 0431 85065 sve@lindab.se	1/1	
Lindab Sverige AB	Telefon 0431 85000 Telefax 0431 85065 sve@lindab.se	1/1	

BOM with activated "Separate InCapsa Systems" and not activated option

A	B	C	D	E	F	G	H	I
Projekt	Testproject	Material	Tillverkare	Typ	Produkt	Antal	Pos. nr.	Comments
Del		LINDAB		CC 125 125		6		
Utfört av		LINDAB		CP 125 1500		3		
Datum	05.01.2015	LINDAB		CPJI		4		
		LINDAB		CPJO 125		2		
		LINDAB		CSR 1500		6		
		LINDAB		FTK		8		
		LINDAB		CSR 1500		2		
		LINDAB		CUC		2		
		LINDAB		CUP		1		
1		LINDAB		CC 160 100		7		
2		LINDAB		CC 160 125		8		
3		LINDAB		CC 160 160		9		
4		LINDAB		CCI 160		2		
5		LINDAB		CG 160		2		
6		LINDAB		CP 160 1500		11		
7		LINDAB		CPJI		30		
8		LINDAB		CPJO 160		15		
9		LINDAB		CSR 1500		20		
0		LINDAB		CSR1 1500		2		
1		LINDAB		CSR2 1500		2		
2		LINDAB		FTK		60		
3								
4								
5								
6								
7								

BOM Excel report for InCapsa




InCapsa Design Tool – Draw the ventilation ductwork with MagiCAD

The ductwork, mounted into an InCapsa system has a specific mounting height, related on the InCapsa mounting consols.

After drawing the incapsa System you can find the “Duct Start center elevation” inside the ACAD Properties.

Select the InCapsa System

Open ACAD properties

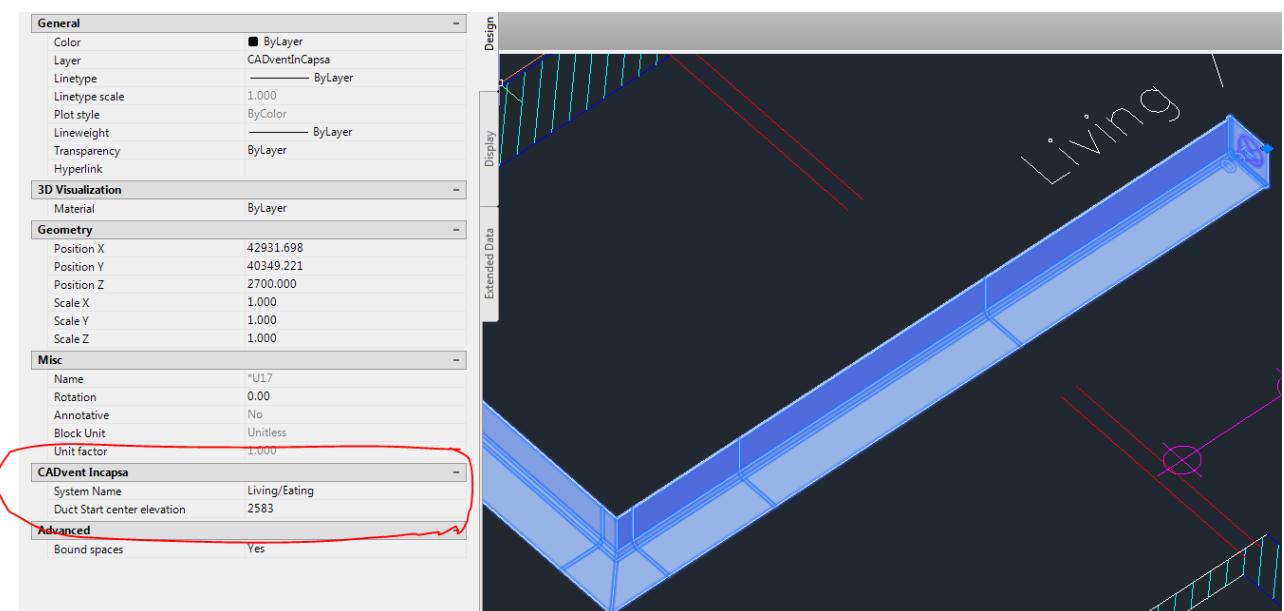


Properties for IncapaSystem

Select the MagiCAD duct command

Select the Lindab Safe Duct series and the needed duct size


Snap the start point of the InCapsa system



The MagiCAD New Part Window appears, type in Duct Start center elevation as Center height:

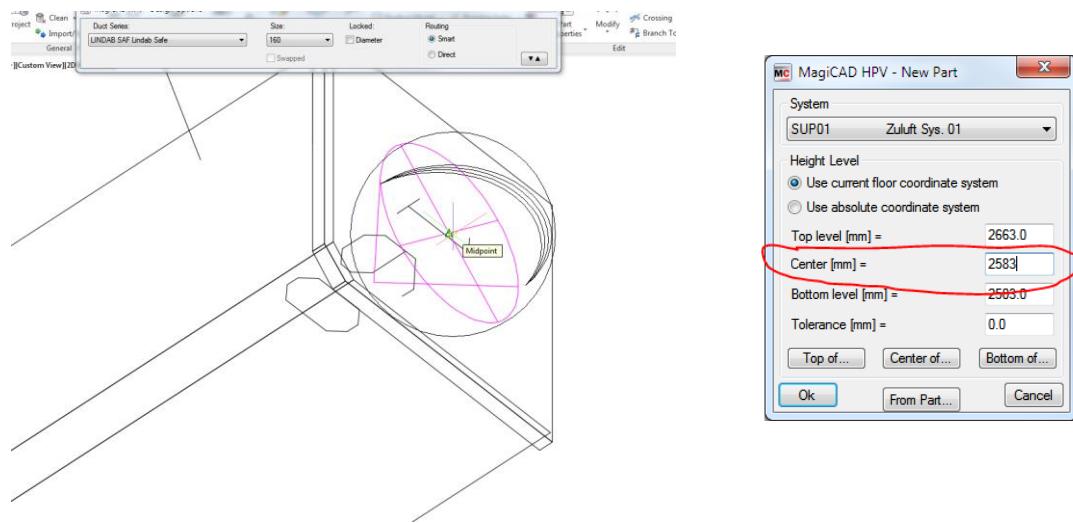

Draw the ductsystem with MagiCAD drawing commands.

Use the InCapsa size notes for the duct size changes

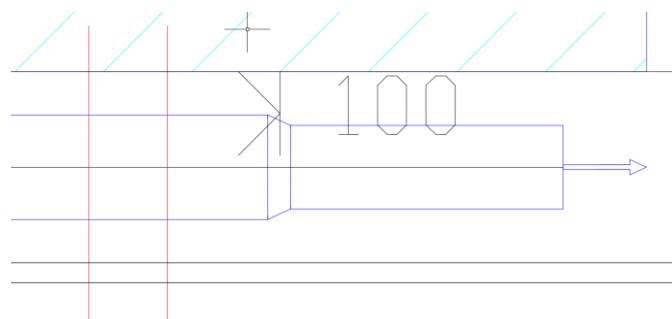

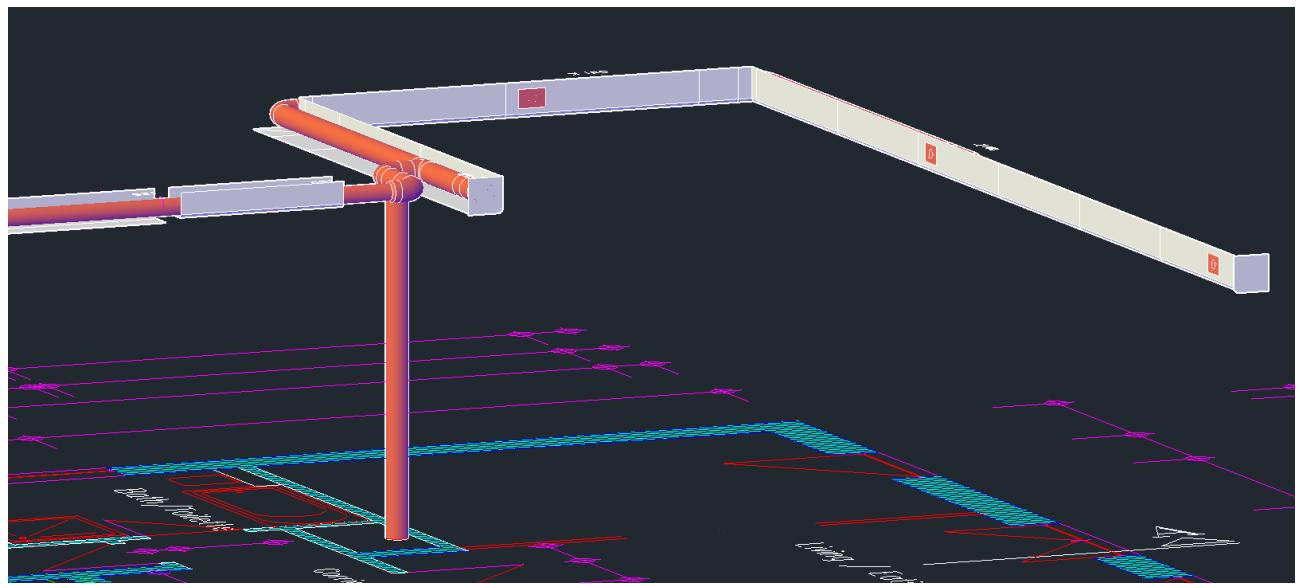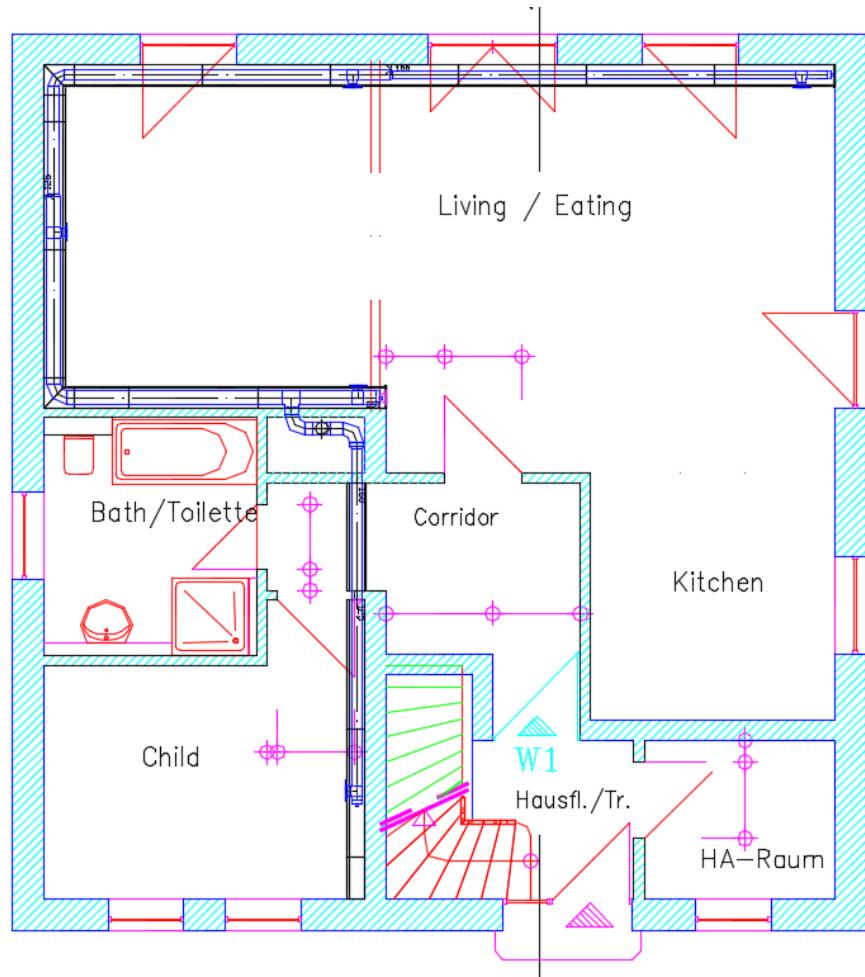




About



In the About button you can find information regarding version number of the CADvent plugin, which market is installed and contact information for technical assistance.

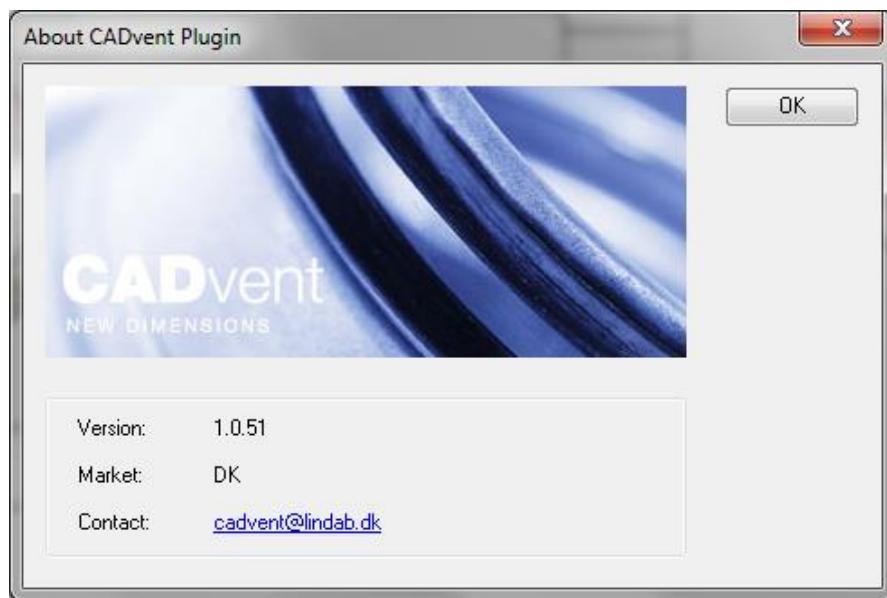

CADvent plugin About dialog